 


殺菌乾衣機

型號 : CD-P35
電壓 : 220-240伏特~, 50/60赫茲
功率 : 500瓦特
運作時間 : 約330分鐘連續乾衣(自動關機)
單次容量 : 3千克

各部名稱

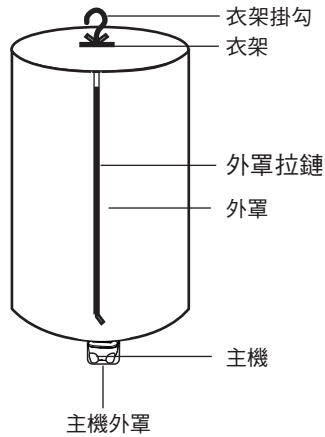

 
 
 
安全注意事項

- 1) 使用本產品前, 請小心閱讀說明書並保留給將來翻閱。
- 2) 使用本產品前, 請確定規格標貼上標示的額定電壓與當地供電電壓相同。如有疑問可向服務中心查詢。
- 3) 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用, 除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
- 4) 本產品只可以用附設的電源線使用。
- 5) 使用前請先拆除所有包裝物料。
- 6) 本產品不可放於潮濕或有積水的地方使用。
- 7) 本產品應放在平穩的地面上使用, 及遠離發熱源頭。
- 8) 本產品不可於室外使用。
- 9) 本產品設計只適合家居使用。
- 10) 乾衣前, 務必先將衣物脫水, 避免出現水珠下滴, 弄濕機身或地面而造成危險, 同時亦可縮短乾衣時間。
- 11) 使用本產品時, 切勿觸摸出風口的金屬部份, 以免燙傷。
- 12) 本乾衣機僅供乾燥用水洗滌的衣物使用。
- 13) 不要堵塞出風口及入風口。
- 14) 乾衣前, 應注意衣物上的標籤, 認清該衣物是否可使用乾衣機及使用溫度限制。
- 15) 使用乾衣機時, 憑保持室內空氣流通, 乾衣機與牆壁最少保持150毫米距離。
- 16) 為了避免洩漏引起安全事故, 請不要將滴水衣物直接放於本產品內進行烘乾。
- 17) 本乾衣機僅供耐溫攝氏75度以上的布料, 每次乾衣總重量不可超出3千克。
- 18) 經常檢查本產品。如發現有任何損壞, 例如電源線損毀, 應立即停止使用, 並交由指定維修服務中心檢查及修理。



安裝步驟

- 1) 將衣架掛勾鎖緊在衣架頂部。
- 2) 將衣夾扣在衣夾掛勾內, 並將衣夾掛勾扣在衣架內。
- 3) 拉開外罩拉鍊, 將衣架放入外罩內。衣架掛勾從頂部中心出風孔內穿入。
- 4) 將主機放入主機外罩底部, 並將插頭穿在主機外罩底部的孔內。
- 5) 把衣物均勻掛於掛衣架上或用衣夾把衣物夾住, 並拉上外罩拉鍊。

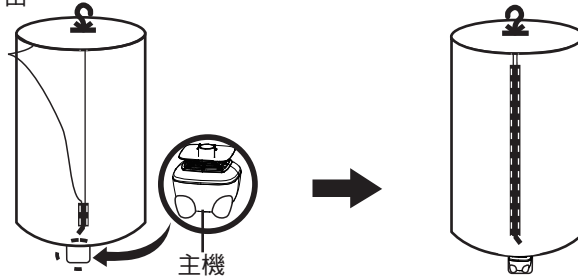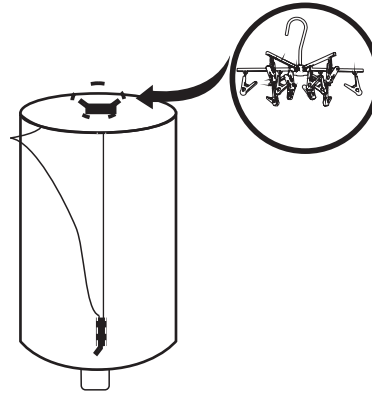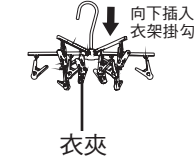

警告:切勿讓電源線纏絆於熱風出口。

使用方式

- 1) 用衣架掛勾將乾衣機掛於安全穩固的位置上。
- 2) 將插頭插入電壓220-240伏特的獨立插座。
- 3) 電源指示燈亮起, 乾衣機開始工作並在330分鐘後自動關閉。
- 4) 要掛上內衣、內褲、襪子或其他個人衣物, 請用衣夾夾住, 然後將衣物掛在衣架下面。
- 5) 乾衣完成後請拔掉插頭。
- 6) 拆除本產品只需要按照安裝步驟相反的步驟進行拆除即可。

清潔保養

- 1) 清潔前必須拔除電源插頭, 切斷電源。
- 2) 清理時切勿將主機體浸於水或其他液體中。
- 3) 可使用濕布加入少許溫和的清潔劑擦淨。

儲存: 連同使用說明書, 把乾衣機存放於清涼及乾爽地方。

保用

本機可獲自購買或領取日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題; 並不包外罩衣架及其他附件, 因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用: 凡於購買產品後10天內完成網上登記, 即可免費延長保用期3個月, 即15個月免費保用(商業用途除外)。請即登入網站: www.origo.hk

注意: 保用時, 須帶同收據及請先致電服務中心。


服務中心

源澤市務有限公司
香港新界葵涌青山公路403號
匯城集團大廈21樓H室(近華星街12號)
電話: 2156 8238

辦公時間

上午10:30 - 下午12:30 (星期一至五)
下午02:30 - 下午05:30 (星期一至五)
上午10:30 - 下午12:30 (星期六)
(星期日及公眾假期休息)

 
源澤地圖

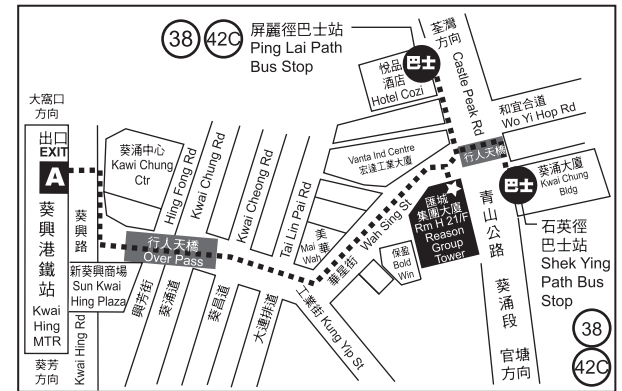

Clothes Dryer

Model : CD-P35
Voltage : 220-240V~, 50/60Hz
Power : 500W
Run Time : Up to 330mins(Auto shut off)
Capacity in one time : 3kgs

 Main Parts

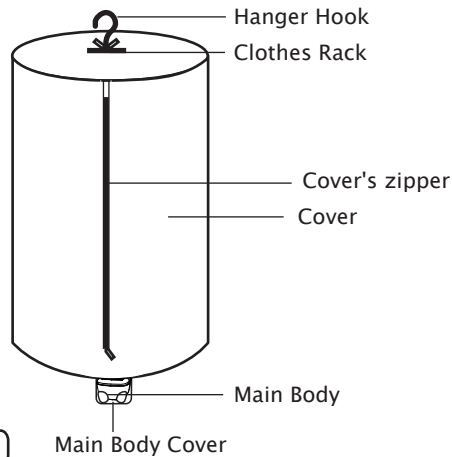


Caution

- 1) Read all instructions carefully before using the Clothes Dryer. Appropriately keep it for future reference when necessary.
- 2) Before using the Dryer, check if the voltage marked on the rating label corresponds to the mains in your home.
- 3) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 4) Only the provided power cord can be used.
- 5) Remove all the package before using the Dryer.
- 6) The Dryer is not intended for use in wet or damp locations.
- 7) Place the Dryer on a stable surface and keep away from heat source.
- 8) Do not use the Dryer in outdoor location.
- 9) The Dryer is designed for domestic use only.
- 10) Ensure spin-drying completely before using the Dryer.
- 11) To avoid being scalded, never touch the metal parts on the wind outlet during drying process.
- 12) This Dryer is intended only for drying textiles washed in water.
- 13) Never cover the wind inlet and outlet.
- 14) Check the clothing care label before drying, Make sure they can be dried using the drying machine, pay special attention to its temperature limits.
- 15) Keep a distance of at least 150mm between Dryer and the wall.
- 16) Please do not put the clothes without dewatered to dry, which will cause leakage and security risks.
- 17) Clothes to be dried should be able to endure 75 degree above, and maximum weight is 3 kgs.
- 18) Always check the Dryer, if the power cord is damaged, it must be replaced and repaired by authorized service agent.




Installation

 
- 1) Lock the hanger hook on the top of the hanger.

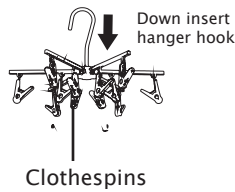

 
- 2) Fasten the clothespins in the clothespin hooks and hang the clothespins in the clothes rack.

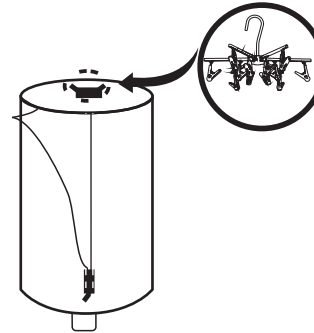

 - 3) Racks placed from the cover in the middle of the zipper, and the hanger hook is let the hole in the top of the wear out hanging on the clothes rod.

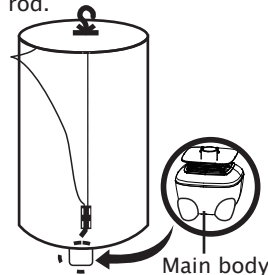

 - 4) Put the main body in the bottom position of the main body cover, and then place the plug in the hole at the bottom of the main body cover.

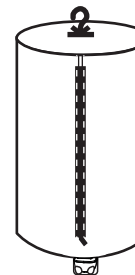

- 5) Hang the wet clothes onto the rack, then close the cover with the zipper.

WARNING: Do not let the power cord closed to the dryer's warm air outlet.

Operation

- 1) Hang the clothes dryer in a safe and secure position with a hanger hook.
- 2) Plug the power cord into a 220-240V~ electrical outlet.
- 3) The power indicator lights on and the clothes dryer starts working and automatically shut down after 330 mins.
- 4) To hang underwear, socks or other personal clothing, please use the clothespins to clamp them and then them under the hanger.
- 5) Unplug the power cord after the clothes are finished.
- 6) To disassemble this clothes dryer, follow the assemble steps in reverse.

Maintenance and Care

- 1) Unplug the power cord before cleaning.
- 2) Do not immerse the Dryer in water, it may cause electric shocks.
- 3) Clean the Dryer with a soft cloth. To remove presistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

STORAGE: Store the Electric Thermal Pot with these instructions in the original box in a cool and dry place.

Warranty

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the clothes rack, cover and other accessories, damage or defect caused by negligence or use not according to this instruction manual.

****Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk*

Remark: For repair service, please contact and bring along the invoice or receipt to the Service Centre.

Service Centre

ORIGIN MARKETING LIMITED
Unit H,21/F, Reason Group Tower
(nearby 12 Wah Sing Street), 403 Castle Peak Road,
Kwai Chung, N.T., Hong Kong.
Tel: 2156 8238

Office Hours

10:30am - 12:30pm (Mon ~ Fri)
02:30pm - 05:30pm (Mon ~ Fri)
10:30am - 12:30pm (Sat)
(Closed on Sunday and Holiday)

Origin Map

