 


# origo 電燒烤爐

為了使您能更瞭解本產品的性能和使用時的安全，請使用前務必詳細閱讀以下說明。

## 一、型號及規格

型號：BC1305  
電壓：交流電 230伏特~，50-60赫茲  
功率：2200瓦特

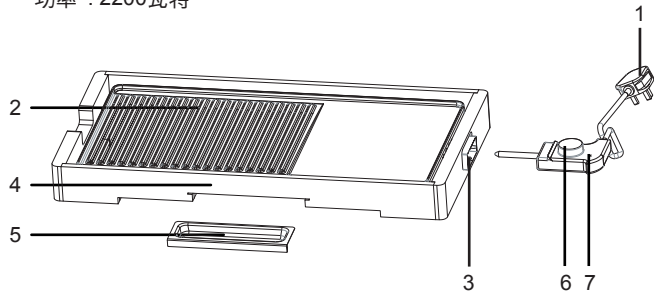

圖片只供參考，一切以實物為準

## 二、產品部件名稱

- 1) 插頭
- 2) 燒烤盤
- 3) 電源接駁口
- 4) 燒烤爐底座
- 5) 盛油盤
- 6) 溫度控制旋鈕
- 7) 電源指示燈

## 三、使用前的準備

- 1) 先拿出所有配件，以濕潤毛巾清潔。將燒烤爐底座放置於平坦位置上。
- 2) 使用前請確保已拆除所有包裝物料。
- 3) 請確定規格標貼上標示的額定電壓與當地供電電壓相同。如有疑问可向服務中心查詢。
- 4) 選擇靠近電源插座的位置，不要放在有水的地方使用。
- 5) 第一次使用燒烤爐，先預熱10分鐘(切勿放上任何食物)。燒烤爐可能會出現少量冒煙及氣味約60秒，因為本產品在生產時發熱線帶有一層保護油，此乃正常現象。

## 四、使用方法

- 1) 從燒烤爐底座下方拉出盛油盤，再將適量的水加到盛油盤內。
- 2) 然後將燒烤盤放在燒烤爐底座上，將插頭接駁到電源接駁口，然後接上電源。
- 2) 將控制旋鈕從"OFF"調到"5"，此時電源指示燈亮起。
- 3) 預熱5分鐘後開始放入食物，根據不同食物或不同口味，調節不同火力(1-5)。在加熱過程中，指示燈會時亮時滅，此乃正常現象。
- 4) 燒烤完畢後，請將旋鈕調回至"OFF"及切斷電源。
- 5) 待燒烤爐完全冷卻後方可清潔或移動機身。

## 五、安全注意事項

### a) 正確使用電源

- 1) 電源線損壞時，不應自行更換。應到指定維修中心更換相同或更高規格的電源線。
- 2) 燒烤爐連接用插座不應使用延長線與標稱小於13A的插座，必須使用與原裝同規格之電線。
- 3) 防止電插座負荷過重或損害保險線，高耗電量之電器不能同時接駁到同一電插座或同一線路。
- 4) 電源線切勿靠近火源、高溫或隱藏在地毯之下，亦不可靠近水源。
- 5) 請勿自行修理或更換已損壞之保險線。請帶同該電器前往核准之維修中心更換保險線。

### b) 正確使用產品

- 1) 切勿於水源或易燃物品附近使用。
- 2) 切勿於高溫表面上或附近使用本產品。
- 3) 使用時確保本品放置於安全、平穩的表面上。
- 4) 請使用交流電230伏特，50/60赫茲的電源。
- 5) 當燒烤爐運作時，切勿觸摸發熱線。
- 6) 在本產品冷卻前，切勿接觸其發熱表面。
- 7) 當本產品於兒童、老人或殘疾者附近使用，必須加倍留神，切勿讓兒童、老人或殘疾者於沒人監察下使用本產品。
- 8) 本產品是家用或在類似環境使用，例如：商店內部、辦事處以及其他類似工作環境的廚房區域；農舍；客戶在旅館、汽車旅館和其他住宅類型的環境。

## 六、清潔保養

- 1) 清潔前應確保燒烤爐處於冷卻狀態。
- 2) 清潔時，應用濕軟的布團擦拭燒烤爐的表面。如有難以擦拭的污垢，可使用日用的洗潔精進行擦拭，但不宜使用鋼絲球類狀物進行磨擦。
- 3) 請不要將插頭、燒烤盤浸入到液體中進行清潔。盛油盤及燒烤爐底座可以直接進行清洗，方便衛生。
- 4) 清潔後放置在乾爽陰涼的地方。

## 七、小貼士

- 1) 燒烤爐使用時，必須放上食物，不可進行乾燒。此舉將嚴重縮短產品使用壽命。
- 2) 首次使用時，會有短暫時間的煙霧冒出，並有輕微異味。此種現象屬正常，請不用擔心。
- 3) 燒烤爐使用時間較長後，表面顏色有所變化，這是正常現象。

## 注意：

- 1) 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
- 2) 本機不能用於附加外置的時計或控制器。

## 八、保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題；並不包括及盛油盤、燒烤爐底座及其他附件，因誤用或不依說明書指示使用而導致的損壞。

\*\*\*額外3個月保用:凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。

請即登入網站: [www.origo.hk](http://www.origo.hk)

注意：保用時，須帶同收據及請先致電服務中心。

## 服務中心

源澤市務有限公司  
香港新界葵涌青山公路403號  
匯城集團大廈21樓H室(近華星街12號)  
電話: 2156 8238

## 辦公時間


上午10:30 - 下午12:30 (星期一至五)  
下午02:30 - 下午05:30 (星期一至五)  
上午10:30 - 下午12:30 (星期六)  
(星期日及公眾假期休息)

[www.origo.hk](http://www.origo.hk)

Find us on


 
## 源澤地圖

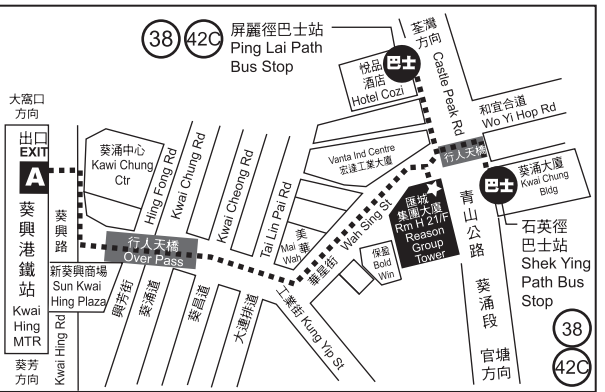


# origo Electric BBQ Grill

Thank you for your purchase of your electric BBQ grill. To use this BBQ properly and safely, please read following instruction carefully.

## 1. MODEL & SPECIFICATION

 Model : BC1305  
Voltage : 230V~50-60Hz  
Power : 2200W

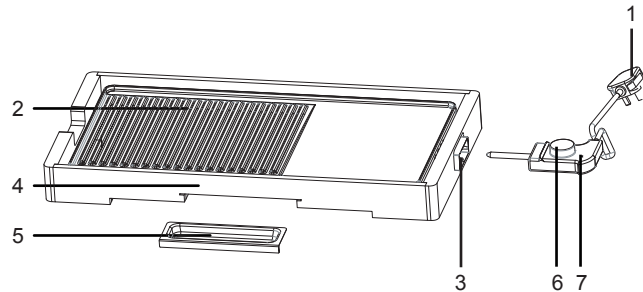

The picture is for reference only, everything in kind shall prevail.

## 2. MAIN PARTS

- 1) Plug
- 2) Grill Plate
- 3) Power Socket
- 4) Grill Base
- 5) Grease Tray
- 6) Thermostat Knob
- 7) Power Indicator

## 3. PREPARTION BEFORE USE

- 1) Take apart the grill, handle of heating element, clean with a soft damp cloth. Place your grill base on the level and stable surface.
- 2) Make sure that all packing materials are removed before use.
- 3) Before using the product, check if the voltage marked on the rating label corresponds to the mains at your home.
- 4) Choose the near part of socket during use. Do not use it near any sources with water.
- 5) Before using for the first time, operate the appliance for 10 minutes without any food. There will have some smoke or smell for about 60 seconds. Because this BBQ set have some protective oil on the surface of the heating element during production.

## 4. OPERATIONS

- 1) Pull out the grease tray from the below of the grill base, fill the grease tray with water.
- 2) Place the grill plate on the grill base, plug the power plug to the power socket, then connect the power supply.
- 3) Turn the switch from "OFF" to "5" position and the indicator light is on.

- 4) After pre-heating the grill for 5 minutes, place the food the grill. According to the different heat of cooking request, adjust the switch from "1" to "5". During heating process, the indicator light will be on or off automatically.
- 5) When finished using the grill, turn the switch to "OFF" position.
- 6) Wait until the appliance is completely cool down before moving or cleaning.

## 5. IMPORTANT SAFEGUARDS

- 1) CORRECT USE OF ELECTRICITY
  - a) To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
  - b) Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
  - c) To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
  - d) DO NOT PUT the cord under the carpet, blankets. Always keep the power cable away from the walk way in room.
  - e) DO NOT TRY TO REPAIR the broken fuse by yourself, the user should take the set to your local authorized maintenance center to replace it with the new one

## 2) SAFETY IN OPERATIONS

- a) DO NOT OPERATE this BBQ set near water sources or flammable liquids.
- b) DO NOT OPERATE this BBQ set on or near any hot surface.(Hot plate, electric stoves etc).
- c) Ensure the BBQ set is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the set.
- d) Always operate this BBQ set from an earthed domestic 230V ~50/60Hz power socket.
- e) Do not touch the heating element when the BBQ set is operating.
- f) Never try to touch the hot surface of this BBQ set before it is cool down.
- g) Extreme caution is necessary when this appliance is used by or near children or invalids and whenever this appliance is left operating unattended.
- h) This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.

## 6. MAINTENANCE & CARE

- 1) Make sure the plug is removed from the power supply socket. After the BBQ set is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.
- 2) PLEASE DO NOT CLEAN the SET WHEN IT IS STILL HOT. DO NOT USE hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose.
- 3) Do not immerse the plug and grill plate in water to clean.
- 4) Put the BBQ set on the cool place right after the cleaning.

## 7. OPERATION TIPS

- 1) Do not allow to turn on this BBQ set if you have not place any food on it.
- 2) For first time operation, there will have some smoke or smell. This situation happens properly. Don't worry about that.
- 3) If this BBQ set is using very long time, the surface of grill will become fade, this situation also happens properly.

## Attentions:

- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible or their safety. Children should be supervised to ensure that they do not play with the appliance.
- 2) Appliances are not intended to be operated by means of an external timer or separate remote-control system.

## 8. WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the grease tray, grill base, and other accessories damage or defect caused by negligence or use not according to this instruction manual.

*\*\*\*Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: [www.origo.hk](http://www.origo.hk)*

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

 
## Service Centre

ORIGIN MARKETING LIMITED  
Unit H,21/F, Reason Group Tower  
(nearby 12 Wah Sing Street), 403 Castle Peak Road,  
Kwai Chung, N.T., Hong Kong

## Office Hours

10:30am - 12:30pm (Mon ~ Fri)  
12:30am - 05:30pm (Mon ~ Fri)  
10:30am - 12:30pm (Sat)  
(Closed on Sunday and Hoilday)

## Origin Map

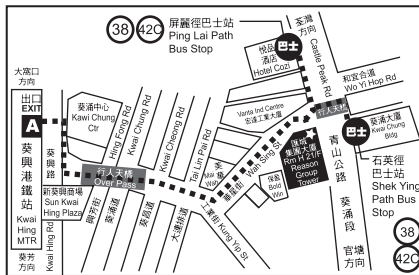

[www.origo.hk](http://www.origo.hk)



Find us on

