

origo USB充電座檯風扇 說明書

型號及規格

1. 名稱：USB充電座檯風扇
2. 型號：CFM96P/CFM96W
3. 電池電壓：3.7V
4. 電池：4000mAh
5. 充電電壓電流：DC5.0V/2000mAh
6. 產品尺寸：約140x170x280mm
7. 產品重量：約650g
8. 配件：Type-C USB 充電線

使用方法及充電/使用時間

充電時間：約4小時。
 使用時間：約1-3小時（跟據不同風速）。
 風扇充電和使用時，LCD屏幕顯示電量百分比，充滿電顯示100%。
 注意：充電時請關閉風扇和搖擺功能。

風速	風扇按鍵	風扇LCD顯示屏
一檔	把開關鍵調至ON並按風扇鍵1次	顯示電量及1檔
二檔	按風扇鍵第2次	顯示電量及2檔
三檔	按風扇鍵第3次	顯示電量及3檔
關閉	按風扇鍵第4次或把開關鍵調至OFF	LCD屏幕熄滅

搖擺	風扇運作時按搖擺鍵	搖擺時顯示箭頭圖示
----	-----------	-----------

*當電量低於10%時，LCD屏幕顯示10%並閃爍直至關機。

**跟據電池壽命，電池使用時間將會持續減少。

***風扇底座為可拆式設計並附有鏡子，能以磁力吸附在風扇面罩上。

產品保養

- 購買產品後請充電2小時以上再使用。
- 每存放三個月充電一次，避免電池損壞。
- 請勿讓0-6歲小孩單獨使用本產品。

保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題；並不包括電池、USB線及其他附件，因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用：凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站：www.origo.hk

注意：保用時，須帶同收據及請先致電服務中心。

總代理
 源澤事務有限公司
 香港新界葵涌青山公路403號
 匯城集團大廈21樓H室(近華星街12號)
 電話:2156 8238
 網站:www.origo.hk
 辦公時間
 上午10:30 - 下午12:30 (星期一至五)
 下午02:30 - 下午05:30 (星期一至五)
 上午10:30 - 下午12:30 (星期六)
 (星期日及公眾假期休息)

www.origo.hk



Find us on



源澤地圖



origo USB Rechargeable Desk Fan User Manual

Model & Specifications

1. Product Name : USB Rechargeable Desk Fan
2. Product Model : CFM96P/CFM96W
3. Battery Voltage : 3.7V
4. Battery Capacity : 4000mAh
5. Input Voltage/Electric Current : DC5.0V/2000mAh
6. Product Size: Approx. 140x170x280mm
7. Product Weight: Approx. 650g
8. Accessories: Type-C USB cable

Directions For Use & Charging/Operation Time

Charging Time: Approx. 4Hours
 Operation Time: Approx. 1-3Hours (Depending on different speeds)
 For charging and using the fan, LCD screen displays the battery percentage.
 Caution: Please switch OFF the fan when it is charging.

Speed	Fan Button	LCD Screen
1st Speed	Switch ON the fan and press fan button 1 time	Battery % and 1st
2nd Speed	Press fan button 2 times	Battery % and 2nd
3rd Speed	Press fan button 3 times	Battery % and 3rd
Switch Off	Press fan button 4 times or switch off the power button	Screen off
Oscillate	Switch ON the fan and press the oscillation button	Display the arrow icon

* When the battery is lower than 10%, the LCD screen displays 10% and flashes until power off.

** According to batteries life, using time will be shortened continuously.

***The bottom part is removable and has a mirror, it can be placed magnetically on the front grille.

Maintenance

- Please charge the fan over 2hours before first using.
- Make a charging when not use the fan for three months to avoid damage of battery.
- Don't allow single use for children under age of 6.

Warranty

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the battery, USB cable and other accessories, damage or defect caused by negligence or use not according to this manual.

***Extra 3 months warranty: just complete Online Warranty

Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk

Remark: For repair service, please contact and bring with invoice or receipt to Service Centre.

Sole Agent
 ORIGIN MARKETING LIMITED
 Unit H 21 /F Reason Group Tower 403 Castle Peak Road
 Kwai Chung N.T. Hong Kong(nearby 12 Wah Sing Street)
 Tel: 21 56 8238
 Website: www.origo.hk
 Office Hours
 10:30am - 12:30pm (Mon ~ Fri)
 02:30pm - 05:30pm (Mon ~ Fri)
 10:30am - 12:30pm (Sat)
 (Closed on Sunday and Holiday)

www.origo.hk



Find us on



Origin Map

