 




健康氣炸烤爐 HEALTHY AIR FRYER OVEN

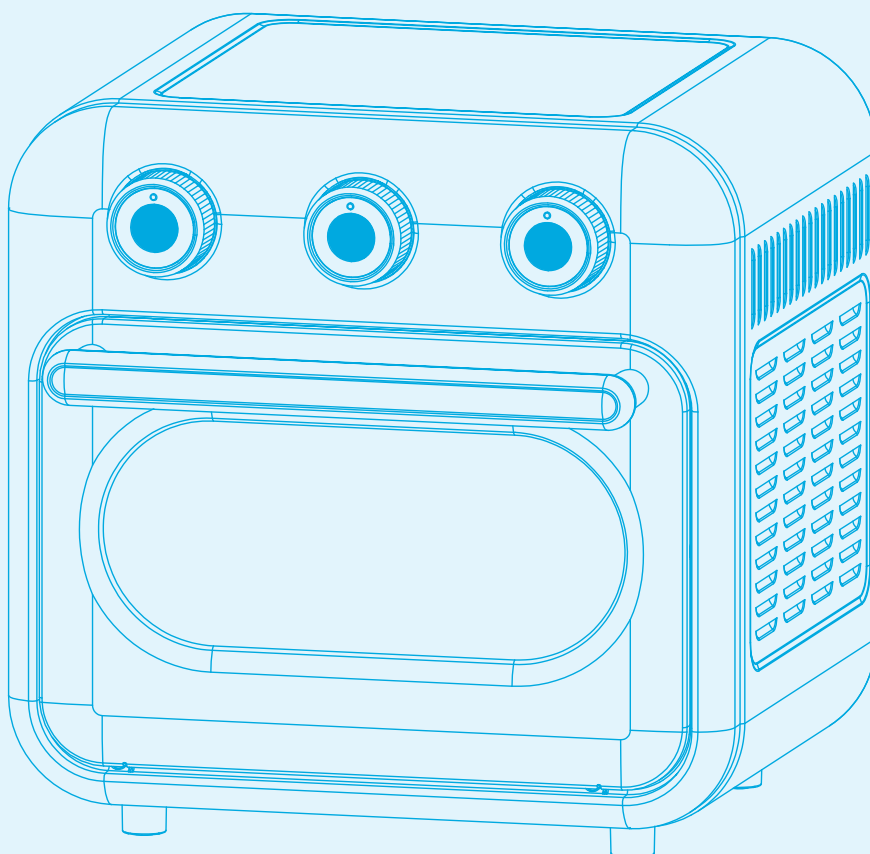

AF7024F

使用說明書

INSTRUCTION MANUAL

- * 使用本產品前，請先細閱使用說明，並請妥善保存以便將來翻閱。
- ** 本說明書可於本公司網站下載 www.origin.hk。
- * Read all instructions carefully before using the appliance, and keep this instruction for future reference when necessary.
- ** This instruction manual can be acquired at www.origin.hk.

- 本機不是為體質、感覺或智力有障礙人士包括小孩或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- 本產品是家用或在類似環境使用，例如：商店內部、辦事處以及其他類似工作環境的廚房區域、農舍、客戶在旅館、汽車旅館和其他住宅類型的環境。

This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farmhouses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.

- 本機不能用於附加外置的時計或控制器。

 
Appliances are not intended to be operated by means of an external timer or separate remote-control system.

- 使用時確保本品放置於安全、平穩的表面上。

Ensure the appliance is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the set.

- 使用本產品前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。

Before using the appliance, check if the voltage marked on the rating label corresponds to the mains at your home.

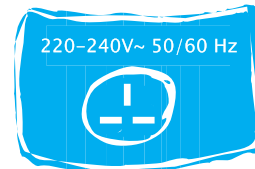

- 防止電插座負荷過重或損害保險線，高耗電量之電器不能同時接駁到同一電插座或同一線路。

To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.

- 使用時，切勿把本產品放置於火爐或發熱的物體附近。

This appliance cannot be used beside the stove and other high temperature objects.

- 不可在潮濕或有積水的環境使用，不可將本機放於浴缸或大型溶器上面。

The appliance is not intended for use in wet or damp locations. Never locate the appliance where it may fall into a bathtub or other water container.

 
- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。

Open the package and ensure that the appliance is undamaged. In case of doubt do not use the appliance and contact your supplier.

- 切勿於水源或易燃物品附近使用。
DO NOT OPERATE this appliance near water sources or flammable liquids.
- 切勿於高溫表面上或附近使用本產品。
DO NOT OPERATE this appliance on or near any hot surface.
- 為防止損害電源線，請勿把電源線掛放在檯邊上或接觸發熱的物體。
Do not hang the power cord on the edge of table or touch the surface with high temperature in order to avoid damage to the power cord.
- 在氣炸過程中，熱蒸汽通過排氣口釋放，請將手和臉與排氣口保持安全距離。從設備上取下配件時，還應注意防止熱蒸汽溢出。
During hot air frying, hot steam is released through the air outlet openings, keep your hands and face at a safe distance from the steam and from the air outlet. Also be careful of hot steam overflow when you remove the accessories from the appliance.
- 在本機運行期間，請勿覆蓋進氣口和排氣口。請勿讓本機空燒超過10分鐘，以免造成故障或火災。
Do not cover the air inlet and air outlet openings while the appliance is operating. Do not let the appliance empty burn for more than 10 minutes.
- 請勿將異物如針、鐵絲等金屬物體黏在電源插頭上，以免造成觸電、短路或火災。
Do not stick foreign objects such as needles, iron wires and other metal objects to the power plug to avoid electric shock, short circuit or fire.
- 所有未開封的密封包裝食品(例如:罐頭)，不可使用本產品直接進行加熱，避免發生危險。
To avoid any danger of explosion, please do not heat the canned goods before remove their cover.
- 請勿將產品放在桌布或窗簾等可燃物料上或附近上使用。使用時不應靠近牆角，其周圍10cm內不應放置其他易燃物品，免溫度過高引起爆裂、變形、變色等。
In order to prevent any accident, do not place the appliance on or near combustible materials such as a tablecloth or curtains. Do not operate this appliance near water sources or flammable liquids within 10cm.
- 請勿在炸籃、網籃、烤網及盛油盤中注油，否則可能引起火災。
Do not fill the frying basket, mesh basket, wire rack and grease tray with oil as this may cause a fire hazard.
- 在操作或清潔設備之前，讓氣炸烤爐冷卻約30分鐘。
Let the Air Fryer Oven cool down for approximately 30 minutes before handle or clean it.
- 使用中的玻璃門表面會產生高溫。
The glass window surface may get hot when the oven operating.
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

各部名稱 Main Parts

健康氣炸烤爐
Healthy Air Fryer Oven

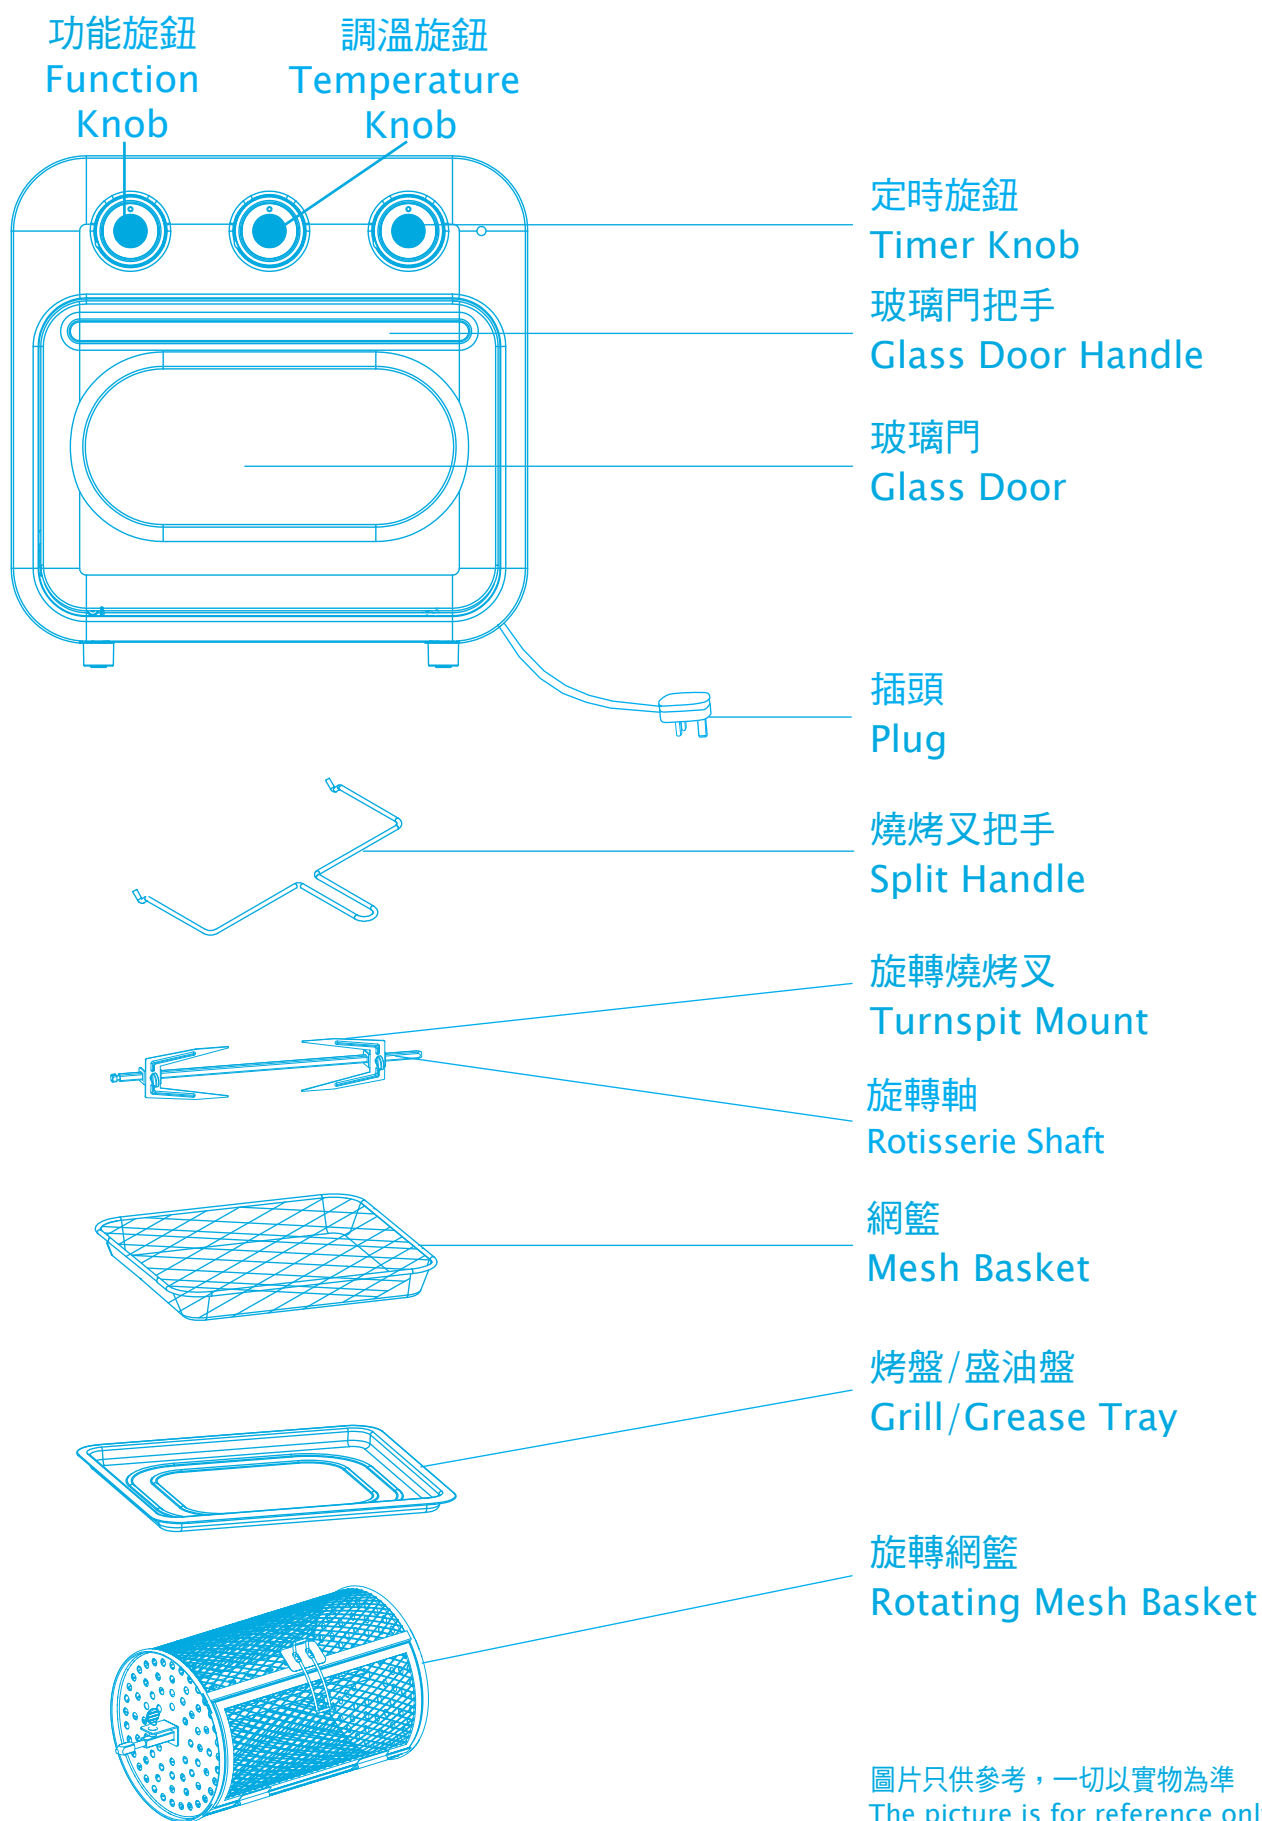

圖片只供參考，一切以實物為準
The picture is for reference only,
everything in kind shall prevail.

使用前的準備:

1. 取出所有包裝物料。
2. 用熱水，一些溫和清潔液和非研磨性海綿徹底清潔轉籃和其他配件。
3. 用濕布擦拭氣炸烤爐的內部和外部。
注意: 這是一種可在熱空氣上工作的氣炸烤爐，請勿在爐中注油或炸油脂。
4. 將氣炸烤爐擺放於穩固的平面上。
5. 打開玻璃門，將盛油盤放在氣炸烤爐內的下方。
6. 將食材放在所需烹飪配件裡，然後將所需烹飪配件正確放入氣炸烤爐內。
7. 將定時旋鈕調至 "OFF"，再將插頭插入交流電壓220-240V ~ 50/60Hz的獨立插座，電源指示燈亮起，氣炸烤爐已可使用。

PREPARATION BEFORE USE:

1. Remove all packaging material.
2. Thoroughly clean the rotating mesh basket and other accessories with hot water, mild cleaner and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a moist cloth.
Notice: This is an Air Fryer Oven that works on hot air. Do not fill the Oven with oil or frying fat.
4. Place the Air Fryer Oven on a stable and flat surface.
5. Place the grease tray at the bottom of the Air Fryer Oven.
6. Put the ingredients in the required cooking accessories, and then put the required cooking accessories into the Air Fryer Oven.
7. Set the "Timer" knob to "OFF" position, then plug the power plug into an 220-240V~ 50/60Hz electrical outlet, power indicator light on, the Air Fryer Oven is ready for use.

注意:

 
- 切勿將氣炸烤爐放在非耐熱表面上。
- 切勿在氣炸烤爐中注油或任何其他液體。
- 切勿在氣炸烤爐頂部放置任何物品，這會擾亂氣流並影響氣炸的結果。
- 切勿在沒有配件的情況下使用氣炸烤爐。
- 本機只可使用附設提供的配件進行煮食。
- 配件只適用於本機使用。

Notice:

- Never place the Air Fryer Oven on non-heat-resistant surfaces.
- Never fill the Oven with oil or any other liquid.
- Never place anything on top of the Air Fryer Oven. This disrupts the airflow and affects the hot air frying result.

- Never use the Air Fryer Oven without the accessories in it.
- This Air Fryer Oven can only use the supplied accessories for cooking.
- The accessories is only suitable for this Air Fryer Oven.

烹調/COOKING

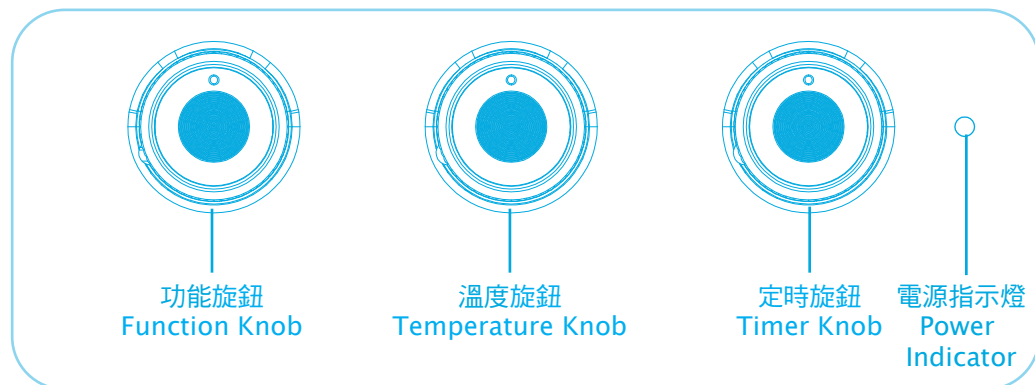


圖片只供參考，一切以實物為準
The picture is for reference only,
everything in kindshall prevail.

1. 旋轉"功能"旋鈕選擇相應的烹調模式(氣炸/烘焙/燒烤/薄餅/乾果)。
 1. Set the "Function" knob to select the corresponding cooking mode (air fry/toaster/grill/pizza/dry fruit).
 2. 將"溫度"旋鈕從"min"設至到所需溫度:80°C-230°C。
 2. Set the "Temperature" knob to the desired temperature setting from 80°C to 230°C.
 3. 旋轉"定時"旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。
*注意: 在加熱過程中，電源指示燈會時亮時滅，此乃正常現象。
 3. Set the "Timer" knob at required cooking time (including 5 minutes preheat time), the power indicator will light on.
*Note: During heating process, the indicator light will be on or off automatically.
 4. 如食物在設定時間前已完成，可自行把"定時"旋鈕回轉至"0"。
 4. If cooking is completed before the end of the timer, please turn the "Timer" knob to position "0" manually.
- 注意: 如果烹調時間少於20分鐘，請將"定時"旋鈕設至40分鐘或以上，然後再設回所需時間。
- Note: If the cooking time is less than 20 minutes, please set the "Timer" knob to 40 minutes or more and then turn it back to the required time.
5. 烹飪完成後，將會發出"叮"聲。
 5. When the cooking is complete, it will have a "Ding" sounds.
 6. 完成後，打開玻璃門，將配件從氣炸烤爐中拉出並將其放在耐熱表面上，小心地將食物從配件中倒到碟上。
 6. After finished, open the glass door, pull the accessories out of the Air Fryer Oven and place it on a heat-resistant surface, carefully pour the food out of the accessories onto plate.

7. 使用後，請確保"定時"旋鈕處於"0"位置並拔除電源插頭。

7. After use, please make sure that the "Timer" knob is at the "0" position and unplug the power plug.

 ● 旋轉式炙烤 / Grilling with the turnspit



1. 這個功能是最適合用於烤雞及其他肉類等食物。

1. This function is ideal for grill chicken and other type of meats.

2. 先用旋轉燒烤叉把食物固定(如欲得到更佳效果，可用廚繩把食物扎緊)。

2. Place the meat on the spit (for the best result, tie the meat by kitchen string).

3. 把盛油盤放到最低位置及把旋轉燒烤叉固定在氣炸烤爐中間位置。

3. Place the grease tray to the bottom and the push the turnspit mount inside the Air Fryer Oven.

4. 旋轉"功能"旋鈕選擇烹調模式(燒烤)。

4. Set the "Function" knob to select the cooking mode (grill).

5. 將"溫度"旋鈕從"min"設至到所需溫度:80°C-230°C。

5. Set the "Temperature" knob to the desired temperature setting from 80°C to 230°C.

6. 旋轉"定時"旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。

6. Set the "Timer" knob at required cooking time (including 5 minutes preheat time), the power indicator will light on.

7. 如食物在設定時間前已完成，可自行把"定時"旋鈕回轉至"0"。

7. If cooking is completed before the end of the timer, please turn the "Timer" knob to position "0" manually.

8. 完成後，打開玻璃門，用燒烤叉把手將旋轉燒烤叉從氣炸烤爐中拉出並將其放在耐熱表面上，小心地將食物從配件中倒到碟上。

8. After finished, open the glass door, use the split handle to pull the turnspit mount out of the Air Fryer Oven and place it on a heat-resistant surface, carefully pour the food out of the accessories onto plate.

● 烤盤 / Grill

1. 這個功能是最適合用於薄餅和曲奇等食物。

 
1. This function is ideal for pizza and cookie, etc.

2. 把烤盤放到最低位置。

2. Place the grill at the bottom of the Air Fryer Oven.


3. 旋轉"功能"旋鈕選擇烹調模式(烘焙/薄餅)。

3. Set the "Function" knob to select the cooking mode (toaster/pizza).




4. 將"溫度"旋鈕從"min"設至到所需溫度:80°C–230°C。
4. Set the "Temperature" knob to the desired temperature setting from 80°C to 230°C.
5. 旋轉"定時"旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。
5. Set the "Timer" knob at required cooking time (including 5 minutes preheat time), the power indicator will light on.
6. 如食物在設定時間前已完成，可自行把"定時"旋鈕回轉至"0"。
6. If cooking is completed before the end of the timer, please turn the "Timer" knob to position "0" manually.
7. 完成後，打開玻璃門，用耐熱手套將烤盤從氣炸烤爐中拉出並將其放在耐熱表面上，小心地將食物從配件中倒到碟上。
7. After finished, open the glass door, use the heat-resistant gloves to pull the grill out of the Air Fryer Oven and place it on a heat-resistant surface, carefully pour the food out of the accessories onto plate.

 ● 網籃 / Air Frying With Mesh Basket

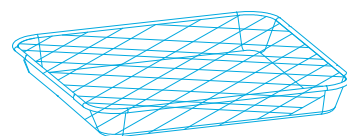

1. 這個功能是最適合用於牛扒和乾果等食物。
1. This function is ideal for steak and dry fruit, etc.
2. 把網籃放進氣炸烤爐的最高位置，再把盛油盤放到最低位置。
2. Insert the mesh basket in the Air Fryer Oven, then place the grease tray at the bottom of the Air Fryer Oven.
3. 旋轉"功能"旋鈕選擇烹調模式(氣炸/乾果)。
3. Set the "Function" knob to select the cooking mode (air fry / dry fruit).
4. 將"溫度"旋鈕從"min"設至到所需溫度:80°C–230°C。
4. Set the "Temperature" knob to the desired temperature setting from 80°C to 230°C.
5. 旋轉"定時"旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。
5. Set the "Timer" knob at required cooking time (including 5 minutes preheat time), the power indicator will light on.
6. 如食物在設定時間前已完成，可自行把"定時"旋鈕回轉至"0"。
6. If cooking is completed before the end of the timer, please turn the "Timer" knob to position "0" manually.
7. 完成後，打開玻璃門，用耐熱手套將網籃從氣炸烤爐中拉出並將其放在耐熱表面上，小心地將食物從配件中倒到碟上。
7. After finished, open the glass door, use the heat-resistant gloves to pull the mesh basket out of the Air Fryer Oven and place it on a heat-resistant surface, carefully pour the food out of the accessories onto plate.

 ● 旋轉網籃 / Air Frying With Rotating Mesh Basket

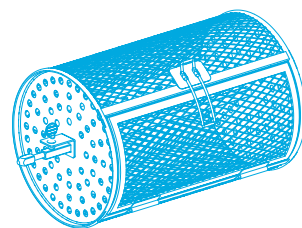

1. 這個功能是最適合用於炸薯條及炸雞塊等食物。
1. This function is ideal for fries and chicken nuggets, etc.
2. 打開旋轉網籃的鎖扣，然後放入食材再將其鎖緊。
2. Open the lock of the rotating mesh basket and put in the ingredients and then lock it tightly.
3. 然後用旋轉軸插入旋轉網籃連接槽把旋轉網籃固定。
3. Insert the rotisserie shaft into the rotating mesh basket's connection slot to fix the rotating mesh basket
4. 把盛油盤放到最低位置，再用燒烤叉把手把旋轉網籃放進氣炸烤爐。
4. Place the grease tray at the bottom of the Air Fryer Oven, then use the split handle to insert the rotating mesh basket in the Air Fryer Oven.
5. 旋轉"功能"旋鈕選擇烹調模式(氣炸)。
5. Set the "Function" knob to select the cooking mode (air fry).
6. 將"溫度旋鈕從"min"設至到所需溫度:80°C-230°C。
6. Set the "Temperature" knob to the desired temperature setting from 80°C to 230°C.
7. 旋轉"定時"旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。
7. Set the "Timer" knob at required cooking time (including 5 minutes preheat time), the power indicator will light on.
8. 如食物在設定時間前已完成，可自行把"定時"旋鈕回轉至"0"。
8. If cooking is completed before the end of the timer, please turn the "Timer" knob to position "0" manually.
9. 完成後，打開玻璃門，用燒烤叉把手將旋轉網籃從氣炸烤爐中拉出並將其放在耐熱表面上，打開旋轉網籃的鎖扣，小心地將食物從配件中倒到碟上。
9. After finished, open the glass door, use the split handle to pull the rotating mesh basket out of the Air Fryer Oven and place it on a heat-resistant surface, open the lock of the rotating mesh basket then carefully pour the food out of the accessories onto plate.

注意：在烹飪過程中，旋轉網籃和其他配件會變得很熱。當將其卸下以檢查進度時，請確保附近有矮腳架或耐熱表面將其放下。
切勿將旋轉網籃直接放在檯面或桌上。

Notice: During the cooking process, the Rotating Mesh Basket and other accessories will become very hot. When you remove it to check on the progress, make sure you have a trivet or a heat resistant surface nearby to set it down on.
NEVER place the Rotating Mesh Basket directly on a counter top or table.

食品類別 Food	功能旋鈕 Function Knob	烹調溫度(°C) Temperature(°C)	烹調時間(分鐘) Timer(Mins)
薯條 French Fries	氣炸/Air Fry	230	18-25
雞翼 Chicken wings	氣炸/Air Fry	230	18-25
豬排 Pork Chop	氣炸/Air Fry	230	30
冷凍雞塊 Forzen Chicken	氣炸/Air Fry	200	18
蛋撻 Egg Tart	烘焙/Toaster	200	12-15
蛋糕 Cake	烘焙/Toaster	180	30
曲奇 Cookie	烘焙/Toaster	160	18
烤雞 Rotisserie Chicken	燒烤/Grill	180	30
乾果 Dehydrated Fruit	乾果/Dry Fruit	80	420
薄餅 Pizza	薄餅/Pizza	200	10-12

烹調時間及溫度需因應食物的重量及個人口味而作出調整，以上附表只供參考。

The cooking time and temperature are base on the quantity of food and cooking request.
The above table is only for your reference.

注意:/CAUTION:

警告: 不使用氣炸烤爐時，經常保持拔除電源，及切勿將氣炸鍋浸於水或其他液體中。在清潔本氣炸烤爐前，先將氣炸烤爐關掉及把電源線從插座拔出，然後讓氣炸烤爐冷卻。

*注意：打開玻璃門並卸下所有配件，使氣炸烤爐冷卻更快。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE AIR FRYER OVEN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET AND LET THE AIR FRYER COOL DOWN.

* Note: Open the Glass Door and remove all accessories to let the Air Fryer Oven cool down more quickly.

外殼: 清理時切勿將氣炸烤爐浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

Housing: Clean the outside and grille of the Air Fryer Oven with a soft cloth. To remove presistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

1. 每次使用後都要清潔氣炸烤爐。

1. Clean the appliance after every use.

2. 切勿使用研磨性、腐蝕性或易燃性清潔劑(例如漂白劑或酒精)清潔氣炸烤爐的任何部位。

2. Do NOT use abrasive, corrosive or flammable cleansers (such as bleach or alcohol) to clean any part of the Air Fryer Oven.

3. 盛油盤具有不粘塗層。請勿使用金屬廚房用具或研磨性清潔材料來清潔盛油盤，因為這可能會損壞不粘塗層。

3. The grease tray of the Air Fryer Oven have a non-stick coating. Do not use metal kitchen utensils or abrasive cleaning materials to clean the grease tray, as this may damage the non-stick coating.

4. 用濕布擦拭設備的外部。

4. Wipe the outside of the appliance with a moist cloth.

5. 用熱水，一些洗滌液和非研磨性海綿清潔所有配件。

5. Clean all accessories with hot water, mild cleaner and a non-abrasive sponge.

6. 用熱水和非研磨性海綿清潔設備內部。

6. Clean the inside of the appliance with hot water and a non-abrasive sponge.

7. 用清潔刷清潔加熱元件，以清除食物殘留物。

7. Clean the heating element with a cleaning brush to remove any food residues.

提示: 如果污垢粘在盛油盤底上，請在盛油盤中注入一些清洗液。讓盛油盤浸泡約10分鐘。


Tip: If dirt is stick to the grease tray, fill the grease tray with hot water and mild cleaner. Let the grease tray soak for approximately 10 minutes.

儲存: 連同使用說明，把氣炸烤爐存放於清涼及乾爽的地方。

STORAGE: Store the Air Fryer Oven with these instructions in the original box in a cool and dry place.

型號 Model Number	AF7024F
電源 Power Supply	220-240V~ 50/60Hz
額定功率 Rated Power	1200-1400W
產品尺寸 Product Dimension	330 x 310 x 360 mm (約/Approx.)

 源澤地圖 Origin Map

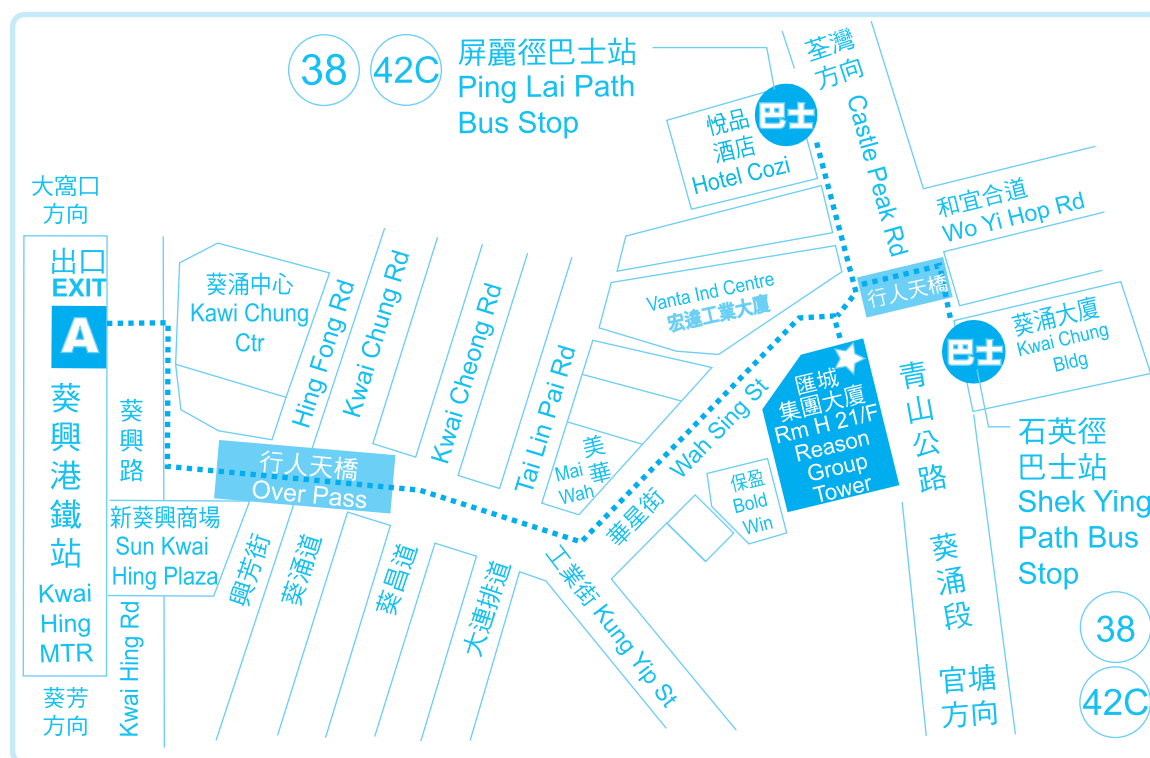

辦公時間

10:30am – 12:30pm (星期一至五)
02:30pm – 05:30pm (星期一至五)
10:30am – 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am – 12:30pm (Mon to Fri)
02:30pm – 05:30pm (Mon to Fri)
10:30am – 12:30pm (Saturday)
(Closed on Sunday and Holiday)

產品保用証(一年自攜服務)

健康氣炸烤爐
Healthy Air Fryer Oven



產品： 健康氣炸烤爐

型號： AF7024F

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用享為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經授權之自行處理、維修及/或改裝；
- 任何機殼、面蓋、燒烤叉把手、旋轉燒烤叉、旋轉網籃、網籃、盛油盤，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何損壞零件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

*** 額外3個月保用：凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站: www.origo.hk

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

電話: 2156 8238

www.origo.hk

www.origo.hk



Find us on



Warranty Card(1 year carry-in)

Item : Air Fryer Oven

Model : AF7024F

This product is warranted for 1year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product has been damaged through abuse, misuse, negligence or accidents;
- Unauthorized repair, alteration/modification;
- The housing, cover, split handle, turnspit mount, rotating mesh basket, mesh basket, grease tray, or accessories, is excluded from this warranty.

3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.

4. Any defective parts, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Please show the Invoice to get free service.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk

Service Centre

 
ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

www.origo.hk

www.origo.hk

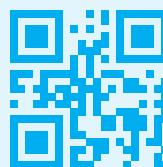

Find us on

