 
 





14" 立體龍捲座地扇 14" 3D Twister Stand Fan

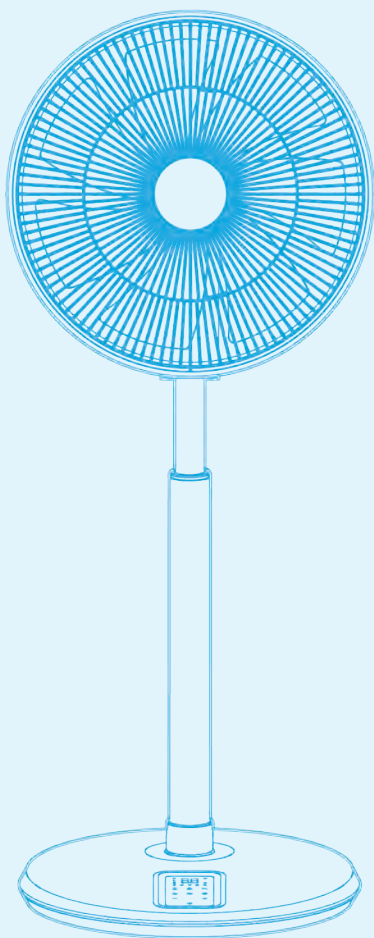

SF1620

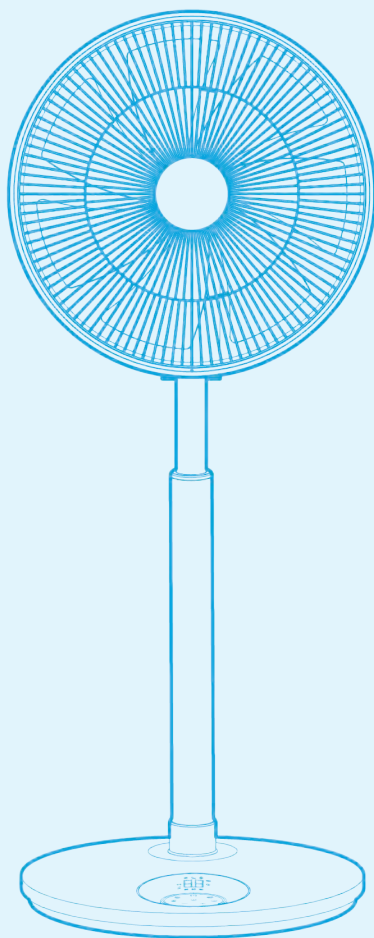

 SF1621

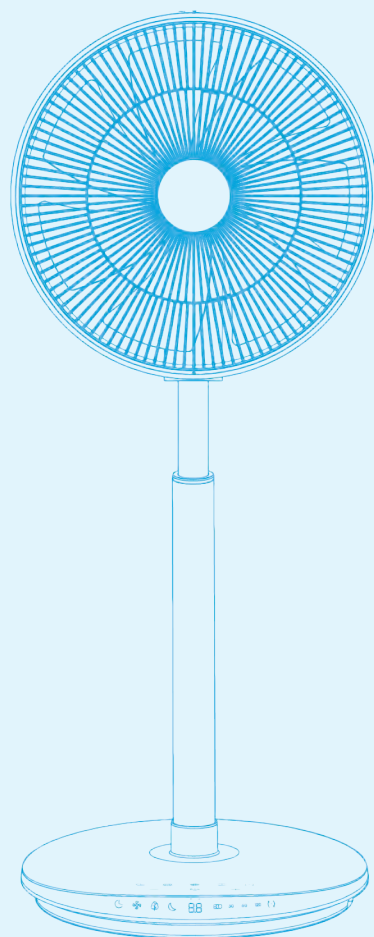

SF1622

使用說明書

INSTRUCTION MANUAL

- * 使用風扇前，請先細閱使用說明，並請妥善保存以便將來翻閱。
- ** 本說明書可於本公司網站下載 www.origo.hk。
- * Read all instructions carefully before using the FAN, and keep this instruction for future reference when necessary.
- ** This instruction manual can be acquired at www.origo.hk.

 
重要安全提示

Important Safety Information


14" 立體龍捲座地扇
14" 3D TWISTER STAND FAN

origo

- 使用本風扇前，請先細閱使用說明。
Read all instructions carefully before using the Fan.
- 必須按照使用說明指示操作本風扇，否則可能引致產品損壞、短路、火警或人命損傷。
Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- 打開包裝，檢查風扇。如發現產品有損壞，請勿使用及即時聯絡供應商。
Open the package and ensure that the Fan is undamaged. In case of doubt, do not use the FAN and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。
Do not let children play parts of package.
- 使用風扇前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。
Before using the Fan, check if the voltage marked on the rating label corresponds to the mains at your home.

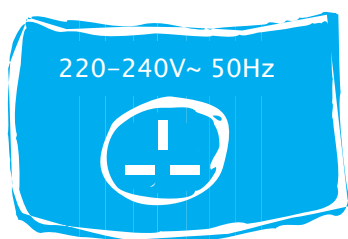

- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。
Avoid using extension cord as it may overheat and cause fire.

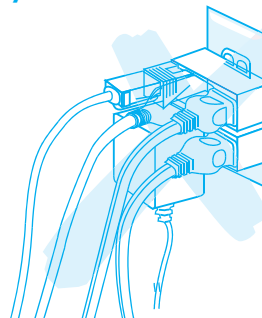 


- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。
Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.
- 本風扇不適用於室外及作工業用途。
This Fan is intended for household use ONLY and not for industrial or outdoor use.

- 切勿將任何異物放入風扇內；或阻擋風扇出風口及入風口，皆因以上一切行為均可能導致風扇損壞。
Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.
- 非使用風扇時請拔除插頭，切斷電源。
Do not leave the Fan unattended. Always unplug the Fan when not in use.
- 警告：開/關鍵不應作為切斷電源的用途。
WARNING: The On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- 如需移動風扇，請先拔除插頭切斷電源。
Always disconnected the Fan from the power supply when moving it from one location to another.
- 不可在潮濕或有積水的環境使用，不可將風扇擺放於浴缸或大型容器上面。
The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.
- 切勿將風扇擺放在發熱源頭或火源附近。
Do not place the Fan near a source of heat or fire.
- 警告：清理前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。
WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 移除網罩前，必須確保風扇已拔掉電源。
Ensure that the Fan is switched off from the supply mains before removing the guard.
- 請保持清潔以維持風扇處於良好狀態(詳細請參閱清理及維護部份)。
Keep the Fan clean to maintain in good condition (refer to maintenance section).
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

各部名稱 Main Parts

 14" 立體龍捲座地扇
14" 3D TWISTER STAND FAN

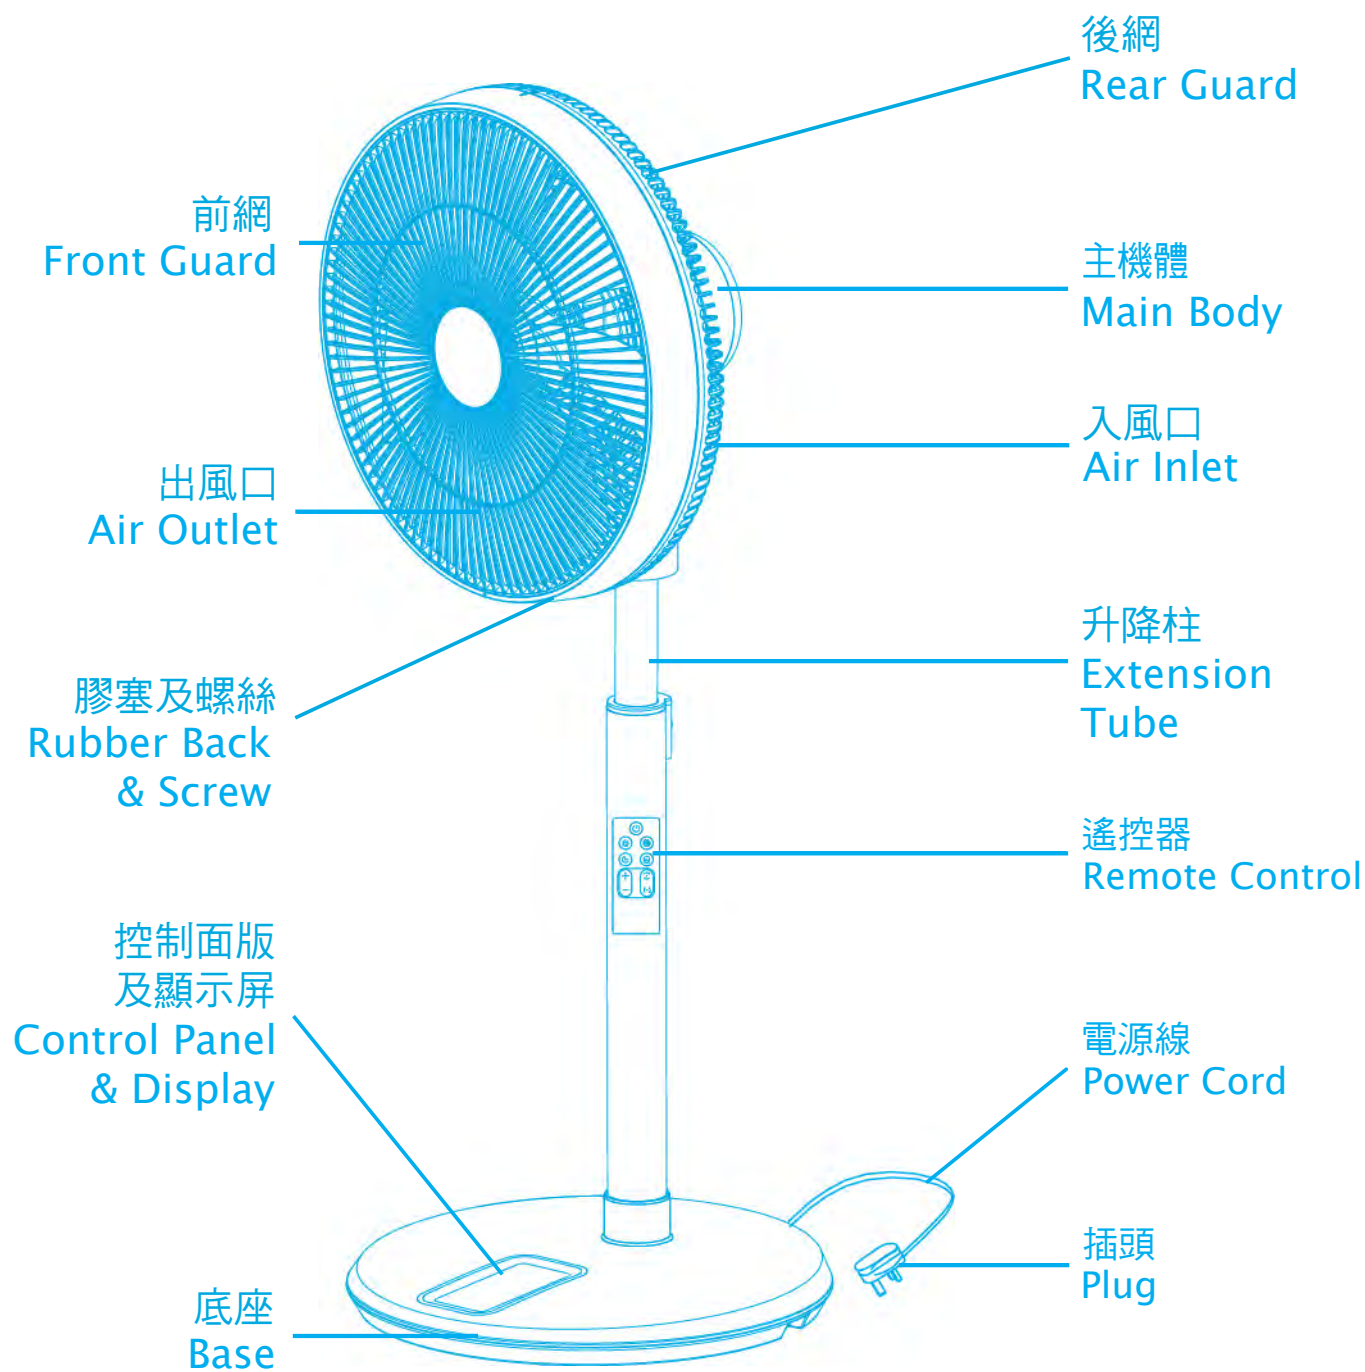


SF1620

圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.


各部名稱 Main Parts

 14" 立體龍捲座地扇
14" 3D TWISTER STAND FAN

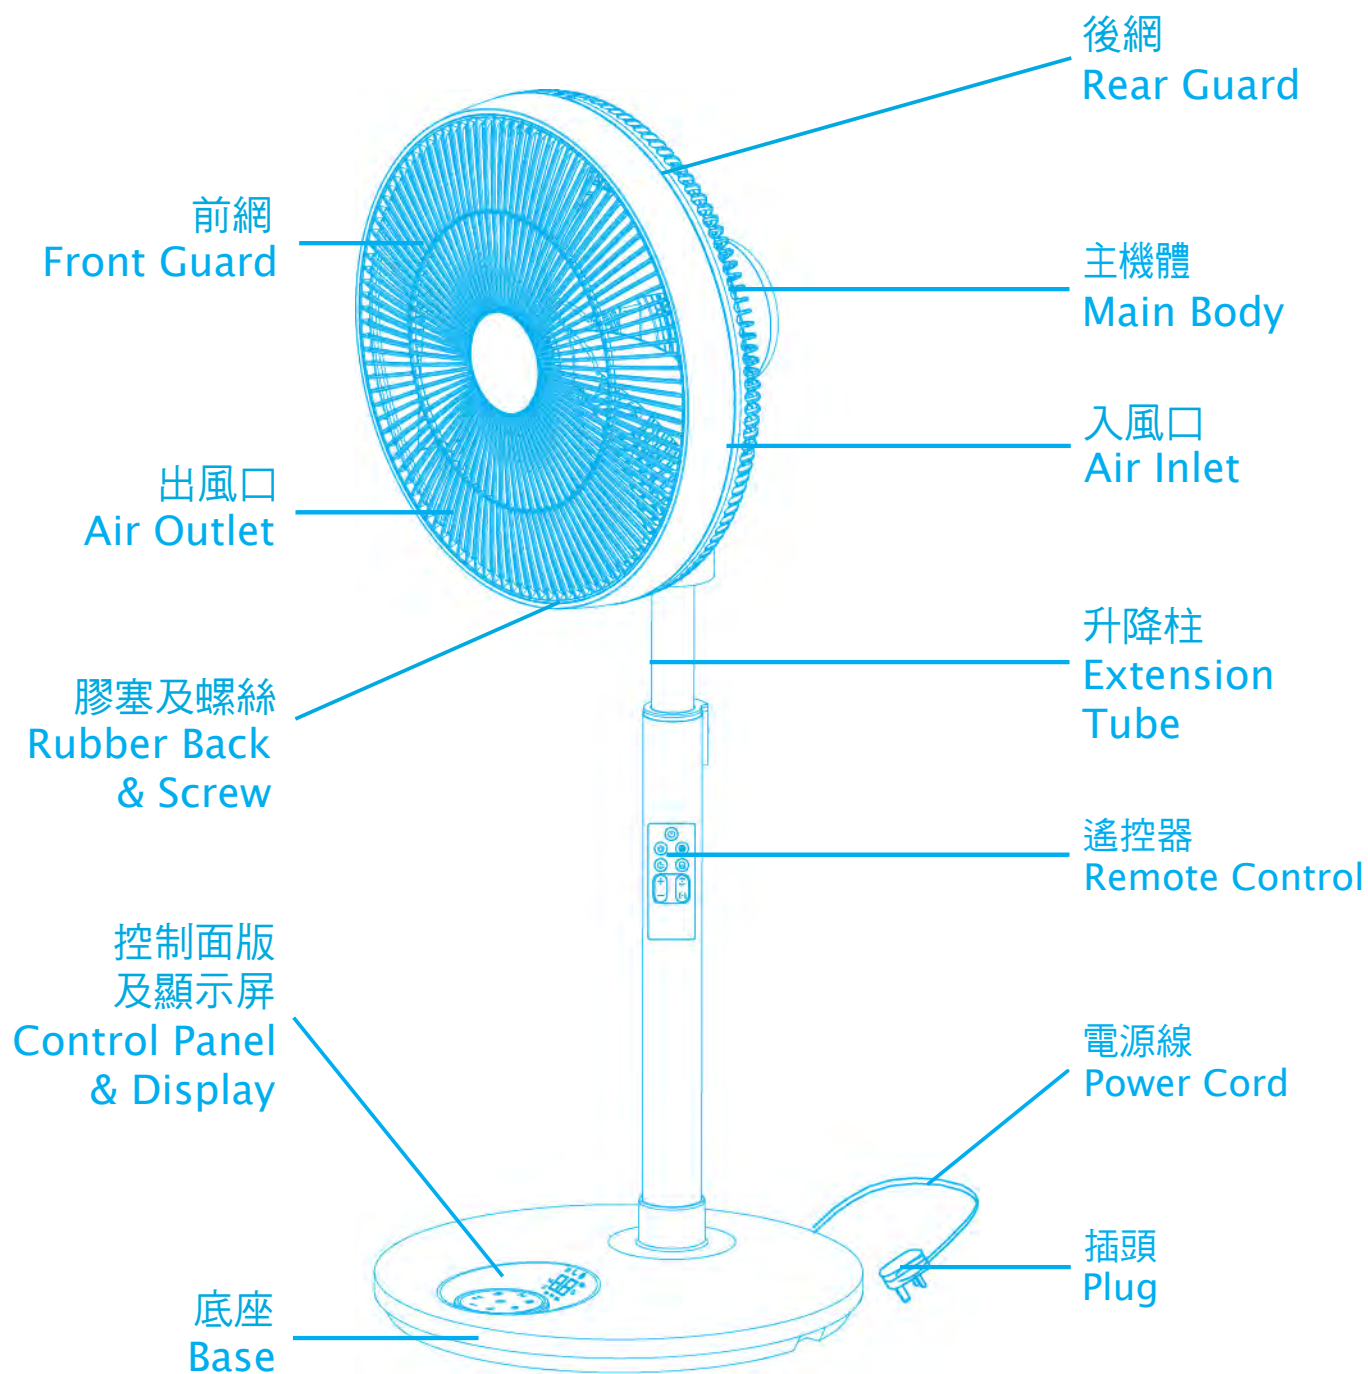


SF1621

 圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

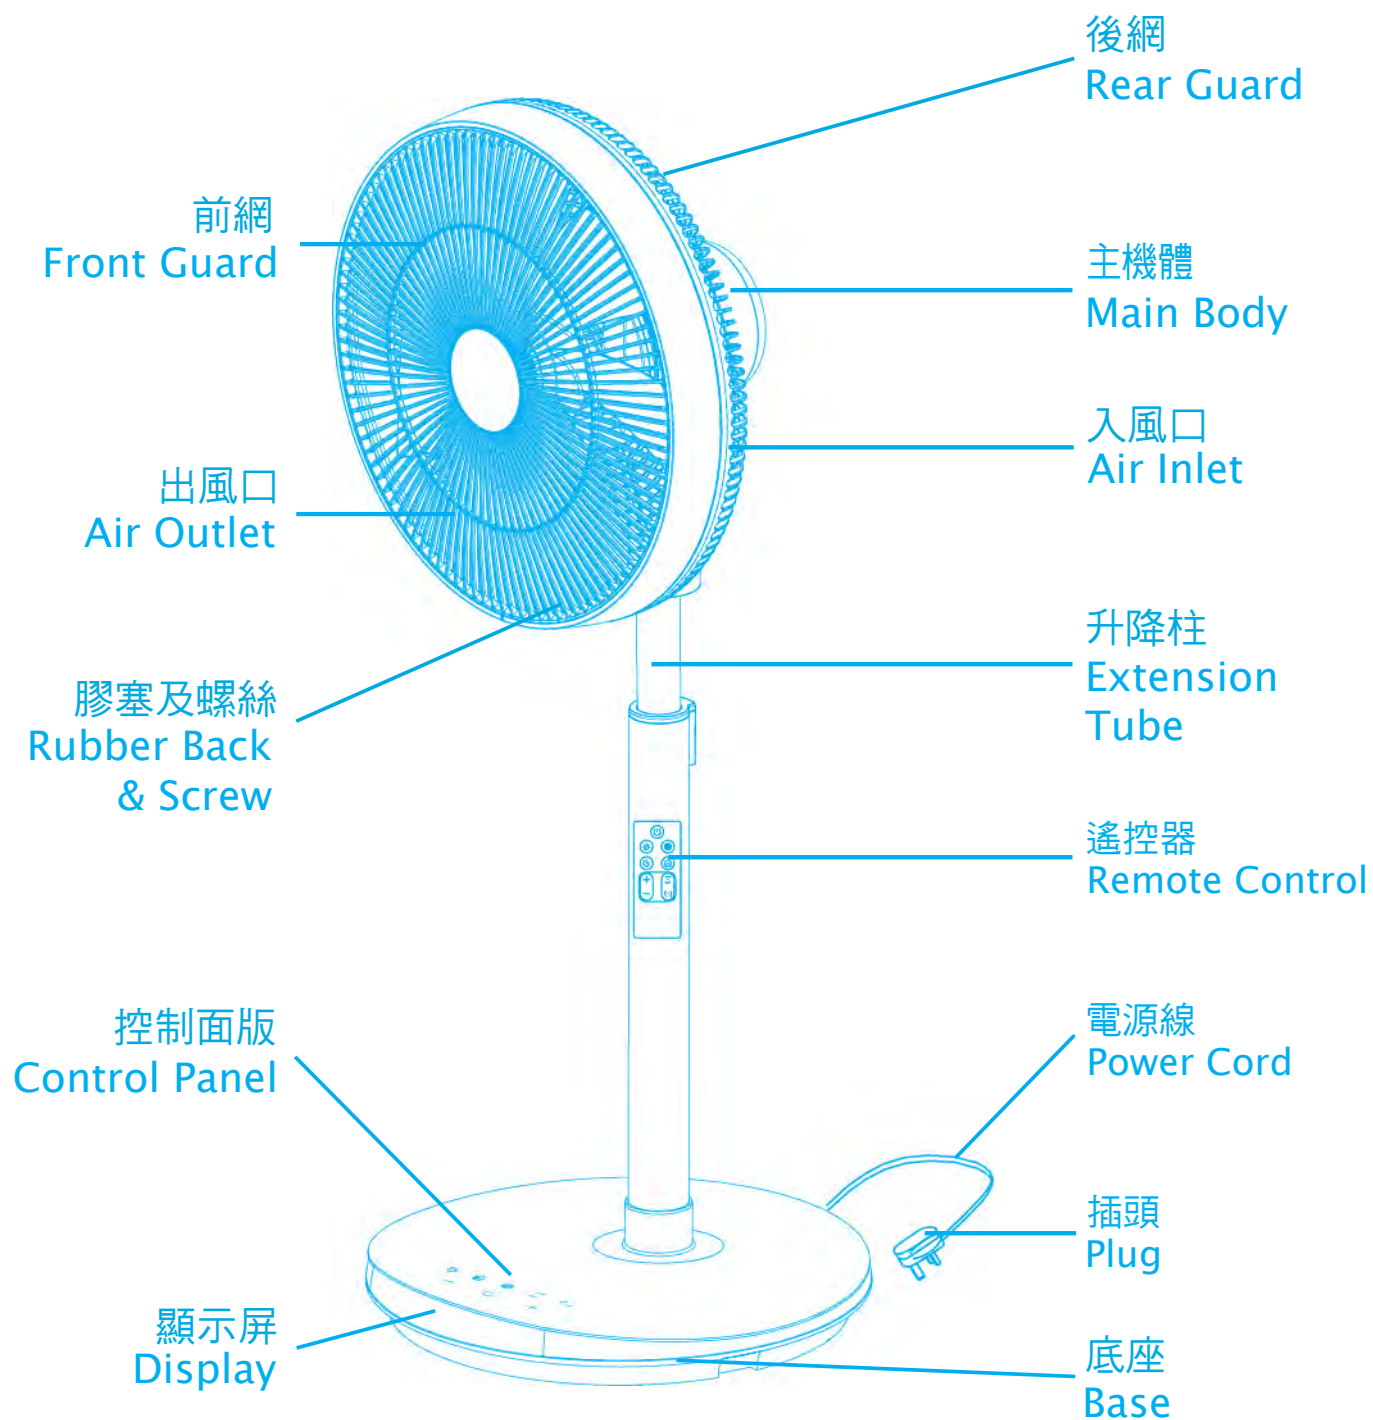


SF1622

 圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

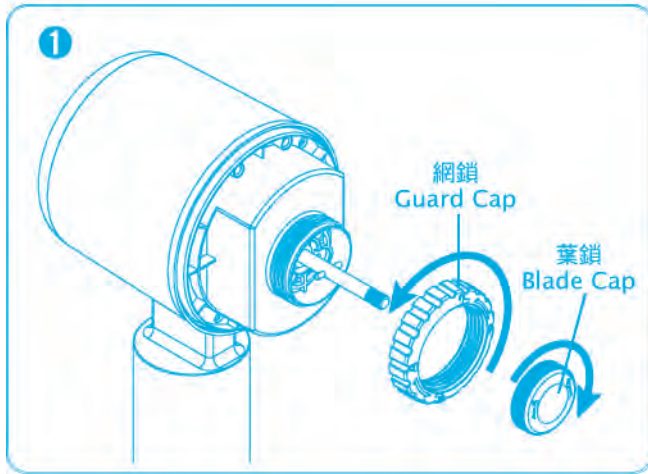

 
1. 從電機軸取出葉鎖及網鎖。
Remove the blade cap and guard cap from the motor shaft.

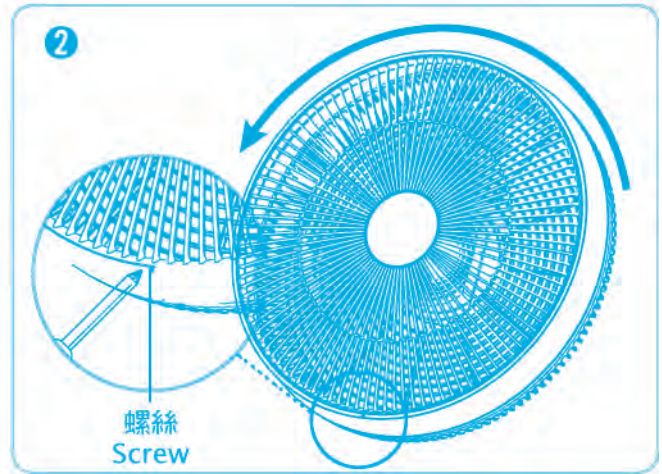

2. 取出後網下方膠塞，將後網下方螺絲鬆脫後逆時針旋轉前網並取出前網、扇葉及後網。
Remove the rubber back under the rear guard, loose the screw, turn the front guard anti-clockwise and pull out the front guard, blade and rear guard.




 3. 從升降柱底扭出固定鎖。
Remove the fixing cap from the base of pole.

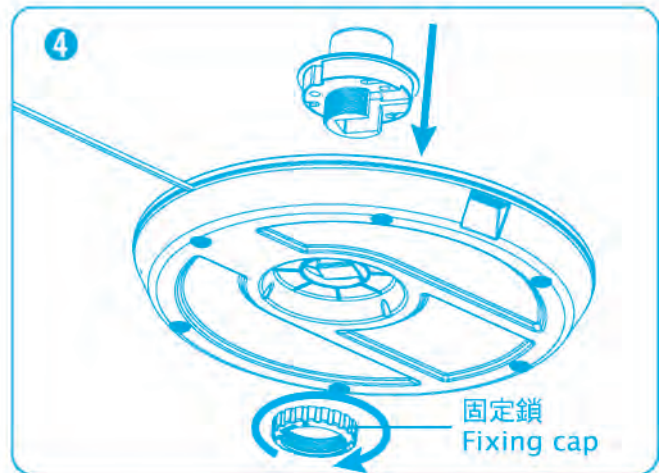


4. 把底座與升降柱接連後，以固定鎖把升降柱與底座鎖緊。
Connect the base with the pole, fasten it with the fixing cap.

 
圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

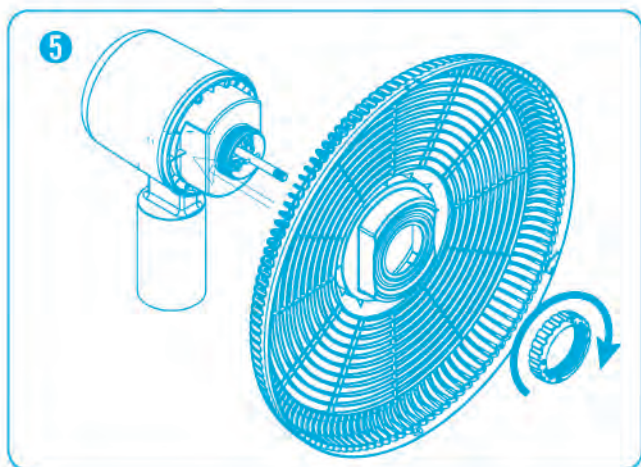

 
5. 使用網鎖把後網鎖緊在電機外殼前面。
Fixing the rear guard onto the front of motor housing by the guard cap.

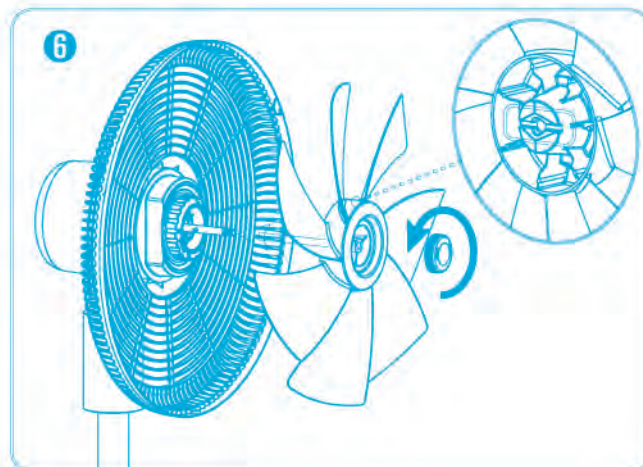

 6. 使用葉鎖把扇葉鎖緊在電機軸。
Fixing the blade on the motor shaft by the blade cap.

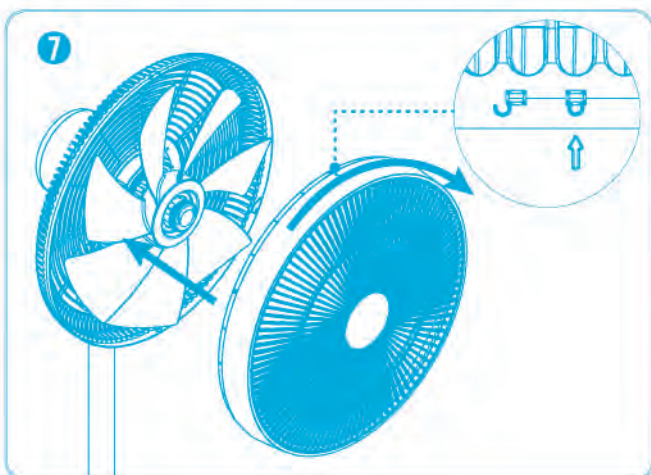

 7. 把前網放在後網上，順時針旋轉前網。
Put the front guard onto the rear guard, turn the front guard clockwise.

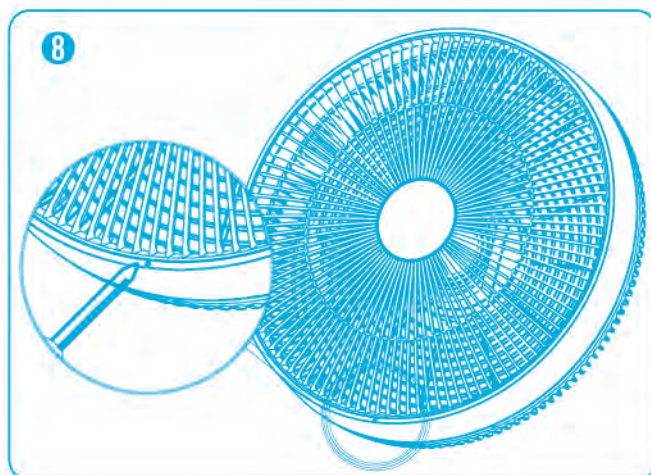

8. 將後網下方螺絲鎖緊，將膠塞放回後網下方。
Fix the rear guard with the screw, put the rubber back under the rear guard.

圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.


風扇可使用控制面板按鍵操控，或改用遙控器操控。

1. 將風扇擺放於穩固的平面上，將插頭插入交流電壓220-240V~, 50Hz的獨立插座。
2. 開/關: 按開/關鍵 "⏻", 風扇以1檔啟動。

The Fan may be operated by the control panel or using remote control.

1. Place the Fan on a stable and flat surface. Plug the Power Cord into an 220-240V~, 50Hz electrical outlet.
2. POWER: Turn the Fan ON by pressing the "⏻" key, the Fan start at speed 1.

	開關鍵 On/Off Key		定時設置鍵 Timer Key		左右送風鍵 L/R OSC Key
	風速增加鍵 Speed Increase Key		ECO模式鍵 ECO Key		左右角度鍵 L/R Angle Key
	風速降低鍵 Speed Decrease Key		送風模式鍵 Mode Key		上下送風鍵 U/D OSC Key

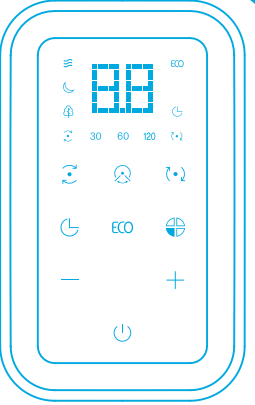 


SF1620

圖片只供參考，
一切以實物為準

The picture is for reference only,
everything in kind shall prevail.

	開關鍵 On/Off Key		左右送風鍵 L/R OSC Key		定時設置鍵 Timer Key
	風速增加鍵 Speed Increase Key		左右角度鍵 L/R Angle Key		送風模式鍵 Mode Key
	風速降低鍵 Speed Decrease Key		上下送風鍵 U/D OSC Key		

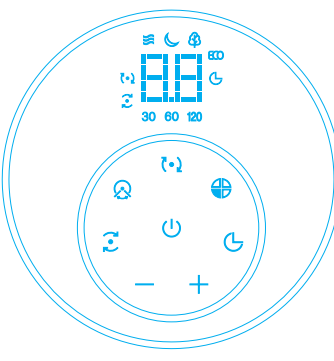 

SF1621

圖片只供參考，
一切以實物為準

The picture is for reference only,
everything in kind shall prevail.

	開關鍵 On/Off Key		左右送風鍵 L/R OSC Key		
	風速增加鍵 Speed Increase Key		左右角度鍵 L/R Angle Key		
	風速降低鍵 Speed Decrease Key		上下送風鍵 U/D OSC Key		
	定時設置鍵 Timer Key		送風模式鍵 Mode Key		



SF1622

圖片只供參考，
一切以實物為準

The picture is for reference only,
everything in kind shall prevail.

3. 風速:按風速增加鍵" + "，設定所需風速(2...12檔)，顯示屏將會顯示所選風速。
按風速降低鍵" - "，設定所需風速(11...1檔)，顯示屏將會顯示所選風速。
SPEED: Press the speed increase key " + " to increase the desired speed (level 2...12). Press the speed decrease key " - " to decrease the desired speed (level 11...1). The speed setting will be shown on the display.
4. 上下送風:按上下送風鍵"", 風扇以自動上下(上90°/下12°)搖擺模式送風。如欲停止自動上下搖擺送風，再按此鍵一次。
OSC(UP/DOWN): Press the "" key to allow the Fan to UP/DOWN (U90°/D12°) oscillate the wind direction. To stop the oscillation, press the key again.
5. 左右送風:按左右送風鍵"", 風扇以60°自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。
OSC(LEFT/RIGHT): Press the "" key to allow the Fan to LEFT/RIGHT oscillate the wind direction of 60°. To stop the oscillation, press the key again.
6. 左右送風角度:按下左右角度鍵"", 選定3個不同的角度(30°/60°/120°)，顯示屏將會顯示所選角度。
OSC ANGLE(LEFT/RIGHT): Press the "" key to set desired angle (30°/60°/120°). The selected angle will be shown on the display.
7. 送風模式:按送風模式鍵"", 設定所需送風模式:常風、自然風、睡眠風或智能環保模式(ECO)。顯示屏將會顯示所選模式。
MODE: Press the "" key to set the wind mode as Normal, Natural, Sleep or ECO (AI). The wind mode will be shown on the display.
8. 睡眠模式:當送風設定為睡眠模式，每半小時後，風速會由原來設定的自動下降一檔，直至最低檔。
SLEEP MODE: Fan speed will drop down one level every half hour from the original setting speed to the lowest speed as sleep mode.
9. 定時關機:在風扇運行時，按下定時設置鍵"", 選定16個不同的自動關機時間，分別由0.5至8小時，定時設置顯示燈將會亮起，顯示屏將會顯示所選關機時間。
OFF TIMER: While the Fan is operating, press the "" key to set desired auto power off time, There are 16 time intervals, from 0.5-hour to 8-hour. The indicator will light on and the off time setting will be shown on the display.
10. 智能環保模式:按"ECO" 鍵(只限SF1620)或送風模式鍵"", 選擇智能環保模式送風。
ECO (AI) Mode: Pressing the "ECO" (only for SF1620) or "" key to select ECO (AI) wind mode.

智能環保模式:當室溫低於或等於19°C時, 風扇自動關機, 顯示屏將會顯示"00"。

ECO (AI) Mode: When the room temperature is below or equal to 19°C, the Fan will automatically off, "00" will be shown on display.

室內溫度/Room Temp	風速/Wind Speed
19-20°C	1檔/Level 1
20-21°C	2檔/Level 2
21-21°C	3檔/Level 3
22-23°C	4檔/Level 4
23-24°C	5檔/Level 5
24-25°C	6檔/Level 6
25-26°C	7檔/Level 7
26-27°C	8檔/Level 8
27-28°C	9檔/Level 9
28-29°C	10檔/Level 10
29-32°C	11檔/Level 11
>32°C	12檔/Level 12

11. 預約開機:在待機模式下, 先按控制面板或遙控器上的非 "開/關" 鍵, 再按定時設置鍵 "⌚", 選定16個不同的預約開機時間, 分別由0.5至8小時, 顯示屏將會顯示所選開機時間及閃動, 當顯示屏閃動時, 可同時設置上下送風、左右送風、送風模式、ECO模式及風速等功能。

PRESET START TIME: In Standby mode, press non "ON/OFF" key on the control panel or remote control, then press the "⌚" to set desired preset start time. There are 16 time intervals, from 0.5-hour to 8-hour. The desired preset start time will be shown on the display and flashes. OCS (UP/DOWN & LEFT/RIGHT), WIND MODE, ECO MODE and SPEED can be set during the indicator flashes.

12. 關機: 如需關機, 按 "⏻" 鍵。

*關機後的風扇會自動回復到原來位置。

OFF: To turn off the Fan, press the "⏻" key.

*The Fan will automatically resume to its original position after shutdown.

夜光：按遙控器上""鍵，調校或關掉控制面板光暗。

Dim: Press "" key on remote control to adjust brightness or turn off the back light of control panel.

更換電池：依照圖示，使用大頭針在遙控器背面小孔插入並按著，同時用力把電池蓋推開，更換一枚3伏特鋰電池(CR2032)。

Battery replacement: Use a pin to insert the hole of back case, press and slide the battery cover out. Then replace one 3V Lithium battery (CR2032).

 
 
警告/Warning

- 1) 請把電池放在兒童碰不到的地方，如果孩子吞下電池，需立即致電諮詢醫生。
- 2) 不要對電池進行充電或隨意棄置在有火源的地方。
- 3) 應保持電池存放於乾燥，陰涼的地方。
- 4) 以正確的方向插入電池。

 電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in right direction.

 Battery disposal - Please dispose the used battery per municipal or provincial law.

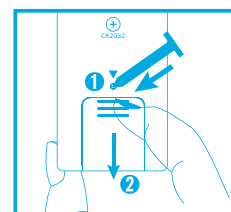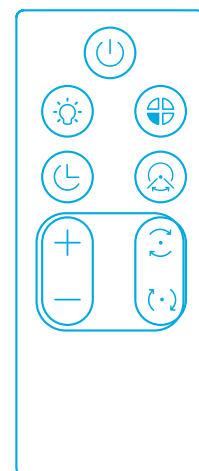

警告：不使用風扇時，經常保持拔除電源，及切勿將風扇浸於水或其他液體中。在清潔本風扇前，先將風扇關掉及把電源線從插座拔出。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

外殼及前後網：清理時切勿將風扇浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

Housing & Guard: Clean the outside of the Fan with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.

扇葉：將後網下方螺絲鬆脫後取出前網，使用濕潤軟布抹擦清潔扇葉。清潔後，放回前網並用螺絲鎖緊，才可使用風扇。

Blade: Loose the screw and pull the front guard out. Clean the blade with a soft damp cloth, place back and fix the front guard with the screw after cleaning.

注意：切勿使用含有腐蝕性的清潔劑或溶液清理風扇。


CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS.

儲存：連同使用說明，把風扇存放於清涼及乾爽的地方。

STORAGE: Store the Fan with these instructions in the original box in a cool and dry place.

技術規格 Specification

型號 Model Number	SF1620/SF1621/SF1622
電源 Power Supply	220-240V~ 50/60Hz
額定功率 Rated Power	33W
產品尺寸 Product Dimension	405(W) x 1120(H) x 380(D) mm (約/Approx.)

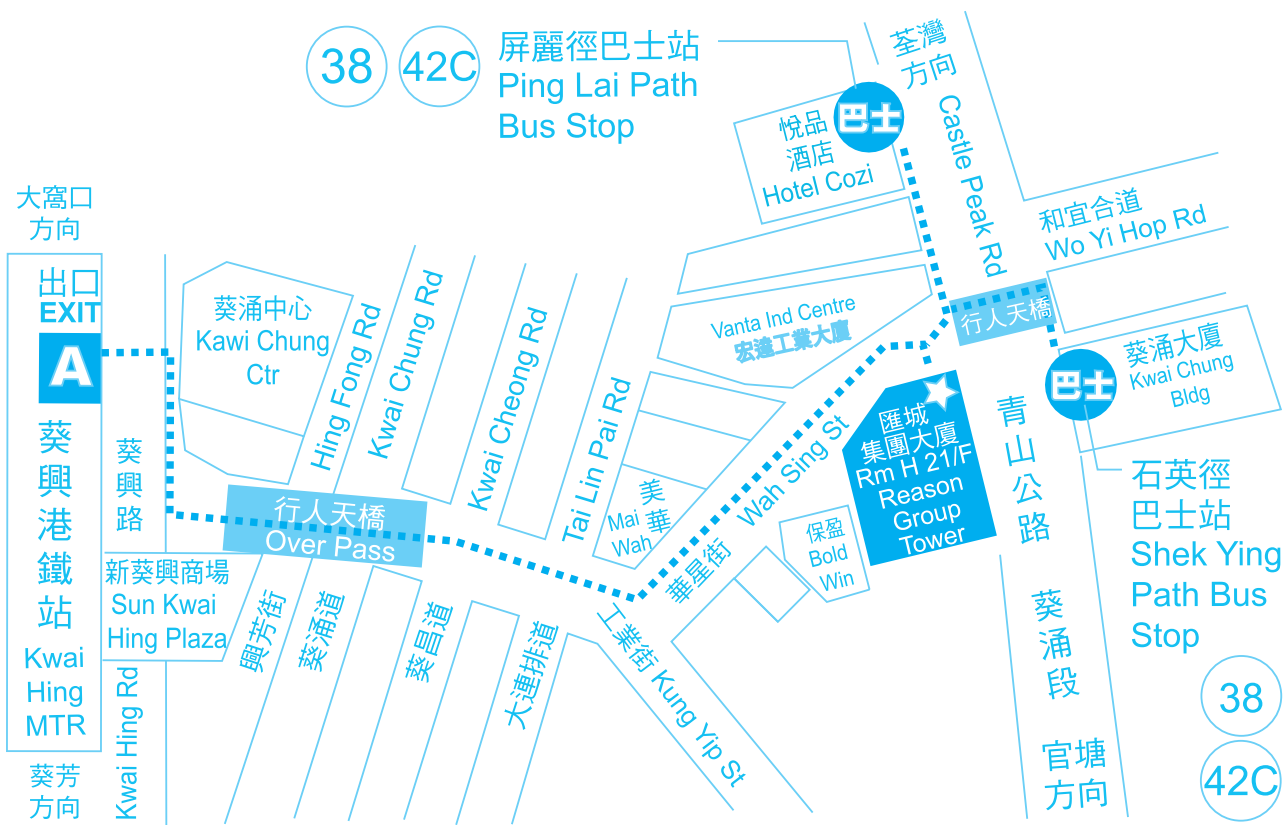 

辦公時間

10:30am – 12:30pm (星期一至五)
02:30pm – 05:30pm (星期一至五)
10:30am – 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am – 12:30pm (Mon to Fri)
02:30pm – 05:30pm (Mon to Fri)
10:30am – 12:30pm (Saturday)
(Closed on Sunday and Holiday)

產品保用証(一年自攜服務)

14" 立體龍捲座地扇
14" 3D TWISTER STAND FAN

origo

產品: 14" 立體龍捲座地扇

型號: SF1620/SF1621/SF1622

此產品由購買日期起計算, 本公司將根據下列條款及細則, 提供一年保養服務(商業用享為3個月):

1. 於購買後一年內, 經本公司技術員判斷為正常運作下損壞之產品, 可獲免費維修和/或零件更換。
2. 以下情況不被包括在保養範圍內:
 - 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞;
 - 未經授權之自行處理、維修及/或改裝;
 - 任何機殼、前網、扇葉、葉鎖、後網、網鎖、遙控器, 以及配件。
3. 需要檢查或維修時, 請將產品送往本公司服務中心, 並於修理妥當後自行取回。
4. 更換後之任何損壞零件, 均屬本公司所有。
5. 本保養服務只適用於香港特別行政區。
6. 顧客必須同時出示零售商之正式發票, 方可得到免費維修服務。

***額外3個月保用: 凡於購買產品後10天內完成網上登記, 即可免費延長保用期3個月, 即15個月免費保用(商業用途除外)。請即登入網站: www.origo.hk

服務中心

 
源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

電話: 2156 8238

www.origo.hk

www.origo.hk

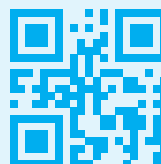

Find us on



Warranty Card(1 year carry-in)

Item : 14" 3D Twister Stand Fan

Model : SF1620/SF1621/SF1622

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
 - If the product has been damaged through abuse, misuse, negligence or accidents;
 - Unauthorized repair, alteration/modification;
 - The housing, front grille, fan blade, blade cap, rear grille, grille cap, remote control or accessories, is excluded from this warranty.
3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.
4. Any defective parts, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Please show the Invoice to get free service.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

www.origo.hk

www.origo.hk



Find us on

