

ATTENTIONS 1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments. Appliances are not intended to be operated by remote-control system. surface to eliminate the possibility of tipping over or avoid any water in the set.

- means of an external timer or separate Ensure the appliance is placed on a stable, secure
- To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires, broken fuse or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your
- local authorized maintenance center. Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
- To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
- This Product is intended for household use ONLY and not for industrial or outdoor use. Use this Product only as described in this manual.
- Any other use not recommended by the manufacturer may cause fire, electrical shock or

10. Open the package and ensure that the Product is undamaged. In case of doubt, do not use the Product and contact your supplier.

- . Do not let children play parts of package. Do not take this Product apart exposing electrical parts. Call customer service for assistance and
- guarantee information. The Product is not intended for use in wet or damp locations. Never locate the Product where it may fall into a bathtub or other water container. . Do not place the Product near a source of heat or
- . DO NOT OPERATE this appliance near water sources or flammable liquids.

The water should be filled do not exceed MAX

- mark (Approx. 600 ml). When the Kettle is dry boiling, unplug immediately and then cooling the Kettle for 15
- minutes. . Do not store carbonated drinks, dairy products or baby food during long-term heat preservation
- (risk of bacterial growth). . Do not use a microwave or other heating equipment to heat the product, and do not wash it in a dishwasher.
- This product is used for boiling water only, and cannot be used for heating soy milk, rice cereal, milk, coffee, cereal and other drinks or cook food.
- When boiling water, steam will emerge from the breathable membrane to form condensation. This is a normal phenomenon and not a water
- . Do not immerse the product into water or other liquid as to avoid accident.
- Pay attention when moving the Kettle with full boiling water. . Never try to touch the appliance cavity and
- heating plate of this appliance before it is cool . If this appliance is using very long time, the surface of appliance will become fade, this

situation also happens properly.

Notice: Please make sure the knob of bottom indicating the correct voltage before plug in the socket, otherwise it will damage the products.

This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

BEFORE USING FOR THE FIRST TIME

- Remove all the packing material. Select the required voltage by turning the dual selection knob at the bottom of the Kettle. Always select the correct voltage before using the Kettle.
- Rinse the appliance cavity with water. Then fill water to the maximum water level MAX". Place the Kettle on a dry, stable and flat
- surface. Plug the power plug to the power socket, then plug the power plug into an electrical outlet, the Kettle is ready for use.
- Let the water boil once (Refer to direction for use), pour out the hot water and rinse the appliance cavity once more.

DIRECTIONS FOR USE

- Open the lid, pour the proper amount of water. Do Not fill water exceed the "MAX" mark (Approx. 600 ml). Close the lid until hear a "click" sound, that
- means the lid is closed. Plug the power plug to the power socket, then plug the power plug into an electrical
- Press the power switch and the power
- indicator light on. The appliance switch off automatically after
- water boiling. Always unplug the power after use. Warning: Never open the lid if steam is

MAINTENANCE & CARE

coming from the spout.

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE KETTLE AND POWER CORD IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET AND LET THE KETTLE COOL DOWN COMPLETELY.

Note: Open the lid to let the Kettle cool down more quickly.

Clean scale inside Kettle:

- L. Pour 50 ml of white vinegar (make sure the scale area is submerged), soak overnight, pour out the white vinegar and wipe the remaining sediment with a damp soft cloth. Add water, boil the water and then pour it out, repeat 2 to 3 times.
- Housing: Clean the outside and grille of the Kettle and power cord with a soft cloth. To remove persistent dirt, wipe down with a cloth that has been dampened with warm soapy



- Clean the Kettle each time. Do NOT use abrasive, corrosive or
- flammable cleansers (such as bleach or alcohol) to clean any part of the Kettle. Do not use metal kitchen utensils or
- abrasive cleaning materials to clean the Kettle, cups and power cord. Wipe the outside of the Kettle with a moist
- After use, some color spots (e.g. brown, milky, black, etc) and discolor may appear in the appliance cavity and heating plate. This is because of the impurities contained in water or the accumulated scale, this situation also happens properly.
- Tap water from the faucet will have scale when boiling, which is a normal phenomenon. Pure water is recommended. STORAGE: Store the Kettle with these instructions in the original box in a cool and dry

WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the cover, lid, cups, storage pouch, power cord & plug and other accessories, damage or defect caused by negligence or use not according to this instruction manual.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to

- commercial use)
- Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or
- Extra 6 months warranty: follow " Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Remark: For any repair service, please contact and bring with the invoice or receipt to the

Service Centre

ORIGIN MARKETING LIMITED Unit H,21/F, Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong

Office Hours


10:30am - 12:30pm (Mon ~ Fri) 02:30pm - 05:30pm (Mon ~ Fri) 10:30am - 12:30pm (Sat) (Closed on Sunday and Holiday)





不銹鋼旅行電熱水壺


使用說明書

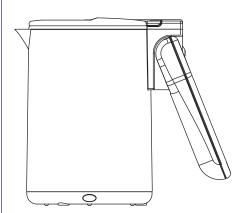

產品型號: EK136

*使用產品前,請先細閱使用說明書。 並請妥善保存以便將來翻閱。 **本說明書可於本公司網站下載 www.origo.hk • ***水壺使用旅行轉換插頭必須使用有地線。

型號及規格 不銹鋼旅行電熱水壺 220-240伏特~50赫茲/120伏特~60赫茲 800瓦特 的600毫升 約147(W) X 164(H) X 110(D)mm 水杯 x 2、收納袋、電源線及說明書 各部名稱

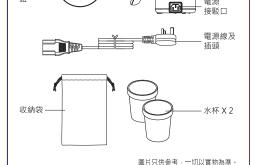

重要安全提示

- 1. 本機不是為體質、感覺或智力 有障礙人士(包括小孩)或缺乏 經驗及知識者使用,除非他們 曾經接受負責安全人士的監督 或指示,大人應指導小孩不可 把玩電器。
- 2. 本產品是家用或在類似環境使用,例如:商店 内部、辦事處以及其他類似工作環境的廚房 區域;農舍;客戶在旅館、汽車旅館和其他住宅
- . 本機不能用於附加外置的時計或控制器。 I. 使用時確保本產品放置於安全、平穩的表面
- 5. 電源線或保險線損壞時,不應自行更換。應 到指定維修中心更換相同或更高規格的電源 線或更換保險線。
- 6. 本產品不應使用延長線與標稱小於13A的插 座,必須使用與原裝同規格之電線。 7. 防止電插座負荷過重或損害保險線,高耗電 量之電器不能同時接駁到同一電插座或同一
- 8. 本產品不適用於室外及作工業用途。 9. 必須按照使用說明指示操作本產品,否則可 能引致產品損壞、短路、火警或人命損傷。
- 10. 打開包裝,檢查產品。如發現產品有損壞 請勿使用及即時聯絡供應商。 11. 包裝物料並非玩具,不可讓小孩玩耍。
- 12. 不可擅自拆卸、修理、改造本產品,如有任 何問題請先致電客戶服務中心。 13. 不可在潮濕或有積水的環境使用,不可將本
- 機放於浴缸或大型溶器上面。 14. 切勿將產品擺放在發熱源頭或火源附近。 15. 切勿於水源或易燃物品附近使用。
- 16. 注水時不可超過"MAX"刻度位置(約600毫升)。 17. 如發現本產品正在乾燒,請立即拔除電源線並 讓本產品冷卻15分鐘後才可使用。 18. 長時間保溫期間不得存放碳酸飲料、乳製品或
- 19. 請勿使用微波爐或其他加熱設備加熱產品,也 請勿使用洗碗機清洗。 20. 本產品僅用於煲滾開水,不能用於加熱豆漿 米糊、牛奶、咖啡、麥片等飲料或烹煮食物。

嬰兒食品(有細菌生長風險)。

21. 當水沸騰時,蒸氣會從蒸汽孔中溢出,形成冷 凝。這是正常現象,並非漏水。 22. 請勿將產品浸入水或其他液體中,以免發生事

- 23. 當電熱水壺載滿沸水時,請小心移動,以免發
- 24. 在本產品冷卻前,切勿接觸其產品內腔及發熱
- 25. 本產品使用時間較長後,表面顏色有所變化, 這是正常現象。
- . 注意:在接上電源前,請確保機身底部旋鈕的 指示電壓與當地電壓相對應,否則造成產品損

本產品含有可回收材料,不可把本產品作 為未分類廢物。請聯繫當地就近指定回收

首次使用前準備

- 1. 確保已清除所有包裝物料。 透過電熱水壺底部雙電壓選擇旋鈕選擇所需的
- 電壓。使用電熱水壺之前,請務必選擇正確的 . 用清水清洗產品內腔, 然後加水到最高刻度
- (MAX水位線)·並將水煮沸一次(請參閱使用方 將電熱水壺放置在乾燥及平穩的表面。 5. 將電源插頭插入電源接駁口, 然後將電源插頭
- 插入獨立插座,電熱水壺即可使用。 將水煮沸一次(請參閱使用方法),將熱水倒掉 並再次清洗產品內腔。

使用方法

- 打開壺蓋,注入適量的水。注水不可超過
- "MAX"刻度的位置(約600 毫升)。 2. 蓋上壺蓋直至聽到 "喀嚓"一聲,代表壺蓋已關
- 3. 將電源插頭插入電源接駁口,然後將電源插頭 插入獨立插座,電熱水壺即可使用。 按下開關鍵,雷源指示燈同時亮起。

水煮至沸騰後,雷熱水壺將會自動關機。

使用完畢,請經常保持拔掉電源。 警告: 如有蒸氣從壺嘴噴出,請不要打開壺蓋。

清理及維護

警告: 不使用電熱水壺時,經常保持拔除插頭,及 切勿將電熱水壺及電源線浸於水或其他液體中 在清潔本電熱水壺前,先將電熱水壺關掉及把電 源線從插座拔出,然後讓電熱水壺完全冷卻。 *注意:打開壺蓋,使電熱水壺冷卻更快。

清潔水壺內的水垢: 1. 倒入50毫升白醋(確保水垢區域浸沒),浸泡一 整晚,倒出白醋後用濕軟布擦拭殘留沉澱物。

外殼: 清理時切勿將電熱水壺及電源線浸於水或其 他液體中。使用濕潤軟布抹擦清潔,頑固污垢可 用軟布沾上含肥皂的溫水抹擦。

2. 加入清水,將水燒開後倒掉,重複2至3次。



- 每次使用後都要清潔雷熱水壺 切勿使用研磨性、腐蝕性或易燃性清潔劑(例
- 如漂白劑或酒精)清潔雷熱水壺的任何部位。 請勿使用金屬廚房用具或研磨性清潔材料來清 潔雷熱水壺、水杯及雷源線。 用濕布擦拭雷熱水壳的外部
- 使用後,產品內腔及發熱板可能會出現小斑點 (如啡色、乳白色、黑色等情況)或變色。這是 由於水中所含的雜質引起變化或因水垢積聚太 久所致,此屬正常現象。
- 水龍頭裡的自來水在沸騰時會有水垢,這是正 常現象。建議使用蒸餾水。 儲存: 連同使用說明, 把電熱水壺存放於清涼及乾

本機可獲自購買日起1年免費保用(商業用途享有 三個月免費保用)此保用只包含生產所導致的品質 問題,並不包括機身外殼、水杯、收納袋、電源 線及插頭及其他配件,因誤用或不依說明書指示 使用而導致的損壞。

升級保用: (須於購買本產品後10天內完成以下步 驟:升級保用不適用於商業用途) A. 額外3個月保用: 於本公司網站完成登記,可享

有共15個月免費保用:或 B. 額外6個月保用:到訪並"追蹤"本公司 (Origin Marketing Limited)的Facebook,即可享有共 18個月免費保用。(如果已追蹤‧則自動享有此 升級保用,毋須再進行上述步驟)。

注意:保用時,須帶同收據及請先致電服務中心。

匯城集團大廈21樓H室(近華星街12號)

服務中心

源澤市務有限公司

電話:2156 8238

香港新界葵涌青山公路403號

辦公時間 上午10:30 - 下午12:30 (星期一至五) 下午02:30 - 下午05:30 (星期一至五) 上午10:30 - 下午12:30 (星期六) (星期日及公眾假期休息)





源澤地圖



