 




# UV 冷 霧 冷 暖 風 機 UV Cool Mist Air Cooler/Heater

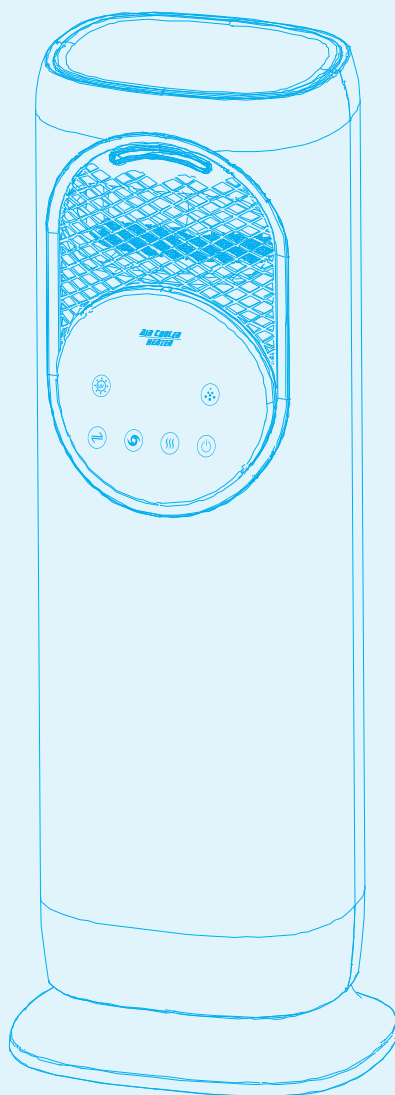

## AC61

## 使用說明書

## INSTRUCTION MANUAL

- \* 使用冷暖風機前，請先細閱使用說明書，並請妥善保存以便將來翻閱。
- \*\* 本說明書可於本公司網站下載 [www.origo.hk](http://www.origo.hk)。
- \* Read all instructions carefully before using the COOLER/HEATER, and keep this instruction for future reference when necessary.
- \*\* This instruction manual can be acquired at [www.origo.hk](http://www.origo.hk).


# 重要安全提示


## Important Safety Information

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater

origo

- 使用冷暖風機前，請先細閱使用說明書。  
Read all instructions carefully before using the Cooler / Heater.
- 本機不是為8歲以下小孩，體質、感覺或智力有障礙人士或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。  
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 未滿3歲的小孩除非受到持續監護，否則應該遠離本產品。  
Children of less than 3 years should be kept away unless continuously supervised.
- 年齡在3至8歲的小孩只有在產品已經被放置或安裝在其預期的正常操作位置，並已經接受了使用本產品的安全指導或監督並理解可能存在的危險時，才能開關產品。其不得插拔電源、調節和清潔產品，也不得進行用戶維護。  
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 使用時確保冷暖風機放置於安全、平穩的表面上。  
Use this Cooler / Heater on a horizontal and stable surface.
- 如本產品的電源線有損壞痕跡，為保障安全，請立即停止使用並聯絡供應商更換。  
If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 如冷暖風機有明顯的損壞跡象，請勿使用。  
Do not use if there are visible signs of damage to the Cooler / Heater.
- 警告：除非提供持續監督，否則當無法自行離開房間的人佔用時，請勿在細小房間內使用此冷暖風機。  
WARNING: Do not use this Cooler / Heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- 請不要使用曾經掉落的冷暖風機。  
Do not use this Cooler / Heater if it has been dropped.
- 切勿把冷暖風機擺放於電源插座之下。  
The Cooler / Heater must not be located immediately below a socket outlet.
- 切勿使用可使冷暖風機自動開機的外加管理程式、時間制、遙控系統或任何其他裝置，以免因冷暖風機被覆蓋或擺放位置不當而發生火警。  
The Cooler / Heater is not intended to be operated by means of an external programmer, timer, separate remote-control system or any other device that switches the Cooler/ Heater on automatically, since a fire risk exists if Cooler / Heater is covered or positioned incorrectly.

-  警告: 為防冷暖風機過熱, 切勿覆蓋冷暖風機的出、入風口。使用暖風功能時的冷暖風機出口會發出高熱, 切勿觸碰。

 WARNING: In order to avoid overheating, do not cover the Cooler / Heater. The Cooler / Heater is hot when using the heating function. To avoid burns, do not let bare skin touch hot surface.

- 警告: 冷暖風機的出、入風口應與易燃物品(如傢俱、枕頭、床鋪、毛巾或窗簾等)保持安全距離不少於1米。

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet and inlet of the Cooler / Heater.

- 冷暖風機不可擺放於有潛在危險的地方使用(例如: 非常潮濕環境、易燃物品或化學品倉庫)。

The Cooler / Heater must NOT be used in potentially dangerous location such as flammable explosive, chemical laden or wet atmospheres.

- 冷暖風機不適用於室外及作工業用途。  
Cooler / Heater is intended for household use ONLY, not for industrial or outdoor use.

- 打開包裝, 檢查產品。如發現產品有損壞, 請勿使用及即時聯絡供應商。  
Remove the package and ensure that the Heater is undamaged. In case of doubt do not use the Cooler / Heater and contact your supplier.

 
- 包裝物料並非玩具, 不可讓小孩玩耍。  
Do not let children play parts of package.

- 請使用獨立插座。使用萬能插頭或拖板, 容易發生危險。

Avoid using extension cord as the extension cord may overheat and cause fire.

- 使用冷暖風機前, 請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。

Before using the Cooler / Heater, check if the voltage marked on the rating label corresponds to the mains in your home.

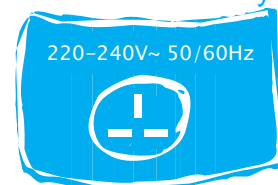

- 拔除插頭時不可拉扯電源線, 必須緊握插頭, 把插頭拔出。

Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.

- 警告: 總電源開/關鍵不應作為切斷電源用途。

WARNING: The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power.

- 警告: 清理前必須先拔除電源插頭。  
WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning.

- 冷暖風機不可擺近水盆、浴缸、花灑、泳池、潮濕或有積水的周邊環境使用。

The Cooler / Heater is not intended for use in the immediate surroundings of a basin, a bath, a shower, a swimming pool, a wet or damp locations.

# 重要安全提示

## Important Safety Information

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater





- 切勿將任何異物放入機內；或阻擋機身出風口及入風口；或將冷暖風機放置在柔軟或不穩固的表面上(例如床鋪)，皆因以上一切行為均會導致機身過熱，引發短路或火警。  
Do not insert any objects into the Heater as it may cause an electric shock or fire or damage to the Cooler / Heater. Do not block or tamper with the Heater in any manner while it is in operation. To prevent a possible fire, do not block air inlet or outlet in any manner. Do not place on soft surfaces, like a bed, where opening may become blocked.
- 冷暖風機設有發聲警報裝置，當機身溫度過熱，警報器自動發聲提示，應立即關機檢查並立即停止使用此機。  
The Cooler / Heater includes an audible alarm to warn when the Cooler / Heater are overheat. If the alarm sounds, immediately turn the Cooler / Heater off and inspect the Cooler / Heater. **DO NOT OPERATE THE COOLER / HEATER WITH THE ALARM SOUNDING!**
- 非使用冷暖風機時請拔除插頭，切斷電源。  
Do not leave the Cooler / Heater unattended while using. Always unplug the Cooler / Heater when not in use.
- 警告：“⏻”鍵不應作為切斷電源的用途。  
**WARNING:** The “⏻” switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- 不可在潮濕或有積水的環境使用，不可將冷暖風機擺放於浴缸或大型容器上面。  
The Cooler / Heater is not intended for use in wet or damp locations. Never locate the Cooler / Heater where it may fall into a bathtub or other water container.
- 切勿將冷暖風機擺放在發熱源頭或火源附近。  
Do not place the Cooler / Heater near a source of heat or fire.
- 警告；清潔前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。  
**WARNING:** To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 注意：定期清潔後網以免積聚塵埃而導致風力減弱。  
Note: Clean the rear grille regularly to avoid dust accumulation that can weaken the wind.
- 加水或加冰盒時，水箱水位均不可超過最高水位線“MAX”。  
DON'T overflow the water tank.
- 如環境濕度太高時應停止使用冷霧/加濕功能。  
STOP Cool Mist / Humidifier function when it is too humid.
- 當水箱有水時，請勿搖晃冷暖風機。  
DON'T move the unit when the water tank is full.

# 重要安全提示

## Important Safety Information

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater

 


- 如須移動冷暖風機，請先拔除插頭切斷電源。  
Always disconnected the Cooler / Heater from the power supply when moving it from one location to another.
- 當水箱缺水或水量不足時啟動冷霧/加濕功能，冷霧製造器停止操作，此屬正常現象。  
It is a normal phenomenon when the Cool Mist generator stop working with no or low level of water in the water tank after pressing the Cool Mist key.
- 如本機傾倒時機內有水，應立即關機及拔掉插頭。需風乾1至2天後才能再使用。  
TURN off and unplug the unit immediately if it is toppled with water inside. Let the unit completely dry for one to two days before reuse.
- UV殺菌功能操作時，切勿長時間近距離接近紫外光燈。  
Please keep away from the UV light when the UV function is working.
- 注水清潔時拔掉電源插頭。  
Unplug the appliance during filling and cleaning.
- 冷暖風機不使用時，切勿將水留在水箱中。  
Never leave water in the water tank when the appliance is not in use.
- 不要讓冷暖風機周圍的區域變得潮濕或濕潤。如果出現潮濕，請將冷霧/加濕功能的輸出調低。如果無法調低冷霧/加濕功能的輸出量，請間歇性使用冷霧/加濕功能。不要讓吸收材料，如地毯、窗簾、窗簾或桌布變濕。  
Do not permit the area around the Cooler / Heater to become damp or wet. If dampness occurs, turn the output of the Cool Mist / Humidifier down. If the Cool Mist / Humidifier output volume cannot be turned down, use the Cool Mist / Humidifier function intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- 儲存前清空並清潔水箱。下次使用前清潔水箱。  
Empty and clean the water tank before storage. Clean the water tank before next use.
- 請注意，高濕度水平可能會促進環境中生物的生長。  
Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。  
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.




# 各部名稱 Main Parts

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater

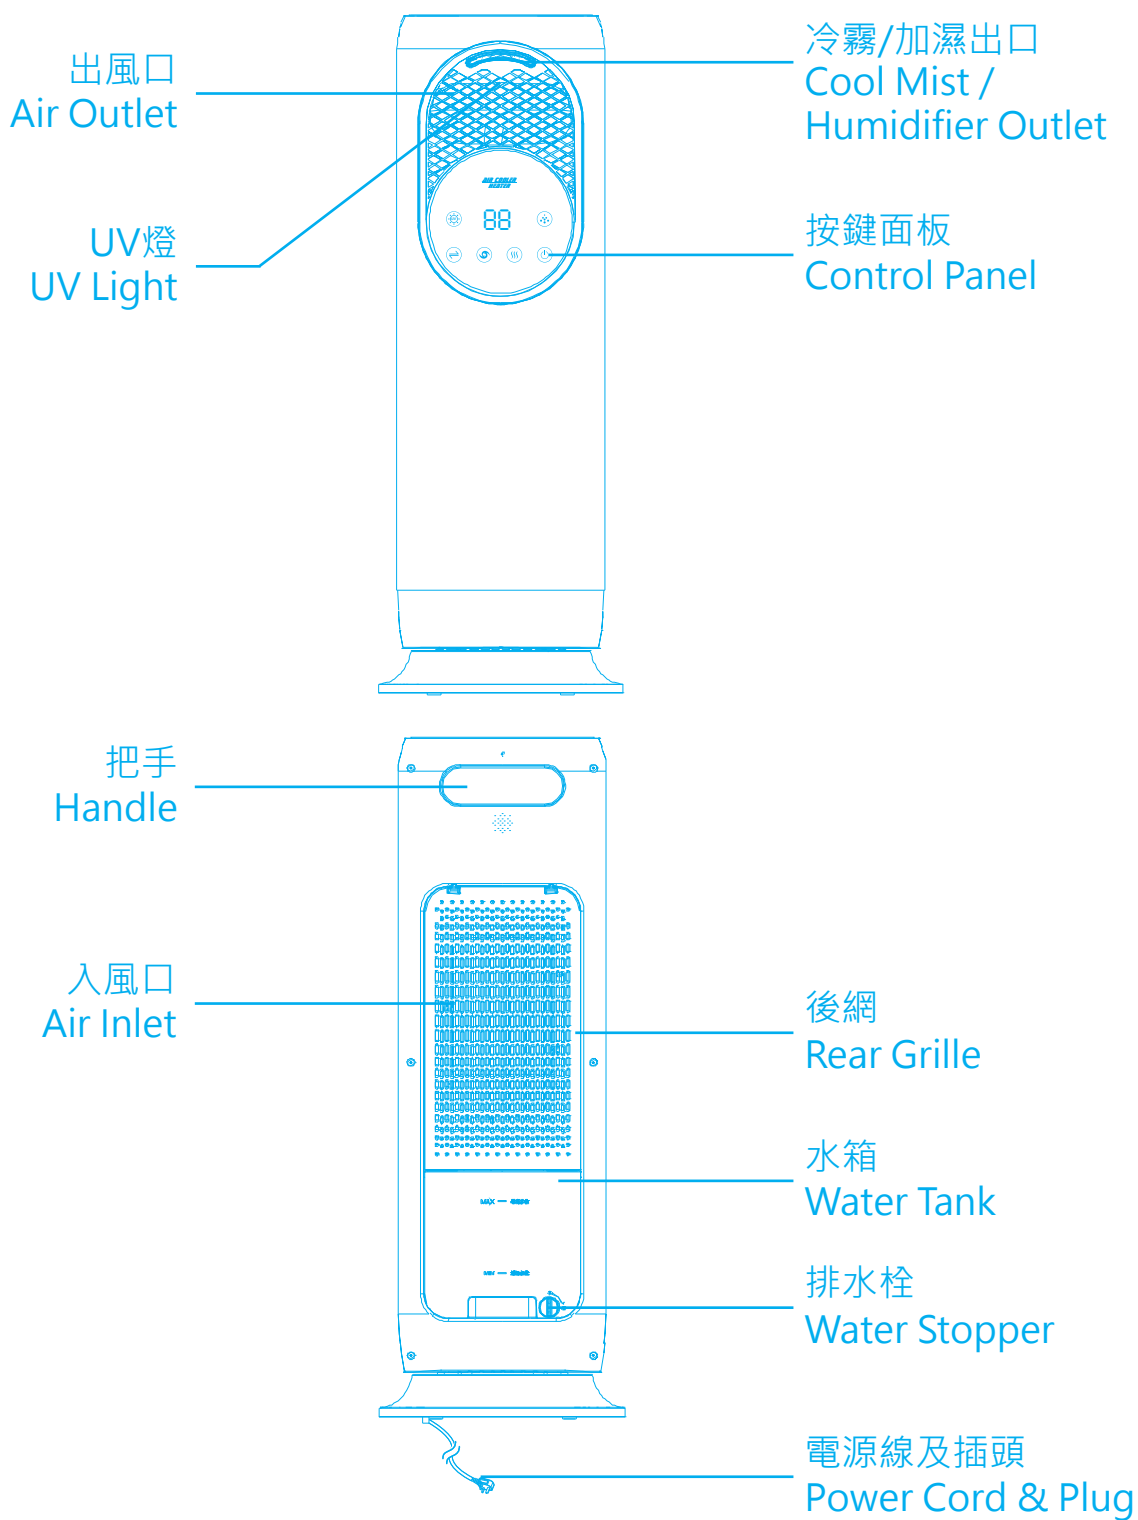

 冰盒 x 2 (需自行注水)  
Ice Box x 2 (Need to  
fill water by yourself)



圖片只供參考，一切以實物為準  
The picture is for reference  
only, everything in kind shall  
prevail.

UV 冷霧冷暖風機可使用機身按鍵操控，或改用遙控器操控。

 
The UV Cool Mist Air Cooler/Heater may be operated by the control panel or using remote control.

1. 將 UV 冷霧冷暖風機擺放於穩固的平面上，將插頭插入交流電壓 220-240V~50/60Hz 的獨立插座，"⏻" 鍵亮起。

Place the UV Cool Mist Air Cooler/Heater on a stable and flat surface. Plug the Power Cord into an 220-240V~ 50/60Hz electrical outlet, the "⏻" key on.

2. 開/關: 按 "⏻" 鍵，UV 冷霧冷暖風機進入待機模式，LED 顯示屏顯示 "ON"。

POWER: Turn the UV Air Cooler/Heater ON by pressing the "⏻" key, the UV Cool Mist Air Cooler/Heater enter to the standby mode, LED display "ON".

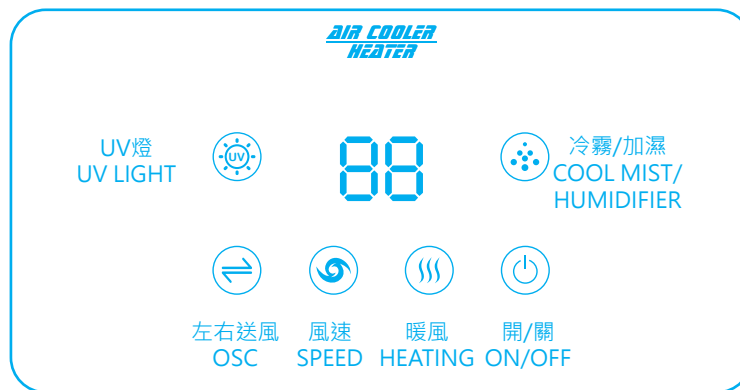

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

3. 涼風：按風速鍵 "🌀"，冷暖風機將以弱風速運作，LED 顯示屏將會顯示 P1，再按此鍵可轉換至所需風速：弱(P1)、中(P2)、或強(P3)。LED 顯示屏將會顯示風速。連續按此鍵可循環改變風速選擇順序：

🔄 弱 → 中 → 強 🔄

COOLING: Pressing the "🌀" key, the Cooler/Heater will start operation at Low speed, the LED display will show P1. Press this key again to switch to the desired wind speed: Lo(P1), Med (P2), or Hi (P3). The speed setting is displayed on the LED display.

The changing sequence is as below when it is pressed continually:

🔄 Lo → Med → Hi 🔄

4. 冷霧/加濕：按 "💧" 鍵即可製造冷霧/加濕。

注意：請先加水入水箱，必須最少達到水箱的最低水位，方可使用冷霧/加濕功能。

\*本機可按使用者需要，選擇獨立操作冷霧或冷/暖風功能，或同時使用兩項功能。

COOL MIST / HUMIDIFIER: Press "💧" key to start cool mist/humidifier function.

Caution: Before pressing this key, ensure that water is filled to water tank and has reached the minimum level of water tank.

\*COOL MIST and FAN / HEATER function can be operated together or independently.

5. 暖風：按 "☺" 鍵，冷暖風機將以高熱/低風速運作，LED顯示屏將會顯示H1，再按此鍵可轉換至低熱/高風速運作，LED顯示屏將會顯示H2。

Heating: Pressing the "☺" key, the Cooler/Heater will start operation at High Heat / Low wind speed, the LED display will show H1. Press this key again to set the Cooler/Heater into Low Heat / High wind Speed, the LED display will show H2.

6. 左右送風：按左右送風鍵 "↔"，即自動左右回轉送風。再按此鍵一次即可關掉左右送風。

OSC: To have the wind for different corners continually, press "↔" key. To turn off the function, press this key again.

7. 定時關機：按遙控器定時設置增加鍵 "⌚" 或定時設置減少鍵 "⌚" 選定9個不同的自動關機時間，分別由1至9小時，LED顯示屏將會顯示關機時間。

OFF TIMER: Press the "⌚" key or "⌚" key on the remote control, to set desired auto power off time. There are 9 time intervals, from 1 to 9-hours, The power off time is displayed on the LED display.

8. UV燈：在工作狀態下，可按UV燈鍵 "☀" 開啟UV燈。當UV燈開啟時，再次按此鍵可關閉UV燈。當使用暖風模式時，沒有UV燈功能。

UV LIGHT: In working state, press the UV light key "☀" to open the UV light. When the UV light is on, press this key again to turn off the UV light. When using Heating mode, there is no UV light function.

9. 關機：如需關機，按 "⏻" 鍵。

OFF: To turn the Cooler / Heater off, press the "⏻" key.

注意：當使用暖風功能時關機後的冷暖風機，風扇將繼續送風30秒，才完全停止運作。

Note: The FAN will work for 30 seconds to cool down the Heater and then turn OFF when using the Heating function.

\*\*\*注意：當冷暖風機發生傾倒時，冷暖風機會自動切斷電源，扶正機身後即可恢復運作。

\*\*\*Note: If the Cooler / Heater topples, the Cooler / Heater will cut the power automatically, and then get back to work after it restores the upright state.

\*\*\*注意：定期清潔後網以免積聚塵埃而導致風力減弱。

\*\*\*Note: Clean the rear grille regularly to avoid dust accumulation that can weaken the wind.



1. 遙控器操作方式與機身按鍵操作方式相同。
2. 安裝電池：放入兩枚 'AAA' 乾電池。  
注意：不可混合新舊或不同品牌的電池同時使用。
1. All functions performed by the Remote Control work are identical to the Manual.
2. Install battery: Install two 'AAA' batteries.  
Caution: Do not mix new and used or different brands of batteries.

#### 警告

 
- 1) 請把電池放在兒童碰不到的地方，如果孩子吞下電池，需立即致電諮詢醫生。
- 2) 不要對電池進行充電或隨意棄置在有火源的地方。
- 3) 應保持電池存放於乾燥，陰涼的地方。
- 4) 以正確的方向插入電池。

 電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

#### WARNING

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in right direction.

 Battery disposal - Please dispose the used battery per municipal or provincial law.

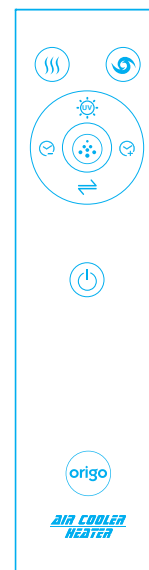

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

## 特殊安全裝置

### Safety Features

1. 冷暖風機內置恆溫保護裝置，防止機身過熱。  
A thermal overload protector is built-in to prevent overheating.
2. 因為安全起見，機身傾側即會自行停機。  
For safety reasons, the aircraft will automatically stop if the fuselage tilts.
3. 當機內溫度超出限定溫度，冷暖風機將自動停止操作。需要重新設置才可恢復正常：  
When the Cooler / Heater is overheat, it will be shut off automatically. To RESET the Cooler / Heater:
  - 3.1. 拔除插頭，等待30分鐘，讓機內溫度降低。  
Unplug the Cooler / Heater and wait for 30 minutes to cool down.
  - 3.2. 重新插上插頭，讓冷暖風機正常繼續操作。  
Turn ON the Cooler / Heater again to resume operation.

### 加水

當水箱內水位低於"MIN"時，便需要加冰水或冰粒。加冰水或冰粒前，請先將冷暖風關掉及將電源線從電源插座拔出。

- 拉出水箱，徐徐注入適量的冰水。

注意：當水升至水箱內最高水位刻度"MAX"時，請即停止加水，以防溢出。

- 完成後，將水箱推回原位。

注意：請先加冰/冰盒後才加冰水。

### Filling Water

When the water tank is empty or the water fallen below "MIN" marking, need to fill water or ice into the tank. Before filling, make sure that the AIR COOLER / HEATER has been switched off and it is unplugged from the main outlet.

- Pull out the water tank in the back of the unit.

- Fill cold water into the tank with a pot, fill cold water into the tank gradually.

CAUTION: Stop filling water when it has reached the "MAX" marking.

- Push back the water tank after completion of filling water.

CAUTION: To avoid overflow, add ice/ ice box first before filling cold water.

### 加冰粒

為達致更佳的冷霧效果，水箱可加入冰粒。

### Adding Ice

To have a better cooling effect, it can add ice to the water tank.

### 加冰盒

循環再用的冰盒可加入水箱，把水冷卻。將冰盒蓋扭開，注入清水並不可超過"MAX"，然後扭緊冰盒蓋(盒蓋扭緊後不能再扭開冰盒蓋)並將其放入冰箱。

提示：冰粒/盒愈多，制冷效果愈好。

### Adding Ice Box

Reusable ice box can be added to the water tank for cooling water. Unscrew the lid of the ice box and fill it with water, do not exceed "MAX" marking, then tighten the ice box lid(the ice box lid can not be opened again) and put it in the freezer.

TIPS: The more ice/ice boxes added, the cooler wind will be better.

### 提示/CAUTIONS:

- 為確保做出高品質的"冷霧"效果，我們建議使用"蒸餾水"或"過濾水"。

For higher quality of Cool Mist performance, we recommend to use the "Distilled Water" or Filtered Water .

- 在高度"潮濕"的環境下使用本產品，可能會出現"滴水"情況，此乃正常現象。

"Water Drops" may be occurred, if this appliance is using under High Humid environments.

- 如發現"冷霧"出口出現"滴水"情況，可能原因是受其他氣流影響，將"冷霧"倒吹回出口而做成，此乃正常現象。改善方法可嘗試將"冷霧"出口轉向其他方向。

Don't let the "Cool Mist" outlet opposite to other airflow, otherwise "Water Drops" may result.

## 注意 / CAUTION:

為保持最佳效能，請最少每月清洗冷暖風機一次。

It is recommended to clean the Air Cooler/Heater not less than once a month as to maintain its optimal performance.

警告: 不使用冷暖風機時，經常保持拔除電源，及切勿將冷暖風機浸於水或其他液體中。在清潔本冷暖風機前，先將冷暖風機關掉及把電源線從插座拔出。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE AIR COOLER/HEATER IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

外殼: 利用濕布抹去外殼的污積。不可弄濕機身(水箱除外)，切勿使用帶腐蝕性的清潔劑或溶液。

Housing: Clean the outside of unit with damp cloth. Do not use corrosive detergent or solvent to clean.

## 清潔及存放 / Cleaning And Storage:

### 後網 / Rear Grille

將後網兩枚螺絲拆除，輕輕按壓後網上方的扣鎖並拉出，用溫和清潔劑或軟毛刷清潔。

Remove the two screws from the rear grille.

Un-click the rear grille and pull it out.

Wash the grille with soap water or soft brush.

\*\*\*注意: 定期清潔後網以免積聚塵埃而導致風力減弱。

\*\*\*Note: Clean the rear grille regularly to avoid dust accumulation that can weaken the wind.

 
### 水箱 / Water Tank

把水箱排水栓扭出及將剩餘的水倒出，用溫和清潔劑或軟毛刷清潔水箱。

Unscrew the water stopper of the water tank and drain the residue water. Then wash the water tank with soap water or soft brush.

儲存: 連同使用說明書，把冷暖風機存放於清涼及乾爽的地方。

STORAGE: Store the Air Cooler/Heater with these instructions in the original box in a cool and dry place.

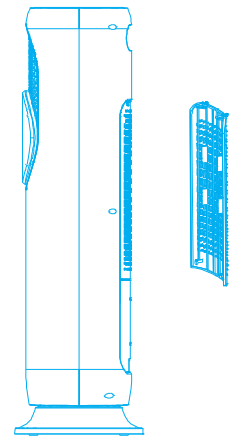


# 技術規格 Specification

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater



型號 Model Number	AC61
電源 Power Supply	220-240V~ 50-60Hz
額定功率 Rated Power	暖風/Heating:1800-2200瓦特/Watts 涼風/Cooling:60瓦特/Watts
最大注水量(Capacity Of Water Tank)	2.8公升/ L(約/Approx.)
淨重(Net Weight)	5.9千克(Kg) (約/Approx.)
產品尺寸 Product Dimension	21.5(W) x 81(H) x 21(D)cm (約/Approx.)
 
## 源澤地圖 Origin Map

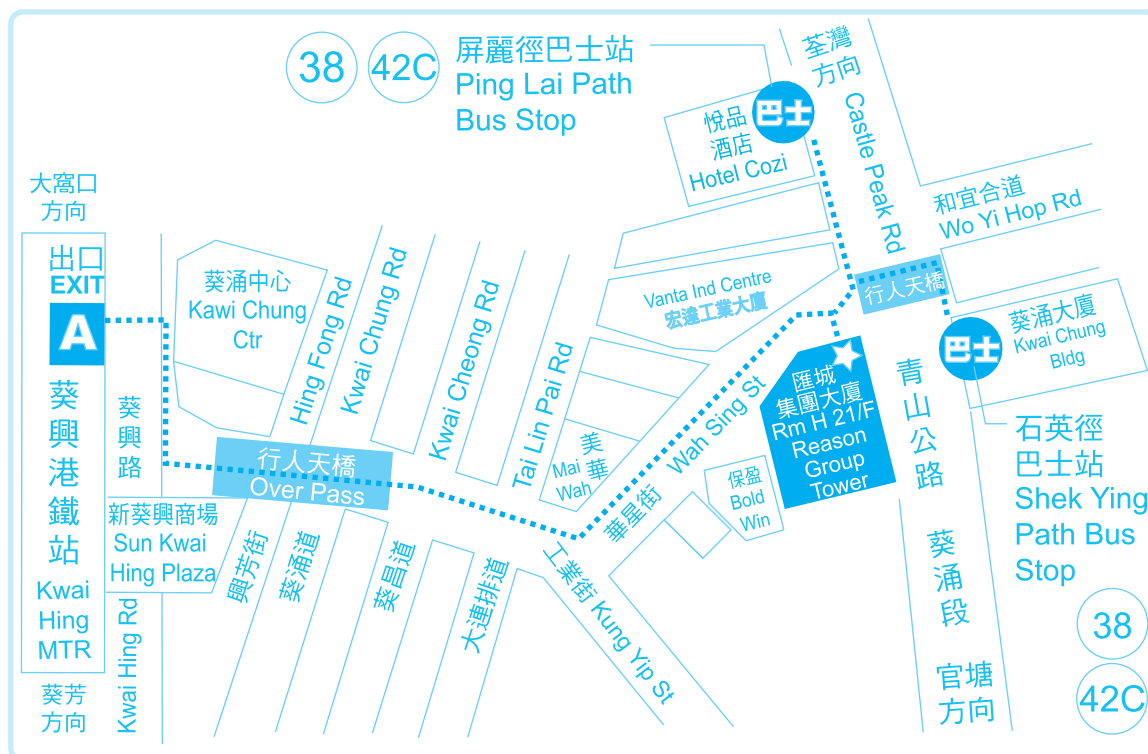

### 辦公時間

10:30am - 12:30pm ( 星期一至五)  
02:30pm - 05:30pm ( 星期一至五)  
10:30am - 12:30pm ( 星期六)  
(星期日及公眾假期休息)

### OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)  
02:30pm - 05:30pm (Mon to Fri)  
10:30am - 12:30pm (Saturday)  
(Closed on Sunday and Holiday)

# 保用

UV 冷 霧 冷 暖 風 機  
UV Cool Mist Air Cooler/Heater



產品： UV冷霧冷暖風機

型號： AC61

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月):

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、面蓋、水箱、冰盒、排水栓、後網、電源線及插頭，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

**升級保用：**(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用: 於本公司網站完成登記，可享共有15個月免費保用；或

B. 額外6個月保用: 到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

## 服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

www.origo.hk 電郵: info@origin.hk

電話: 2156 8238

www.origo.hk



Find us on



Instragarm



# Warranty

Item : UV Cool Mist Air Cooler/Heater

Model : AC61

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, cover, water tank, ice box, water stopper, rear grille, power cord & plug or accessories.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

**Extended Warranty: (Complete following procedure within 10 days from the date of purchase.**

Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

## Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),

403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origo.hk Email: info@origin.hk

Tel: 2156 8238

www.origo.hk



Find us on



Instragarm

