




# Saphire<sup>+</sup>

3D Convection Fan  
立體搖擺對流風扇

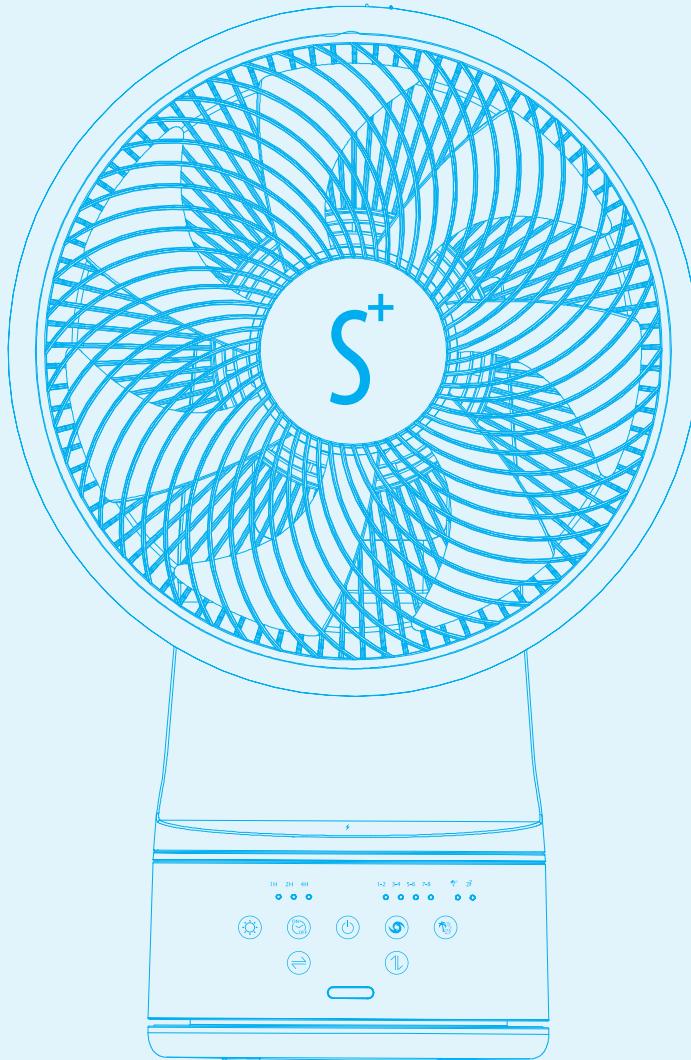


## CF1521 使用說明書 Instruction Manual

- 使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。
- 本說明書及其修正版本（如有）可於本公司網站[www.origin.hk](http://www.origin.hk)下載。
- 本說明書所載的功能、外觀、圖片及數據皆以實物為準。
- Read all instructions before using the product. Keep this manual for future reference.
- This instruction manual is also available at [www.origin.hk](http://www.origin.hk).
- In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.



- 使用產品前，請先細閱使用說明書。  
Read all instructions carefully before using the product.
- 必須按照使用說明書指示操作本產品，否則可能引致產品損壞、短路、火警或人命損傷。
- Use this product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。Open the package and ensure that the product is undamaged. In case of doubt, do not use the product and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。  
Do not let children play parts of package.
- 本產品只能使用本機所提供的電源適配器。  
This product can only be used with the power adapter provided with the product.
- 本產品所提供的電源適配器僅供本產品使用。  
The power adaptor provided is designed for this product only.
- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。  
Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.

- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。
- Avoid using extension cord as it may overheat and cause fire.

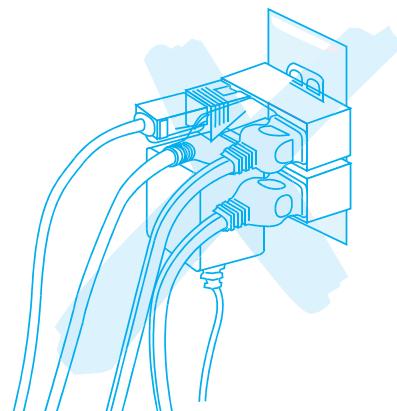

- 本產品不適用於室外及作工業用途。  
This product is intended for household use ONLY and not for industrial or outdoor use.

- 切勿將任何異物放入本產品內；或阻擋產品出風口及入風口，皆因以上一切行為均可能導致產品損壞。
- Do not insert any objects into the product as it may cause an electric shock or damage. Do not block or tamper with the product in any manner while it is in operation.
- 非使用本產品時請拔除插頭，切斷電源。
- Do not leave the product unattended. Always unplug the power plug when the product not in use.
- 警告：◎鍵不應作為切斷電源的用途。
- WARNING: The ◎ switch should not be used as the sole means of disconnecting power. Always unplug the power plug before servicing or moving the product.
- 切勿將本產品擺放在發熱源頭或火源附近。
- Do not place the product near a source of heat or fire.
- 不可在潮濕或有積水的環境使用，不可將本產品擺放於浴缸或大型容器上面。
- The product is not intended for use in wet or damp locations. Never locate the product where it may fall into a bathtub or other water container.
- 如須移動本產品，請先拔除插頭切斷電源。
- Always disconnected the product from the power supply when moving it from one location to another.
- 警告：清理前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。
- WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 請保持清潔以維持本產品處於良好狀態(詳細請參閱清理及維護部份)。
- Keep the product clean to maintain in good condition (refer to maintenance section).
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
-  This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

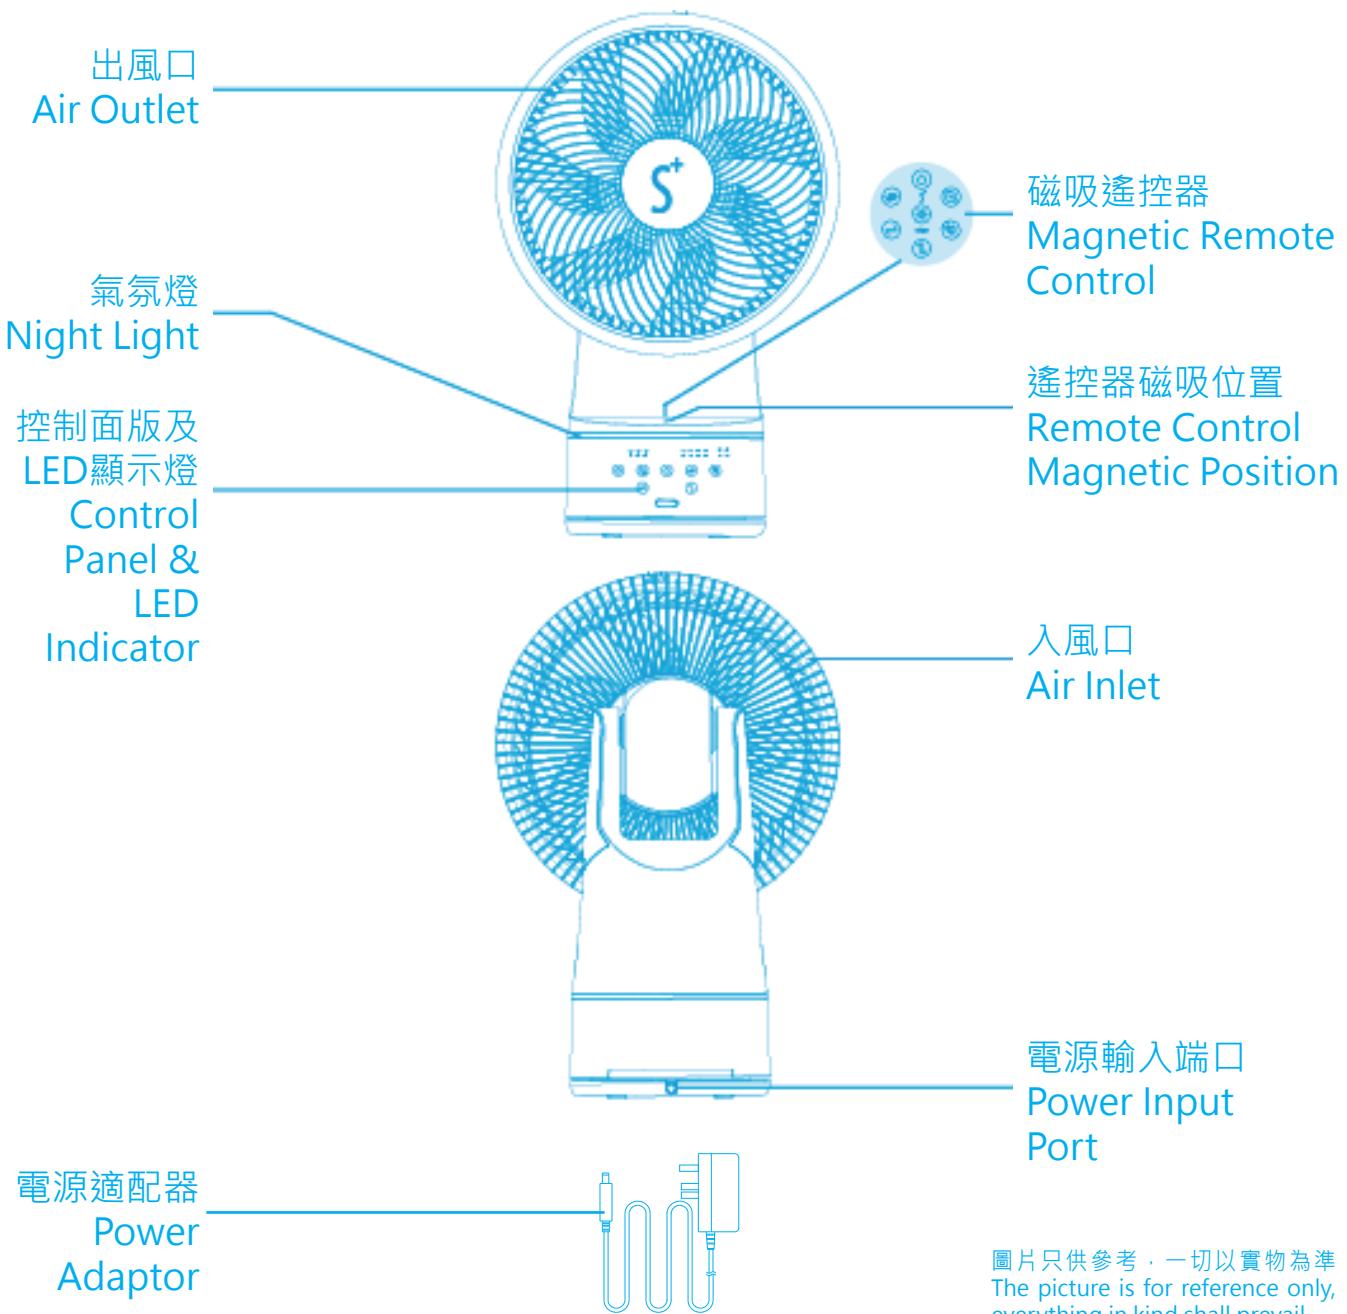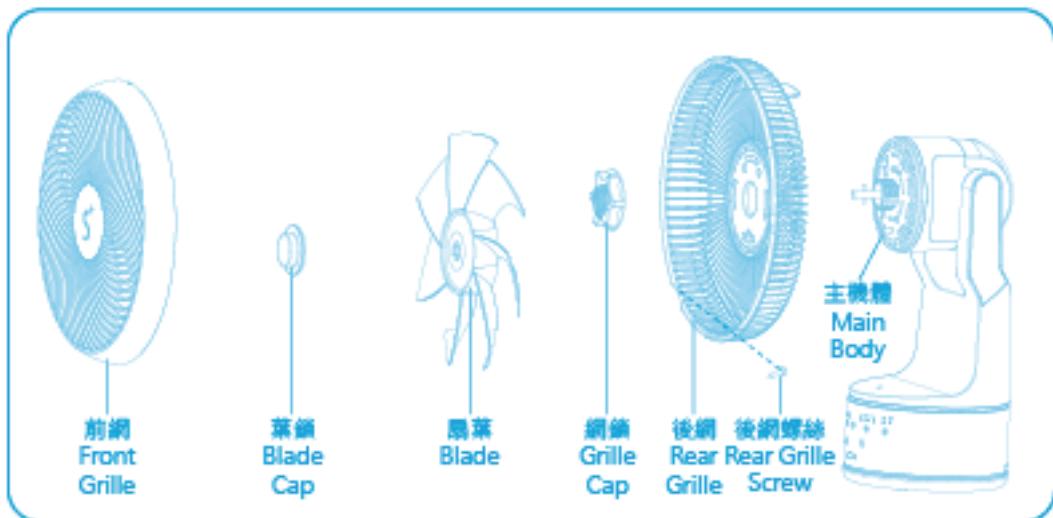

圖片只供參考，一切以實物為準  
The picture is for reference only,  
everything in kind shall prevail.


- 風扇可使用控制面板按鍵操控(如圖1)，或改用遙控器操控。
- The Fan may be operated by the control panel (as shown in Figure 1) or using remote control.
- 將風扇擺放於穩固的平面上，將電源適配器接駁到風扇電源輸入端口，再將插頭插入獨立插座，風扇會嗶嗶聲響起，風扇已可使用。
- Place the Fan on a stable and flat surface. Plug the power adaptor to the power socket, then plug the power plug into an electrical outlet, the Fan will have beep beep sounds, the Fan is ready to use.
- 開/關: 按  鍵，風扇以第3段風速啟動。
- POWER: Turn the Fan ON by pressing the  key, the Fan start at speed 3.



圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

- 風速: 按風速設定鍵 ，設定所需風速: 8段風速。LED顯示燈將會顯示風速。
- SPEED: Adjust the Fan speed to the desired level: 8 levels wind speed by pressing  key. The speed setting is displayed on the LED indicator.
- 上下送風: 按上下送風鍵  風扇以自動上下搖擺模式送風。如欲停止自動上下搖擺送風，再按此鍵一次。
- OSC(UP/DOWN): Press the  key to allow the Fan to UP/DOWN oscillate the wind direction. To stop the oscillation, press this key again.
- 左右送風: 按左右送風鍵 ，風扇以自動左右搖擺模式送風，如欲停止自動左右搖擺送風，再按此鍵一次。
- OSC(LEFT/RIGHT): Press the  key to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, press this key again.
- 送風模式: 按送風模式鍵  設定所需送風模式：自然風或睡眠風。LED顯示燈將會顯示送風模式。按送風模式鍵三次，送風模式會變回常風。
- MODE: Press the  key to set the Fan as natural or sleep mode. The mode is displayed on the LED indicator. Press the mode key 3 times, it will come back to default setting normal mode.
- 預約關機: 按預約開關鍵 ，選定7個不同的自動關機時間，分別由1至7小時，LED顯示燈將會顯示關機時間。
- PRESET OFF TIME: Press the  key to set desired auto power off time. There are 7 time intervals, from 1 to 7-hours, the power off time is displayed on the LED indicator.

- 預約開機: 在待機狀態下，按下預約開關鍵 ，選定7個不同的預約開機時間，分別由1至7小時，LED顯示燈將會顯示所選開機時間及長亮，當LED顯示燈亮起時，可同時設置上下及左右送風、送風模式及風速等功能。
- PRESET START TIME: In Standby state, pressing the  key to set desired preset power start time, there are 7 time intervals, from 1 to 7 hours. The LED indicator will be light up and displayed the start time setting. OSC, MODE and SPEED can be set at the same time when the LED indicator light up.
- 氣氛燈: 按氣氛燈鍵  氣氛燈預設為冷光，亮度為最高，再按此鍵一次，亮度變為中，再按此鍵一次，亮度變為最低，再按此鍵一次，氣氛燈關閉。色溫設定: 在氣氛燈工作狀態下，長按此鍵3秒，氣氛燈切換為暖光，再長按此鍵3秒，切換為冷光。(氣氛燈可獨立使用。)
- NIGHT LIGHT: Press the  key, the night light is preset to cold light and the brightness is the high. Press this key again to change the brightness to medium. Press this key again to change the brightness to the low. Press this key again, the night light turn off. Color temperature setting: When the night light is working, long press this key for 3 seconds and the night light will switch to warm light. Long press this key for 3 seconds again to switch to cold light. (The night light can be used independently.)
- 關機: 如需關機，再按  鍵一次。
- OFF: To turn the Fan off, press the  key again.

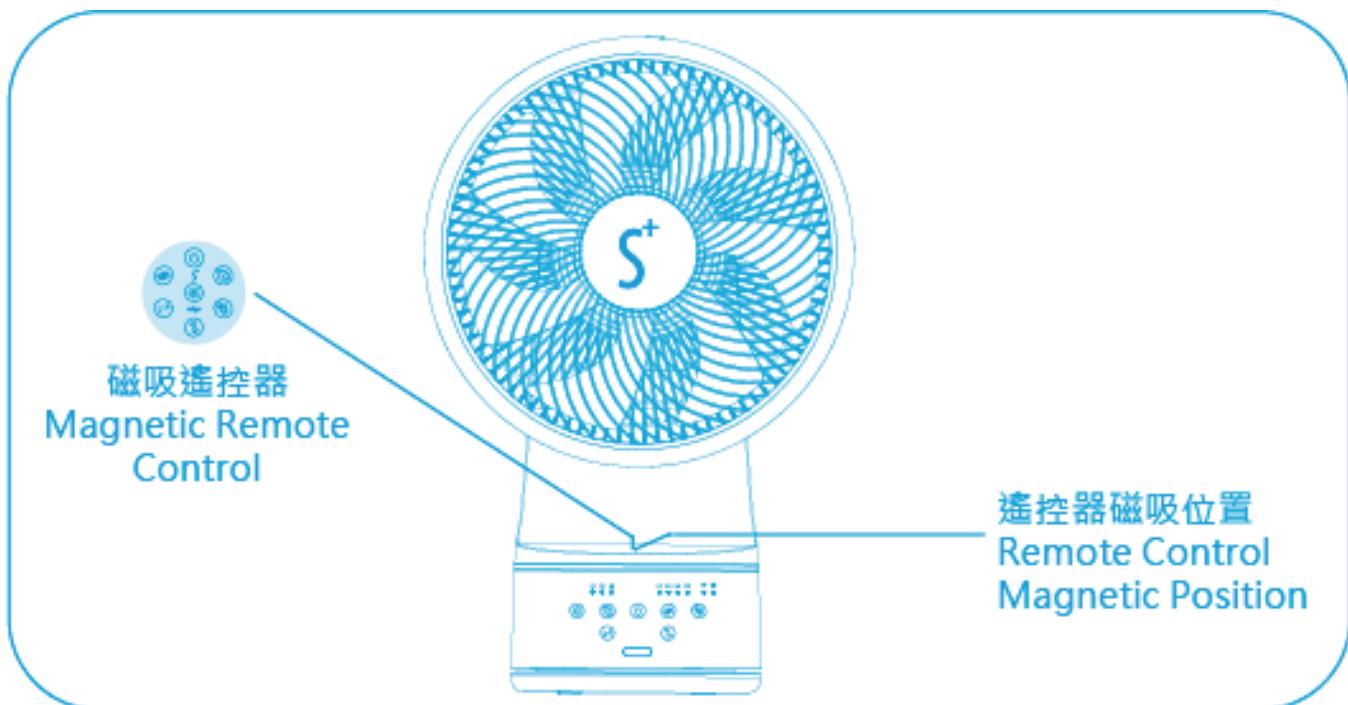

遙控器可以磁吸在風扇中間位置。

The remote control can be magnetically attached on the middle of the Fan.

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

- 遙控器操作方式與機身按鍵操作方式相同。
- 更換電池：依遙控器所示電池型號，安裝一枚3伏特鋰電池。
- All functions performed by the Remote Control work are identical to the Manual.
- Battery replacement: According to the battery model shown on the remote control, install a 3V Lithium battery.



#### 警告


1. 請把電池放在兒童碰不到的地方，如果孩子吞下電池，需立即致電諮詢醫生。
2. 不要對電池進行充電或隨意棄置在有火源的地方。
3. 應保持電池存放於乾燥，陰涼的地方。
4. 以正確的方向插入電池。

電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

#### WARNING

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in right direction.

Battery disposal - Please dispose the used battery per municipal law.

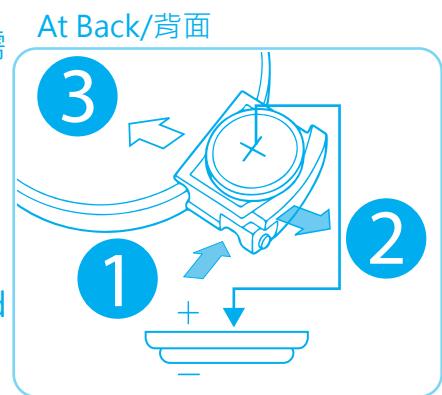

## 清理及維護

### Maintenance

警告：不使用風扇時，經常保持拔除電源，及切勿將風扇浸於水或其他液體中。在清潔本風扇前，先將風扇關掉及把電源線從插座拔出。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

外殼：清理時切勿將風扇浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

House: Clean the outside of the Fan with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.

注意：切勿使用含有腐蝕性的清潔劑或溶液清理風扇。


CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS.

儲存：連同使用說明書，把風扇存放於清涼及乾爽的地方。

STORAGE: Store the Fan with these instructions in the original box in a cool and dry place.

型號 Model Number	CF1521
輸入 Input	DC 24V 1.5A
額定功率 Rated Power	24W
淨重 Net Weight	2600克(gram) (約/Approx.)
產品尺寸 Product Dimension	300(W) x 459(H) x 214(D) mm (約/Approx.)

## 源澤地圖 Origin Map

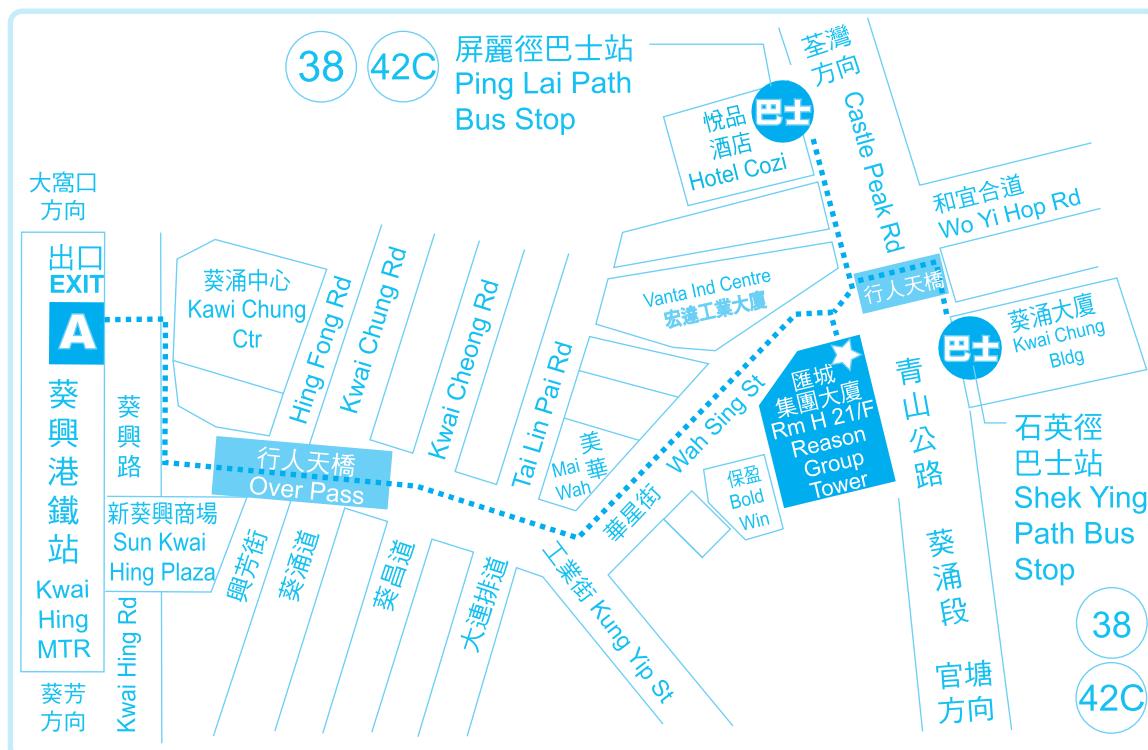

### 辦公時間

10:30am - 12:30pm (星期一至五)  
02:30pm - 05:30pm (星期一至五)  
10:30am - 12:30pm (星期六)  
(星期日及公眾假期休息)

### OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)  
02:30pm - 05:30pm (Mon to Fri)  
10:30am - 12:30pm (Saturday)  
(Closed on Sunday and Holiday)

產品: 立體搖擺對流風扇

型號: CF1521

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、前網、扇葉、葉鎖、後網、網鎖、後網螺絲、遙控器、電源適配器，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

升級保用：(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用：於本公司網站完成登記，可享有共15個月免費保用；或

B.額外6個月保用：到訪並“追蹤”本公司(Origin Marketing Limited)的Facebook，即可享有共18個月免費保用。  
(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。**服務中心**

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk

電話: 2156 8238



## Warranty

Item : 3D Convection Fan

Model : CF1521

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, front guard, fan blade, blade cap, rear guard, guard cap, rear grille screw remote control, adaptor or accessories, is excluded from this warranty.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase.

Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.) responsible for repairing the product, and/or replacing parts at free of charge.

**Service Centre**

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),  
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

