



圖片只供參考，一切以實物為準
The picture is for reference only,
everything in kind shall prevail.

1

打開
Open

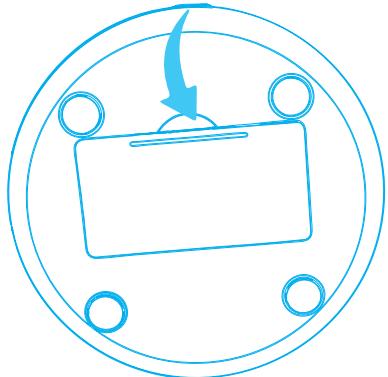

2

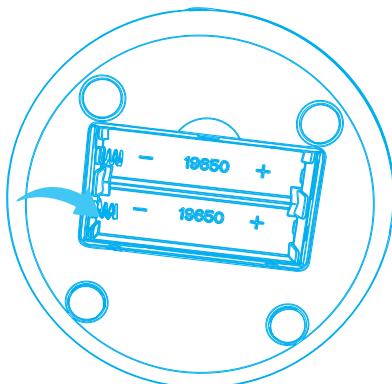


1. 將風扇反轉並打開風扇底部的電池蓋。
Reverse the Fan and open the battery cover on the bottom of the Fan.

2. 放入2枚由製造商供應之電池。


Insert 2 batteries supplied by the manufacturer.

3

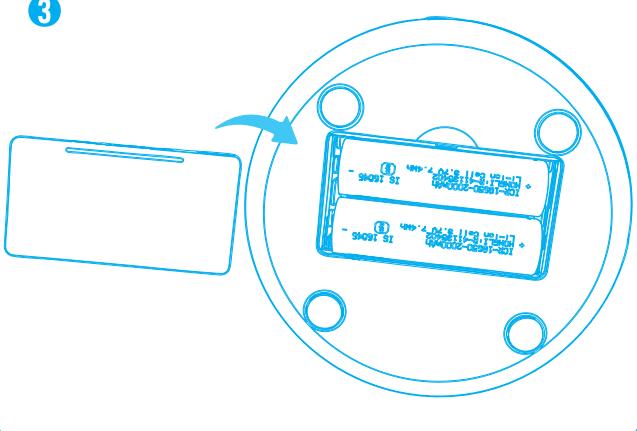

3. 關閉電池蓋並蓋緊。
Close the battery Cover.

4

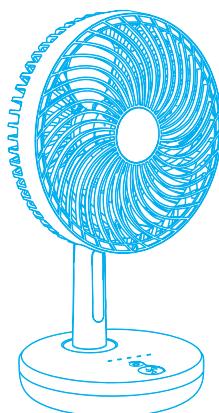

4. 將風扇擺放於穩固的平面上，風扇已可使用。

Place the Fan on a stable and flat surface, the Fan is ready to use.


注意 / Caution:

- 不可使用非由製造商供應之電池。
- Do not use any other battery that is not supplied by the manufacturer.
- 本產品必須安裝電池後才可使用，切勿在沒有電池情況下直接連接USB線使用。
- This product need to install batteries before using. Do not use it directly by connecting the USB cable without batteries.

圖片只供參考，一切以實物為準。
The picture is for reference only,
everything in kind shall prevail.

主要按鍵 | Function Keys

- 風扇可使用控制面板按鍵操控(如圖1)。
- The Fan may be operated by the control panel (as shown in Figure 1) .
- 開/關: 按開關/風速按鈕，風扇以低風速啟動。
- POWER: Turn the Fan on by pressing the on/off Speed button, the Fan start at Low speed.

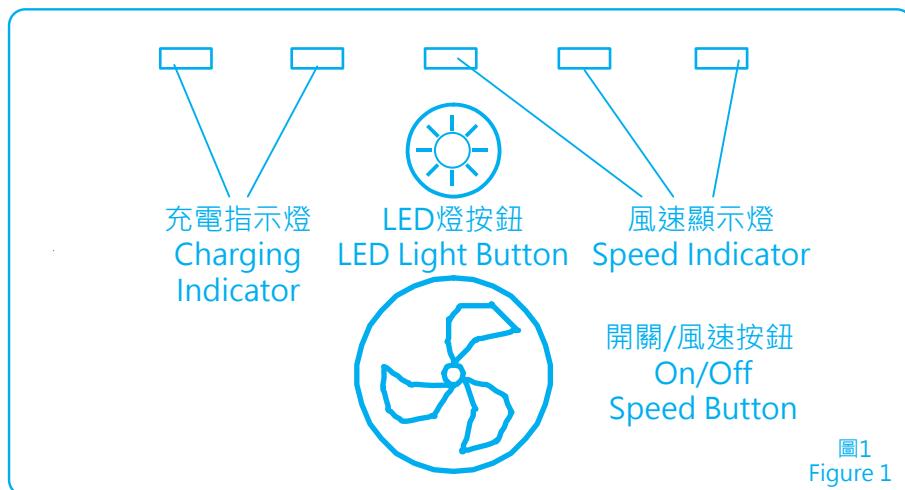

- 風速: 按開關/風速按鈕，設定所需風速：低、中、高。LED風速顯示燈將會顯示風速。
- SPEED: Adjust the Fan speed to the desired level: Low, Medium, or High by pressing on/off speed button. The speed setting is displayed on the speed indicator.
- 左右送風: 旋轉左右搖擺旋鈕至ON位置，風扇以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再旋轉此旋鈕至OFF位置。
- OSC(LEFT/RIGHT): Rotate the OSC knob to ON position to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, rotate the OSC knob again to OFF position.
- 上下角度調校: 風扇可以手動方式調整送風方向。
- UP/DOWN ANGLE ADJUSTMENT: Fan can be manually adjusted the wind direction.
- LED燈: 按下LED燈按鈕打開LED燈，設定所需光度：低、高。如欲關閉LED燈，再按此按鈕直至LED燈關閉為止。(LED燈可獨立使用。)
- LED LIGHT: Turn on the LED light and adjust the required light level to the desired level: Low or High by pressing LED light button. To turn off the LED light, press this button until the LED light off. (LED lights can be used independently.)
- 關機: 如需關機，按開關/風速按鈕直至停機為止。
- OFF: To turn the Fan off, press the on/off speed button until it stops.

充電/操作時間 | CHARGING/OPERATION TIME:


- 充電時間 : 約5-7小時。
- Charging Time : Approx. 5-7 Hours.
- 操作時間 : 最長約13小時(跟據不同設定)。
- Operation Time : Approx. 13 Hours (Max.) (Depending on different settings).
- 提示 : 根據電池壽命，充電池的使用時間會持續縮短。
- Reminder : According to the battery nature, the using time of the rechargeable battery will be shortened continuously.

充電 | CHARGING :

將USB線連接到設備(例如:電源適配器(需自備))，另一端連接到產品的電源輸入端口，為本產品充電。

Connect the USB cable to a device(e.g. power adaptor(not included)), and the power input port of the product to charge the product.

- 首次充電時間: 最少充電約7小時。
- First charging time: At least 7 Hours.
- 充電時充電指示燈顯示紅色，充電完成時，指示燈轉為綠色。
- The charging indicator light turn red while charging and the indicator light turns green when charging is complete.
- 如本產品長期不使用時，建議每三個月充電一次，避免電池損壞導致產品不能使用。
- It is recommended to charge it every 3 months to avoid battery damage and affect product functions if the product is not working for a longtime.
- 建議使用DC5V 2.0A電源充電，否則會使充電池的壽命縮短。(電源適配器不包括在內)
- It is recommended to use DC5V 2.0A power supply for charging to achieve the better battery performance. (Power adaptor not included)
- 充電及使用時間視乎設定和環境因素而定；實際結果可能有所差異。
- Charging and operation time vary with settings and environmental factors; actual results will vary.

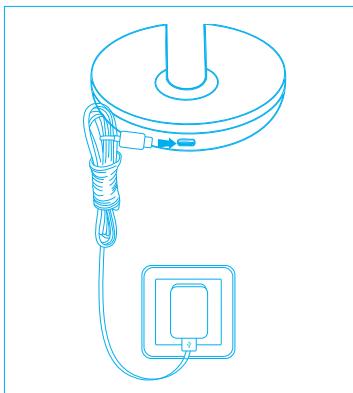

圖片只供參考，一切以實物為準
The picture is for reference only,
everything in kind shall prevail.

警告：切勿將風扇浸於水或其他液體中。在清潔本風扇前，先將風扇關掉及把USB充電線拔除。

WARNING: UNPLUG THE USB CABLE BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF.

外殼：清理時切勿將風扇及USB充電線浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

House: Clean the outside of the Fan and USB cable with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.

注意：切勿使用含有腐蝕性的清潔劑或溶液清理風扇及USB充電線。

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan and USB cable. NEVER use ALCOHOL or any other SOLVENTS.


儲存：連同使用說明書，把風扇及USB充電線存放於清涼及乾爽的地方。

STORAGE: Store the Fan and USB cable with these instructions in the original box in a cool and dry place.

技術規格

Specification

型號 Model Number	CF-M88
輸入 Input	DC5V 2.0A / USB-C Port
電池 Battery	Li-ion 2 x 2000mAh
充電 Charging	5-7小時/Hours(約/Approx.)
操作時間 Operation	13小時/Hours (約/Approx.)
尺寸 Dimension	160(W) x 265(H) x 150(D)mm(約/Approx.)
淨重 Net Weight	438克(gram) (約/Approx.)

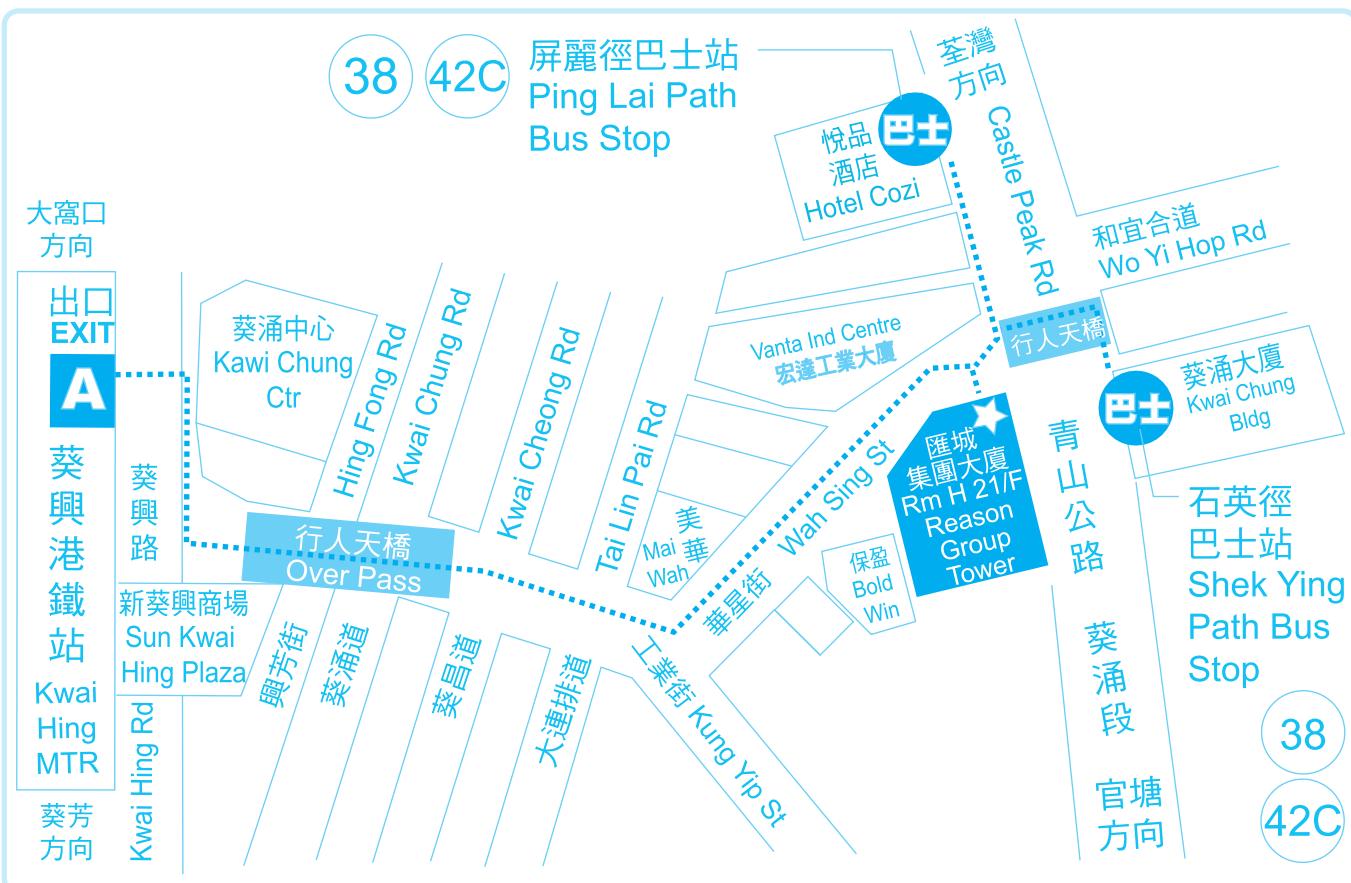

辦公時間

10:30am - 12:30pm (星期一至五)
02:30pm - 05:30pm (星期一至五)
10:30am - 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)
02:30pm - 05:30pm (Mon to Fri)
10:30am - 12:30pm (Saturday)
(Closed on Sunday and Holiday)

產品：迷你充電式對流風扇

型號：CF-M88

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、前網、前網螺絲、扇葉、後網、可拆式電池、USB Type-C 充電線，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

升級保用：(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用：於本公司網站完成登記，可享有共15個月免費保用；或

B.額外6個月保用：到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。
(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。**服務中心**

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk

電話: 2156 8238

www.origin.hk

Find us on 

Instragarm



Warranty

Item : Rechargeable Convection Fan

Model : CF-M88

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, front grille, front grille screw, fan blade, rear grille, removable battery, USB Type-C cable or accessories, is excluded from this warranty.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase.

Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.) responsible for repairing the product, and/or replacing parts at free of charge.

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),

403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

www.origin.hk

Find us on 

Instragarm

