

MODEL & SPECIFICATION

Product Name	Rechargeable Salt & Pepper Grinder
Product Model	SP12
Input Voltage	DC5V 2A (Max.)
Battery	Li-ion 300mAh x 2
Charging Time	Approx. 2 Hours
Chamber Capacity	30 ML (Approx) Per unit
Product Size	114(W) X 147(H) X 54(D)mm (Approx)
Grinder Size/Unit	38(W) X 142(H) X 38(D)mm (Approx)
Net Weight	460 Gram (Approx)
Accessories	Storage Base, Grinder x 2, USB Type-C Cable and User Manual

ATTENTIONS

- This product is **not intended** for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.
- This product contains a lithium battery, and it is forbidden to disassemble, strike, crush, or throw it into fire. Do not use if severe swelling occurs. Do not place in a high temperature environment.
- This Product is intended for household use ONLY and not for industrial or outdoor use. Use this Product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- Open the package and ensure that the Product is undamaged. In case of doubt, do not use the Product and contact your supplier.
- Do not let children play with any part of the packaging.

RECHARGE & BATTERY REMINDER

- Use only the supplied USB cable to charge the product.
- Use the corresponding charger according to the specification table.
- Do not charge while operating the product.

DIRECTIONS FOR USE

- Holding the Grinder, turn it clockwise as shown and open the chamber.

MAINTENANCE & CARE

- The grinding chamber can be rinsed with clean water. Do not soak it or place it in a dishwasher. (Note: Do not rinse the main unit of the Grinder with water).
- Fill the chamber with peppercorns or salt crystals, turn counterclockwise to lock the chamber onto the Grinder.
- Rotate the fineness adjuster to achieve the desired grinding coarseness.
- Take off the cap, press and hold the on/off button to grind, release the button to stop.
- This product features an adjustable grinding mechanism. The adjustment knob can be rotated between the finest and the coarsest grinding.
- Adjust to Finer: Rotate the fineness adjuster counterclockwise until the desired fineness is achieved.
- Adjust to Coarser: Rotate the fineness adjuster clockwise until the desired coarseness is achieved.
- If the fineness adjuster loosens, it could be caused by some pepper grains stuck in the disc.

TROUBLE SHOOTING

If the Grinder does not work or stops while grinding:

- Please charge it. (Note: It is not recommended to use the product while charging).
- Please adjust the fineness adjuster with clockwise direction.
- If the above operations are all correct and the Grinder still works abnormally, please contact the customer service for maintenance service.

WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the fuselage, Type-C cable, base, cap and other accessories, damage or defect caused by negligence or use not according to this instruction manual. (Simply keep the purchase receipt; no registration is required).

Extended Warranty: (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to commercial use)

Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 1.8 months of warranty. (If you have already followed, no need to do it again.)

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

SERVICE CENTRE

ORIGIN MARKETING LIMITED
Unit H21/F, Reason Group Tower (nearby 17 Wang Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.
www.origin.hk Email: info@origin.hk
Tel: (852) 2156 8238

Office Hours
10:30am - 12:30pm (Mon ~ Fri)
02:30pm - 05:30pm (Mon ~ Fri)
10:30am - 12:30pm (Sat)
(Closed on Sunday and Holiday)

www.origin.hk

Find us on

Instagram

Origin Map

User Manual

Model: SP12

Read all instructions before using the product. Keep this manual for future reference.

This instruction manual is also available at www.origin.hk.


In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.

The picture is for reference only, the actual product shall prevail.




充電式鹽及胡椒研磨器

使用說明書

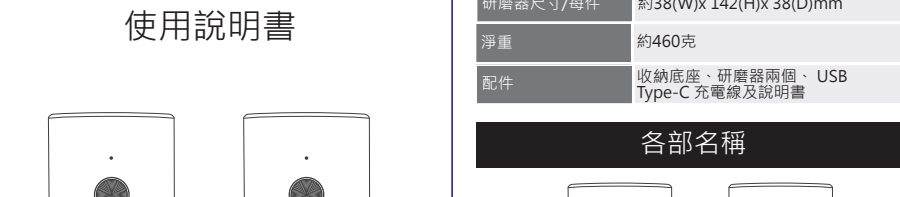

各部名稱

名稱	型號及規格
名稱	充電式鹽及胡椒研磨器
型號	SP12
輸入電壓	DC5V 2A (Max.)
電池	Li-ion 300mAh x 2
充電時間	約2小時
容量尺寸	每個約30毫升
產品尺寸	約114(W)x147(H)x54(D)mm
研磨尺寸/每杯	約38(W)x142(H)x38(D)mm
淨重	約460克
配件	收納底座、研磨器兩個、USB Type-C 充電線及說明書

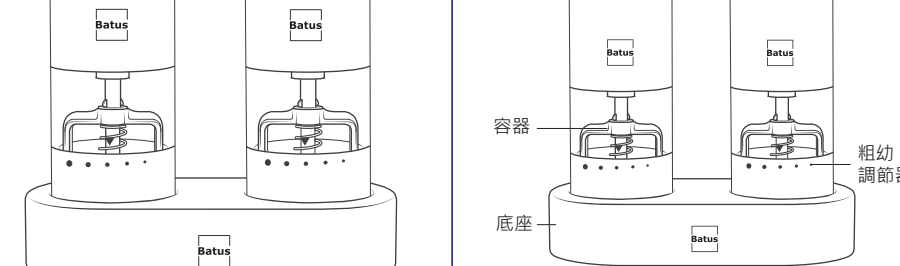

產品型號: SP12

使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。本說明書及其修正版本（如有）可於本公司網站www.origin.hk下查閱。本說明書所載的功能、外觀、圖片及數據皆以實物為準。

重要安全提示

- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用。除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
- 本產品是家用或在類似環境使用。例如:商店內部、辦事處以及其他類似工作環境的廚房區域、農舍、客戶在旅館、汽車旅館和其他住宅類型的環境。
- 本產品內有鋰電池，禁止拆解、撞擊、擠壓或投入火中。若出現嚴重鼓脹，請勿繼續使用。請勿置於高溫環境。
- 本產品不適用於室外及作工業用途。
- 必須按照使用說明書指示操作本產品，否則可能引起產品損壞、短路、火警或人命損傷。
- 打開包裝，檢查產品，如發現產品有損壞，請物使用及即時聯絡供應商。
- 包裝物料並非玩具，不可讓小孩玩耍。
- 本產品內置充電電池，請使用本產品提供的USB電線線產品進行完全充電。
- 不可擅自拆卸、修理、改造本產品，如有任何問題請先致電客戶服務中心。
- 本產品僅適用於胡椒和鹽，請勿用於其他用途。
- 請勿強行拉緊或扭轉產品或嘗試加快轉速的速度。

充電及電池使用安全提示

- 必須使用本機附設的USB線為本機充電。
- 依規格表列使用相應的充電器。
- 為避免過熱和損壞裝置或電池，切勿在充電時使用本機。
- 充滿電後，必須拔除充電線，長時間充電，可能造成充電電池過熱及燃燒等危險。
- 切勿在USB充電線連接的情況下為產品充電。
- 充電前，須確保產品的電源已關閉。
- 切勿使用有殘缺或鬆動的USB充電器。使用前確保USB充電器及充電線已充分抹乾及使用時插穩。
- 切勿使用無線充電。
- 充電期間，切勿離開本產品。
- 充電進行中，充電器及產品會變熱，此乃正常現象。(充電器不包括在內)
- 切勿在USB充電器、充電線及產品上放置物品或讓其接觸灼熱的表面；切勿夾住、改裝、用力拉扯或扭曲USB充電器、充電線及產品。

使用方法

- 握住研磨機，根據圖示順時針旋轉並打開磨器。
- 將胡椒顆粒或鹽晶體放入容器內，逆時針旋轉磨器鎖緊在研磨器。

清理及維護

研磨器容器可以用清水沖洗來清潔，但請勿浸泡或放入洗碗機。(注意:請勿用水沖洗研磨器主機。)

取出蓋，按住開/關按鈕開始研磨，鬆開按鈕止研磨。

研磨器底座可拆卸。

底座可直接清洗。

注意：切勿使用含有腐蝕性的清潔劑或溶液清理研磨器。儲存：連同使用說明書，把研磨器存放於清潔及乾燥的地方。

故障排除

如果研磨器在研磨時不工作或不停止:

- 請充電。(註:不建議在充電時使用產品。)
- 請順時針方向調整調節器。
- 若以上操作均正確，研磨器仍然工作異常，請聯絡客戶服務中心進行維修服務。

服務中心

源澤事務有限公司
香港新界葵青青山公路403號
匯城集團大廈21樓H座(近華星街12號)
www.origin.hk 電郵: info@origin.hk
電話: (852) 2156 8238

辦公時間

上午10:30 - 下午12:30 (星期一至五)
下午02:30 - 下午05:30 (星期一至五)
上午10:30 - 下午12:30 (星期六)
(星期日及公眾假期休息)

www.origin.hk Find us on Instagram

源澤地圖

