

- 警告；清潔前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。
- WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 如須移動暖風機，請先拔除插頭切斷電源。
- Always disconnect the Heater from the power supply when moving it from one location to another.
- 切勿將水倒入機身或將濕衣服掛在機身上，避免發生漏電及觸電危險。嚴禁將易燃物及濕的衣物覆蓋在機身出風口上，避免發生火災或觸電危險。
- Please do not pour water into the Heater or hang wet clothes over the Heater so as to avoid electrical leakage and electric shock; Do not cover the air outlet with flammable materials or wet clothes, as this may cause a fire or electric shock.
- 注意：本產品的某些部位使用時會變得非常熱，並可能導致燙傷，兒童及易受傷害人士應特別注意。
- CAUTION: After use, some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
-  This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.



正面
FRONT

指示燈
Indicator
Light

出風口
Air Outlet

底座
Base

LED顯示屏
LED
Display

控制面板
Control
Panel

背面
BACK

後網
Rear Grille

把手
Handle

入風口
Air Inlet

總電源開/關鍵
Main Power Switch

電源線
Power Cord

插頭
Plug

圖片只供參考，一切以實物為準
The picture is for reference only,
the actual product shall prevail.

注意：第一次使用暖風機，可能會出現少量氣味約數分鐘，因本產品在生產時發熱元件帶有一層保護油，此乃正常現象。

NOTE: For first time operation, there may be a slight odor for a few minutes. This is because the Heater has some protective oil on the surface of the heating element.

暖風機可使用機身頂部控制面板或改用遙控器操控。

The Heater may be operated by the control panel located on the Heater or using the remote control.

- 將暖風機擺放於穩固的平面上。
- Place the Heater on a stable flat surface.
- 按總電源開/關鍵至關機狀態'O'，將插頭插入獨立插座。按總電源開/關鍵至開機狀態'I'，暖風機會嗶聲響起，LED顯示屏會顯示 --，暖風機已可使用。
- Set the Main Power Switch to 'O' position. Plug the Power Cord into an electrical outlet. Press the Main Power Switch to 'I' position, The Heater will beep, and the LED display will show --, the Heater is ready to use.
- 開/關：按  鍵，暖風機將以低熱模式運作，LO指示燈同時亮起。
- ON/OFF: Press the  key, the Heater will start operation at Low Heat, the LO indicator will light up.
- 模式：按  鍵，暖風機將以不同模式運作：低熱、高熱、或ECO。
- 低熱 - LED會顯示 LO，橙色指示燈亮起。
- 高熱 - LED會顯示 HI，紅色指示燈亮起。
- ECO- LED會顯示 ECO，綠色指示燈亮起。
- Mode : Pressing the  key to switch between different modes: Low Heat, High Heat or ECO.
- Low Heat - LED will display LO, the orange indicator light illuminates.
- High Heat - LED will display HI, the red indicator light illuminates.
- ECO- LED will display ECO, the green indicator light illuminates.
- 左右送風：按  鍵，暖風機以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。
- OSC : Pressing the  key will allow the Heater to oscillate the wind direction. To stop the oscillation, press this key again.
- 定時關機：暖風機在工作狀態下，連續按  鍵選擇需要設定的自動關機時間(可設定自動關機時間：1-8小時)。
- Timer(Shut-off): When the Heater is ON, press the  key to increase or decrease the length of operation from 1-8 hours.

- ECO功能：在ECO狀態下，暖風機進入溫度設定模式。
 - 連續按  鍵或按遙控器上  或  鍵選擇需要設定的溫度，可設定溫度：18-35°C
 - 當室內溫度達到設定溫度，暖風機會自動停止工作。
 - 當室內溫度低於設定溫度，暖風機會自動恢復工作。
 - 注意：在溫度控制的設定狀態下，暖風機將不斷循環的自動開機/關機工作。
- ECO Function: In this working mode, the Heater has entered SET TEMP .
 - Press the  key or the  or  key on the remote control to increase or decrease the desired temperature. Adjustable temperature range: 18-35°C .
 - When the air temperature reaches the 'SET TEMP', the Heater will stop heating.
 - When the air temperature drops below the 'SET TEMP', the Heater will turn back on automatically.
 - Note: It is normal for the Heater to repeat ON and OFF as it maintains the SET TEMP.
- 鎖定功能：暖風機在20秒無操作後，控制面板會被自動鎖定， 指示燈同時亮起。長按  鍵3秒或按  鍵直接關閉暖風機並退出鎖定功能;再次按下  鍵，暖風機重新啟動，鎖定即可解除。
- LOCK: In the standby or working state, the control panel will automatically lock after 20 seconds of inactivity,  LED lights up. To release lock function, press and hold the  key for 3 seconds or press the  key to turn off the Heater and exit the lock function; press the  key again to restart the Heater, control panel is unlocked.
- 關機：如需關機，按  鍵。為使機內溫度下降，關機後的暖風機，風扇將繼續送風30秒，才完全停止運作，之後再按總電源開/關鍵至關機狀態。
- OFF : To turn the Heater off, press the  key. The FAN will work for 30 seconds to cool down the Heater and then turn OFF, then set the Main Power Switch to 'OFF' position.

*** 注意：本暖風機內置傾倒自動斷電裝置，暖風機傾倒時會發出聲響，這是正常現象。

*** Note: When the Heater is tipped over, the tipping device makes a sound, which is a normal phenomenon.