


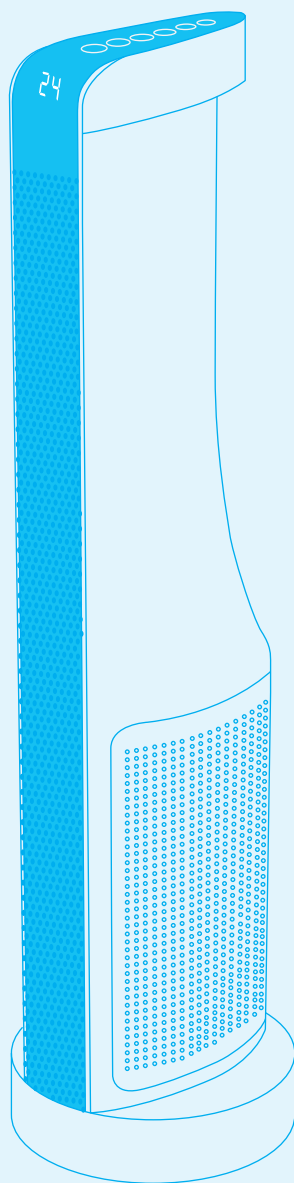

陶瓷暖風機
Ceramic Heater



FH-T20P


使用說明書

INSTRUCTION MANUAL

- * 使用暖風機前，請先細閱使用說明，並請妥善保存以便將來翻閱。
- ** 本說明書可於本公司網站下載 www.origin.hk。
- * Read all instructions carefully before using the FAN HEATER, and keep this instruction for future reference when necessary.
- ** This instruction manual can be acquired at www.origin.hk.

- 使用暖風機前，請先細閱使用說明。
Read all instructions carefully before using the Heater.
- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 使用時確保暖風機放置於安全、平穩的表面上。
Use this Heater on a horizontal and stable surface.
- 如本產品的電源線有損壞痕跡，為保障安全，請立即停止使用並聯絡供應商更換。
If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
- 警告：除非提供持續監督，否則當無法自行離開房間的人佔用時，請勿在細小房間內使用此暖風機。
WARNING: Do not use this Heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- 請不要使用曾經掉落的暖風機。
Do not use this Heater if it has been dropped.
- 切勿把暖風機擺放於電源插座之下。
The Heater must not be located immediately below a socket outlet.
- 切勿使用可使暖風機自動開機的外加管理程式、時間制、遙控系統或任何其他裝置，以免因暖風機被覆蓋或擺放位置不當而發生火警。
The Heater is not intended to be operated by means of an external programmer, timer, separate remote-control system or any other device that switches the Heater on automatically, since a fire risk exists if Heater is covered or positioned incorrectly.
- 警告：為防暖風機過熱，切勿覆蓋暖風機的出、入風口。使用中的暖風機出口會發出高熱，切勿觸碰。
WARNING: In order to avoid over heating, do not cover the Heater. The Heater is hot when in use. To avoid burns, do not let bare skin touch hot surface.
- 警告：暖風機的出、入風口應與易燃物品(如傢俱、枕頭、床鋪、毛巾或窗簾等)保持安全距離不少於1米。
WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet and inlet of the Heater.
- 如暖風機有明顯的損壞跡象，請勿使用。
Do not use if there are visible signs of damage to the Heater.
- 暖風機不可擺放於有潛在危險的地方使用(例如：非常潮濕環境、易燃物品或化學品倉庫)。
The Heater must NOT be used in potentially dangerous location such as flammable explosive, chemical laden or wet atmospheres.
- 暖風機不適用於室外及作工業用途。
Heater is intended for household use ONLY, not for industrial or outdoor use.

- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。
Remove the package and ensure that the Heater is undamaged. In case of doubt do not use the Heater and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。
Do not let children play parts of package.
- 使用暖風機前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。
Before using the Heater, check if the voltage marked on the rating label corresponds to the mains in your home.
- 暖風機不可擺近水盆、浴缸、花灑、泳池、潮濕或有積水的周邊環境使用。
The Heater is not intended for use in the immediate surroundings of a basin, a bath, a shower, a swimming pool, a wet or damp locations.
- 切勿將任何異物放入機內；或阻擋機身出風口及入風口；或將暖風機放置在柔軟或不穩固的表面上(例如床鋪)，皆因以上一切行為均會導致機身過熱，引發短路或火警。
Do not insert any objects into the Heater as it may cause an electric shock or fire or damage to the Heater. Do not block or tamper with the Heater in any manner while it is in operation. To prevent a possible fire, do not block air inlet or outlet in any manner. Do not place on soft surfaces, like a bed, where opening may become blocked.

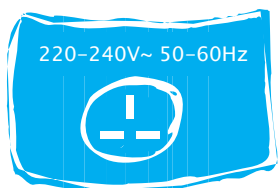

- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。
Avoid using extension cord as the extension cord may overheat and cause fire.
- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。
Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.
- 警告：總電源開/關鍵不應作為切斷電源用途。
WARNING: The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power.
- 警告：清理前必須先拔除電源插頭。
WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning.
- 暖風機設有發聲警報裝置，當機身溫度過熱，警報器自動發聲提示，應立即關機檢查並立即停止使用此機。
The Heater includes an audible alarm to warn when the Heater are overheat. If the alarm sounds, immediately turn the Heater off and inspect the Heater. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING!
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

各部名稱 Main Parts

陶瓷暖風機 Ceramic Heater



控制面板
Control Panel

LED顯示
LED Display

出風口
Air Outlet

底座
Base

圖片只供參考，
一切以實物為準

The picture is for
reference only,
everything in kind
shall prevail.

入風口
Air Inlet

總電源開/關
Main Power Switch

插頭
Plug

浴室使用 Bathroom Use

本暖風機已通過IP21防滴要求，可放置於任何室內位置(包括浴室)使用。
如在浴室中使用本暖風機，則必須擺放於與水源(洗手盤/浴缸)及使用者(伸手不能達到)的0.6米以外位置。

This is a "IP21" heater which is constructed for protection against splashing and allowed to be in all rooms, including bathroom.
The appliance must be placed 0.6 meter away from water sources, such as washbasin and bathtub, and out of reach of hands.

注意：第一次使用暖風機，可能會出現少量氣味約數分鐘，因本產品在生產時發熱元件帶有一層保護油，此乃正常現象。

NOTE: For first time operation, there will have some smell for about few minutes.


Because this Heater have some protective oil on the surface of the heating.

暖風機可使用機身頂部按鍵操控。

1. 小心從包裝取出暖風機。
2. 將暖風機擺放於穩固的平面上。
3. 按總電源開/關鍵至關機狀態，將插頭插入電壓220-240V的獨立插座。按總電源開/關鍵至開機狀態，LED顯示將會顯示‘--’，暖風機進入準備狀態。


The Heater may be operated by the manual controls located on the Heater.


1. Carefully remove the Heater from the plastic bag and the carton.
2. Place the Heater on a stable flat surface.
3. Set the Main Power Switch to 'OFF' position. Plug the Power Cord into a a.c. 220-240V electrical outlet. Turn the Main Power Switch to 'ON' position. LED display will show '--', the Heater is ready to use.
4. 開/關：按'⏻'鍵，暖風機以低熱模式運作，LED會顯示預設運作溫度‘23℃’及‘LO’。若室內溫度高於預設運作溫度，暖風機將不會加熱運作。
4. On/Off: Press the '⏻' key, the heater will start at low heat, and the LED will display the preset temperature '23℃' and 'LO'. If the room temperature is higher than the preset temperature, Heater will not working.
5. 模式：按'🌡️'鍵，暖風機將以不同模式運作：低熱、高熱、及防結霜。
低熱 – LED會顯示預設運作溫度‘23℃’及‘LO’
高熱 – LED會顯示預設運作溫度‘23℃’及‘HI’
防結霜 – LED會顯示預設運作溫度‘7℃’及‘❄️’
5. Mode: Pressing the '🌡️' key will set the Heater into different MODE:
LOW HEAT, HIGH HEAT and Anti-freeze.
LOW HEAT – LED will display preset temperature '23℃' and 'LO'.
HIGHT HEAT – LED will display preset temperature '23℃' and 'HI'.
Anti-freeze – LED will display preset temperature '7℃' and '❄️'.
6. 定時(關機)：暖風機在工作狀態下按'⌚'鍵，按'▲'或'▼'鍵選擇需要設定的自動關機時間(可設定自動關機時間：1-24小時)。

6. Timer(Shut-off): When the heater is ON, press the ☺ key, then press the '▲' or '▼' key to increase or decrease the length of operation from 1-24 hours.
7. 溫控調節：當暖風機於'低熱'或'高熱'模式：
 - 7.1. 按'▼'鍵或'▲'鍵選擇需要設定的溫度，可設定溫度：5-35°C
 - 7.2. 當室內溫度達到設定溫度，暖風機會自動停止工作。
 - 7.3. 當室內溫度低於設定溫度，暖風機會自動恢復工作。
 - 7.4. 注意：在溫度控制的設定狀態下，暖風機將不斷循環的自動開機/關機地工作。
 - 7.5. 在防結霜模式下，不可設定溫度。
7. SET TEMP : When the unit is in the LOW HEAT or HIGH HEAT MODE:
 - 7.1. Press the '▲' key to increase the desired temperature and the '▼' key to decrease the desired temperature. Working temperature: 5-35°C
 - 7.2. When the air temperature reaches the 'SET TEMP', the Heater will cut off.
 - 7.3. When the air temperature drops below the 'SET TEMP', the Heater will back on.
 - 7.4. Note: It is normal for the Heater to cycle ON and OFF as it maintains the 'SET TEMP'.
 - 7.5. Under anti-frost mode, the unit cannot set temperature.
8. 防結霜模式：暖風機在防結霜模式下，當室內溫度低於7°C會自動以工作，當室內溫度高於7°C會自動停止工作。
8. Anti-Freeze : Under this mode, when the air temperature drops below 7°C the Heater will run automatically. When the air temperature reach 7°C, the Heater Heater will stop working automatically.
9. 左右送風：按'↻'鍵，暖風機以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。
9. OSC : Pressing the '↻' key will allow the Heater to oscillate the wind direction. To stop the oscillation, press the 'OSC' key again.
10. 同時按下'▼'及'▲'鍵5秒，控制面板將被鎖上，LED將會顯示  及 []。再次同時按下'▼'及'▲'鍵5秒，即可解除鎖定。
注意：遙控器沒有鎖定功能。

10. Press and hold the '▼' and '▲' key for 5 seconds, control panel will be locked. LED display will show  & . Press and hold the '▲' and '▼' key for 5 seconds again, the lock will be released.

Note: Remote control cannot perform this function.

11. 關機：如需關機，按""鍵。為使機內溫度下降，關機後的暖風機，風扇將繼續送風30秒，才完全停止運作，之後再按總電源開/關鍵至關機狀態。

11. OFF: To turn the Heater off, press the ""key. The FAN will work for 30 seconds to cool down the Heater and then turn OFF, then set the Main Power Switch to 'OFF' position.

*** 注意：本暖風機內置傾倒自動斷電裝置，暖風機傾倒時會發出聲響，這是正常現象。

*** Note: When the Heater is tipped over, the tipping device makes a sound, which is a normal phenomenon.

遙控器 Remote Control

1. 遙控器操作方式與機頂按鍵操作方式相同。

2. 更換電池：使用一枚3伏特鋰電池。

1. All functions performed by the Remote Control work ar identical to the Manual.

2. Battery replacement: Install one 3V Lithium battery.

警告/Warning

- 1) 請把電池放在兒童碰不到的地方，如果孩子吞下電池，需立即致電諮詢醫生。
- 2) 不要對電池進行充電或隨意棄置在有火源的地方。
- 3) 應保持電池存放於乾燥，陰涼的地方。
- 4) 以正確的方向插入電池。

電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in rigdt direction.

Battery disposal - Please dispose the used battery per municipal or provincial law.



1. 暖風機內置恆溫保護裝置，防止機身過熱。
2. 當機內溫度超出限定溫度，暖風機將自動停止操作。需要重新設置才可恢復正常。
 - 2.1. 拔除插頭，等待30分鐘，讓機內溫度降低。
 - 2.2. 重新插上插頭，讓暖風機正常繼續操作。
1. A thermal overload protector is built-in to prevent overheating.
2. When the Heater is overheat, it will be shut off automatically.
 - 2.1. To RESET the Heater: Unplug the Heater and wait for 30 minutes to cool down.
 - 2.2. Turn ON the Heater again to resume operation.

清理及維護 Maintenance

警告：不使用本機時，經常保持拔除電源，及切勿將此機浸於水或其他液體中。清理時切勿將此機浸於水或其他液體中。清潔前應確保暖風機處於冷卻狀態。

清理：使用吸塵機毛刷將入風口的塵埃及雜物吸走。機身使用濕潤軟布抹擦清潔。

注意：切勿使用含有腐蝕性的清潔劑或溶液清理此機。

儲存：連同使用說明，把暖風機存放於清涼及乾爽的地方。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING.

DO NOT IMMERSE THE HEATER IN WATER!

MAKE SURE THE HEATER IS COMPLETELY COOL DOWN BEFORE CLEANING


CLEANING: Clean the Air Inlet with the vacuum brush attachment on your vacuum cleaner. Clean the body of the Heater with a soft cloth.

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Heater. NEVER use ALCOHOL or any other SOLVENTS.

STORAGE: Store the Heater with these instructions in the original box in a cool and dry place.

型號 Model Number	FH-T20P
電源 Power Supply	220-240V~ 50-60Hz
額定功率 Rated Power	2000W
產品尺寸 Product Dimension	195 x 195 x 755 mm (約/Approx.)

源澤地圖 Origin Map

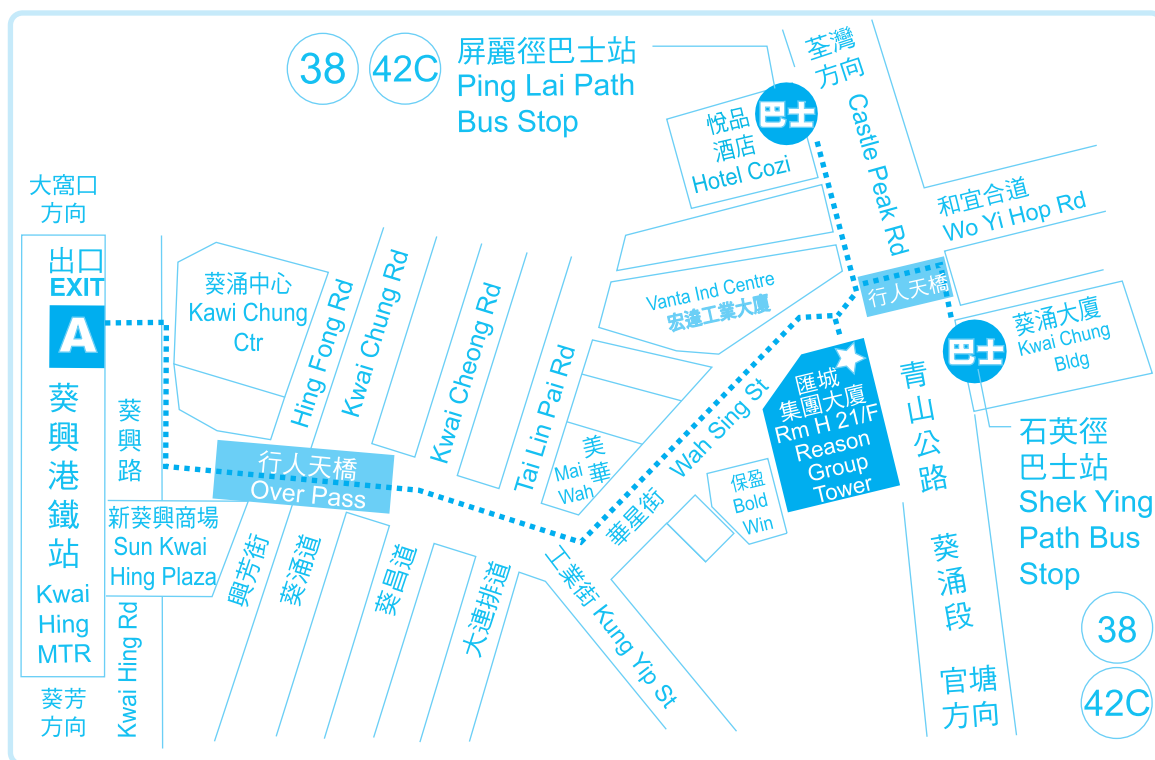

辦公時間

10:30am - 12:30pm (星期一至五)
02:30pm - 05:30pm (星期一至五)
10:30am - 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)
02:30pm - 05:30pm (Mon to Fri)
10:30am - 12:30pm (Saturday)
(Closed on Sunday and Holiday)

產品保用証(一年自攜服務)

陶瓷暖風機
Ceramic Heater



產品： 陶瓷暖風機

型號： FH-T20P

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用享為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經授權之自行處理、維修及/或改裝；
- 任何機殼、面蓋、遙控，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何損壞零件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

*** 額外3個月保用：凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站: www.origo.hk

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

電話: 2156 8238

www.origo.hk

www.origo.hk



Find us on



Warranty Card(1 year carry-in)

Item : Ceramic Heater

Model : FH-T20P

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product has been damaged through abuse, misuse, negligence or accidents;
- Unauthorized repair, alteration/modification;
- The housing, cover, remote control or accessories, is excluded from this warranty.

3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.

4. Any defective parts, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Please show the Invoice to get free service.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

www.origo.hk



Find us on

