電陶爐




為了使您能更瞭解本產品的性能和使用時的安全,請使用前務必詳細閱讀以下說明。

一、型號及規格

型號: CC-38

電壓: 交流電220-240伏特, 50/60赫茲 功率: 2200瓦特 (發熱元件:2000瓦特)

二、產品部件名稱

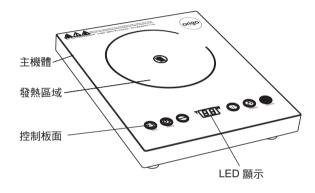

三、使用前的準備

- 1. 先拿出電陶爐,以濕潤毛巾清潔。將電陶爐放置於平坦位置上。
- 2. 使用前請確保已拆除所有包裝物料。
- 請確定規格標貼上標示的額定電壓與當地供電電壓相同。如有 疑問可向服務中心查詢。
- 4. 選擇靠沂雷源插座的位置,不要放在有水的地方使用。

四、使用方法

- 1. 將鍋具穩固地放在電陶爐發熱區域位置上。
- 2. 將電源插頭插入電源插座,按"ON/OFF"開/關鍵,電陶爐進入 準備狀態,LED將會顯示"ON"。
- 3. 按"POWER"火力鍵,LED將會顯示"P9","W"指示燈亮起。當按"+"和"-"鍵時,可以將火力設置為"P9"至"P1"。"P9"表示最大火力,"P1"表示最低火力,有9段不同火力可以選擇。
- 4. 按"TIMER"定時鍵,LED將會顯示"0","T"指示燈亮起。按"+"和"-"鍵時,可以選定不同自動關機時間(0分鐘至99分鐘)。
- 連續按"LOCK"鎖定鍵3秒,控制板面即被鎖定。連續再按 "LOCK"鎖定鍵3秒,鎖定即可解除。

- 6. 使用完畢後,按"ON/OFF"開/關鍵關機。 切勿拔掉電源插頭,必須等待機內風扇停止運作才可切斷電源 ,因機內正在進行散熱程序,大約需時30分鐘之內。
- 7. 待發熱區域完全冷卻後方可清潔或移動機身。

五、安全注意事項

- a)正確使用電源
- 電源線損壞時,不應自行更換。應到指定維修中心更換相同或 更高規格的電源線。
- 電陶爐不應使用延長線與標稱小於13A的插座,必須使用與原裝同規格之電線。
- 3.防止電插座負荷過重或損害保險線,高耗電量之電器不能同時接駁到同一電插座或同一線路。
- 4.電源線切勿靠近火源、高溫或隱藏在地毯之下,亦不可靠近水源。
- 5.請勿自行修理或更換已損壞之保險線。請帶同該電器前往核准 之維修中心更換保險線。

b)正確使用產品

- 1.切勿於水源或易燃物品附近使用。
- 2.切勿於高溫表面上或附近使用本產品。
- 3.使用時確保本品放置於安全、平穩的表面上。
- 4.請使用交流電220-240伏特,50/60赫茲的電源。
- 5.在本產品冷卻前,切勿接觸其發熱表面。
- 6.當本產品於兒童、老人或殘疾者附近使用,必須加倍留神,切 勿讓兒童、老人或殘疾者於沒人監察下使用本產品。

六、清潔保養

- 1.清潔前應確保電陶爐已拔掉電源插頭及處於冷卻狀態。
- 2.清潔時,應用濕軟的布團擦拭電陶爐的表面。如有難以擦拭的 污垢,可使用日用的洗潔精進行擦拭,但不宜使用鋼絲球類狀 物進行磨擦。
- 3.請不要將主機體浸入到液體中進行清潔。
- 4.清潔後放置在乾爽陰涼的地方。

七、小貼十

- 1.使用本產品時,鍋具必須放上食物,不可進行乾燒。此舉將嚴重 縮短產品使用壽命。
- 1.所有平底的鍋具都適合使用電陶爐,加入之食物重量不可超過4公斤。
- 3.所有未開封的密封包裝食品(例如:罐頭),不可使用電陶爐直接 進行加熱,避免發生危險。
- 4.如發現電陶爐玻璃面板破損,請即拔掉電源插頭及停止使用。
- 5.如電陶爐溫度過高,LED將會顯示將會顯示"E0"及警示聲響, 請即拔掉電源,等待數分鐘後重新啟動。

注意:

- 1)本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及 知識者使用,除非他們曾經接受負責安全人士的監督或指示。 大人應指導小孩不可把玩雷器。
- 2) 本機不能用於附加外置的時計或控制器。

八、保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。 此保用只包含生產所導致的品質問題;並不包括玻璃面板及其配件 因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用:凡於購買產品後10天內完成網上登記,即可免費延長保用期3個月,即15個月免費保用(商業用途除外)。 請即登入網站:www.origo.hk

注意: 保用時,須帶同收據及請先致電服務中心。

服務中心

源澤市務有限公司 香港新界葵涌青山公路403號 匯城集團大廈21樓H室(近華星街12號) 電話:2156 8238

辦公時間

上午10:30 - 下午12:30(星期一至五) 下午02:30 - 下午05:30(星期一至五) 上午10:30 - 下午12:30(星期六) (星期日及公眾假期休息)

源澤地圖



Electric Ceramic Cooker



Thank you for your purchase of our Electric Ceramic Cooker. To use this cooker properly and safely, please read the following instruction carefully.


1. MODEL & SPECIFICATION

Model: CC-38

Voltage: 220-240V~50/60Hz

Power: 2200W (Heating element: 2000W)

2. MAIN PARTS

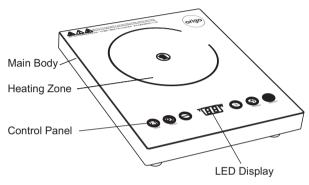

3. PREPARATION BEFORE USE

- Take apart the Cooker clean with a soft damp cloth. Place your Cooker on the level and stableb surfure.
- 2) Make sure that all packing materials are removed before use.
- 3) Before using the product, check if the voltage marked on the rating label corresponds to the mains at your home.
- Choose the near part of socket during use. Do not use it near any sources with water.

4. OPERATIONS

- Place the cookware on the heating zone and make sure the bottom fully contacts with the glass plate of main body.
- Connect this Cooker to the power supply and press "ON/OFF" key, the cooker is on stand-by mode and the LED will display "ON".
- 3) Press "POWER" key, the LED will display "P9" and the "W" indicator light is turn on. When press "+" and "-" key to set P9 to P1, P9 is the max power, P1 is the lowest power. There are 9 power intervals.
- 4) Press "TIMER" key, the LED will display "0" and the "T" indicator light is turn on. Press "+" and "-" key to set desired auto power off time (0 minutes to 99 minutes).
- 5) Press "LOCK" key and hold on 3 second, control panel is locked. To release child lock function, press "LOCK" key again and hold on 3 second.
- 6) To stop using the cooker, press "ON/OFF" key again.

 <u>Don't pull out plug immediately, wait for air vantilation works for within 30 minutes to cool down the Cooker, until the fan stops completely.</u>

7) Wait until the heating zone is completely cool down before moving or cleaning.

5. IMPORTANT SAFEGUARDS

1) CORRECT USE OF ELECTRICITY

- a) To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
- b) Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
- c) To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
- d) DO NOT PUT the cord under the carpet, blankets. Always keep the power cable away from the walk way in room.
- e) DO NOT TRY TO REPAIR the broken fuse by yourself, the user should take the set to your local authorized maintenance center to replace it with the new one.

2) SAFETY IN OPERATIONS

- a) DO NOT OPERATE this appliance near water sources or flammable liquids.
- b) DO NOT OPERATE this appliance on or near any hot surface. (Hot plate, electric stoves etc).
- c) Ensure the appliance is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the set.
- d) Always operate this appliance from an earthed domestic 220-240 V~50/60Hz power socket.
- e) Never try to touch the hot surface of this appliance before it is cool down
- f) Extreme caution is necessary when this appliance is used by or near children or invalids and whenever this appliance is left operating unattended.

6. MAINTENANCE & CARE

- Make sure the plug is removed from the power supply socket. After the appliance is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.
- 2) PLEASE DO NOT CLEAN THE SET WHEN IT IS STILL HOT. DO NOT USE hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose.
- 3) Do not immerse the main body in water to clean.
- 4) Put the appliance on the cool place right after the cleaning.

7. OPERATION TIPS

- Do not allow to turn on this appliance if you have not place any food on it.
- 2) All flat bottom pots are available and please limit the food within 4kg.
- To avoid any danger of explosion, please do not heat the canned goods before remove their cover.
- If the glass surface is cracked, pull out the plug to prevent the risk of electric shock.
- 5) If the temperature is too high, LED display will show "E0" with alarm. Please cut off the power and restart after several minutes.

Attentions:

- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible or their safety. Children should be supervised to ensure that they do not play with the appliance.
- 2) Appliances are not intended to be operated by means of an external timer or separate remote-control system.

8. WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the glass surface and its accessories, damage or defect caused by negligence or use not according to this instruction manual.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origin.hk

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

Service Centre

ORIGIN MARKETING LIMITED Unit H,21/F, Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong. Tel: 2156 8238

Office Hours

10.30am - 12:30pm (Mon ~ Fri) 02:30pm - 05:30pm (Mon ~ Fri) 10:30am - 12:30pm (Sat) (Closed on Sunday and Holiday)

Origin Map

