



迷你充電式對流扇

為了使您能更瞭解本產品的性能和使用時的安全，請使用前務必詳細閱讀以下說明。

一、型號及規格

型號：CF-M88 / CF-M88G
輸入：DC5V, 2.0A (Max)
電池：Li-ion 2 x 2000mAh
充電時間：約5-7小時
運作時間：最多約13小時(不包括LED燈)
配件：USB線

 


二、注意事項

- 1) 使用本產品前，請詳細閱讀本說明書。
- 2) 產品只供室內使用。
- 3) 產品不是玩具，應避免孩童單獨使用本產品。
- 4) 產品並不適合用於商業用途。
- 5) 本產品內置充電電池，請使用本產品提供的USB電源線替產品進行完全充電。
- 6) 打開包裝，檢查風扇。如發現產品有損壞，請勿使用及即時聯絡供應商。
- 7) 非使用風扇時請拔除USB線，切斷電源。
- 8) 當燈亮起時，不能近距離照到眼睛，防止傷害眼睛。
- 9) 切勿將任何異物放入風扇內；或阻擋風扇出風口及入風口，皆因以上一切行為均可能導致風扇損壞。
- 10) 不可在潮濕或有積水的環境使用，不可將風扇擺放於浴缸或大型容器上面。
- 11) 切勿將風扇擺放在發熱源頭或火源附近。
- 12) 不可擅自拆卸、修理、改造本產品，如有任何問題請先致電客戶服務中心。
- 13) 必須按照使用說明指示操作本風扇，否則可能引致產品損壞、短路、火警或人命損傷。
- 14) 風扇在使用之前，請放置在平坦，牢固，安全的平面上。
- 15) 本機不是為體質、感覺或智力有障礙人士（包括小孩）或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。

三、使用方法

- 1) 這風扇可使用USB線或充電使用。
- 2) 充電使用：
打開風扇底部的電池蓋，放入2枚電池，然後關閉並蓋緊。
(注意：不可使用非由製造商供應之電池。)
- 3) USB使用：
將USB線插入風扇的USB輸入端口，然後將USB線插入電源。
提示：USB線電源輸出要求：DC5V, 2.0A或更低。與大多數USB充電器兼容。(本產品不包含USB充電器)
- 4) 將風扇擺放於穩固的平面上。
- 5) 開/關：按開關/風速按鈕，風扇以低檔啟動。

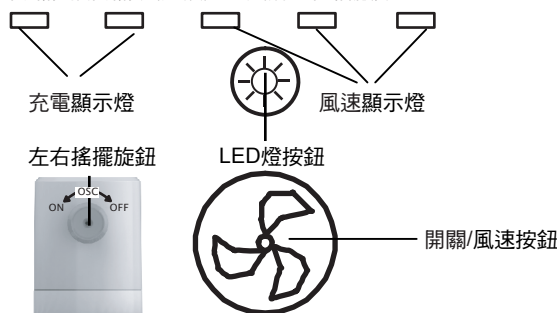

- 6) 風速：按開關/風速按鈕，設定所需風速：低、中、高。LED風速顯示燈將會顯示風速。
- 7) 左右送風：旋轉左右搖擺旋鈕，風扇以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再旋轉此旋鈕一次。
- 8) LED燈：按下LED燈按鈕打開LED燈，設定所需光度：低、高。如欲關閉LED燈，再按此按鈕一次。(LED燈可獨立使用。)
- 9) 如需關機，按開關/風速按鈕直至停機為止。
- 10) 充電：
將USB線連接到設備(例如充電器，電腦的USB槽)，另一端連接到風扇的電源輸入端口，為其供電及電池充電。
充電時顯示燈會變為紅色，充電完成時會變為綠色。
(提示：只可使用DC5V, 2.0A電源充電，否則會使充電電池的壽命縮短。)

四、清潔保養

- 1) 警告：不使用風扇時，經常保持拔除電源，及切勿將風扇浸於水或其他液體中。在清潔本風扇前，先將風扇關掉及把電源線從插座拔出。
- 2) 風扇：清理時切勿將風扇浸於水或其他液體中。使用濕潤軟布沾上含肥皂的溫水抹擦。
- 3) 注意：切勿使用含有腐蝕性的清潔劑或溶液清理風扇。
- 4) 儲存：連同使用說明，把風扇存放於清涼及乾爽的地方。

五、保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題；並不包括電池、USB線及其他附件，因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用：凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站: www.origo.hk

注意: 保用時，須帶同收據及請先致電服務中心。

服務中心

源澤市務有限公司
香港新界葵涌青山公路403號
匯城集團大廈21樓H室(近華星街12號)
電話: 2156 8238

辦公時間

上午10:30 - 下午12:30 (星期一至五)
下午02:30 - 下午05:30 (星期一至五)
上午10:30 - 下午12:30 (星期六)
(星期日及公眾假期休息)

www.origo.hk

Find us on



源澤地圖






Rechargeable Convection Fan

Thank you for your purchase of our product. To use this product properly and safely, please read the following instruction carefully.

1. MODEL & SPECIFICATION

Model	: CF-M88 / CF-M88G
Voltage	: DC 5V, 2.0A
Battery	: Li-ion 2 x 2000mAh
Charging Time	: Appox 5-7hours
Operating Time	:13 hours Max (Without LED Light)
Accessory	: Mini USB Cable

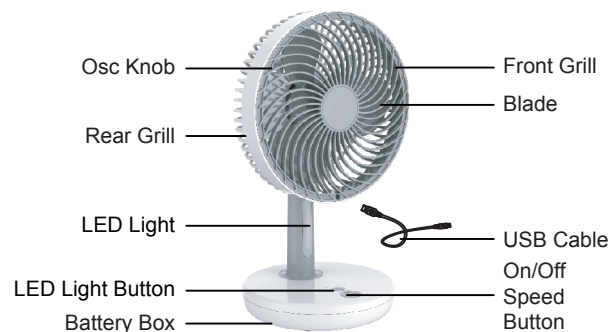 


2. ATTENTIONS

- 1) Read all instructions and warnings carefully before use.
- 2) This product is for indoor use only.
- 3) This product is not a toy. Do not allow children to play it.
- 4) This product is designed for household use only.
- 5) This Fan is driven by batteries. Please use the USB cable provided to fully charge the product before use.
- 6) Open the package and ensure that the Fan is undamaged. In case of doubt, do not use the FAN and contact your supplier.
- 7) Do not leave the Fan unattended. Always unplug the USB cable of the Fan when not in use.
- 8) When the LED light is on, please keep your eyes away from the lamp to avoid being hurt.
- 9) Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.
- 10) The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.
- 11) Do not place the Fan near a source of heat or fire.
- 12) Do not take this Fan apart exposing electrical parts. Call customer service for assistance and guarantee information.
- 13) Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may casue fire, electrical shock or injury to persons.

- 14) Please place the Fan on a hard, flat and horizontal surface before use.
- 15) Reminder: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible or their safety. Children should be supervised to ensure that they do not play with the appliance.

3.DIRECTIONS FOR USE

 - 1) Operated by USB cord and built in rechargeable battery.
- 2) Charging Use:
Open the battery cover on the bottom of the Fan, insert 2 batteries, and then close it.
(Caution: Do not use any other battery that is not supplied by the manufacturer.)
- 3) USB Use:
Plug the USB cable into the USB input port of the Fan then plug the USB cable into a source of power .
Reminder: USB power source output requirement: DC 5V, 2.0A or lower. Compatible with most USB wall chargers.
(This product does not include a USB charger.)
- 4) Place the Fan on a stable and flat surface.
- 5) Turn the Fan ON by pressing the On/Off Speed button, the Fan start at low speed.

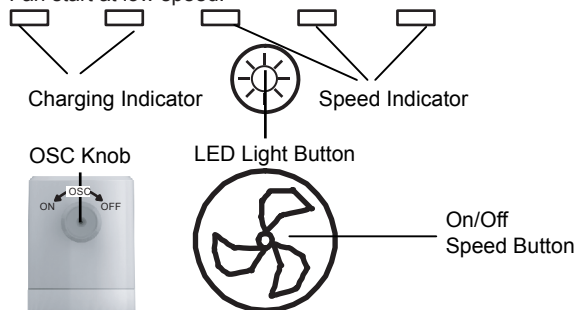

- 6) Adjust the Fan speed to the desired level: Low, Medium, or High by pressing On/Off Speed button. The speed setting is displayed on the LED light.
- 7) OSC(LEFT/RIGHT): Rotate the OSC Knob to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, rotate the OSC Knob again.
- 8) LED Light: Turn on the LED light and adjust the required light level to the desired level: Low or High by pressing LED Light Button. To turn off the LED light, press this button again. (LED lights can be used independently.)
- 9) To turn the Fan off, press the On/Off Speed button until it stops.
Charging
Connect the USB cable to a device(e.g. Power Adaptor, Computer USB Port), and the power input port of the Fan to provide power for it and charge the battery inside. The red charging indicator will be on when charging and turn green when fully charged.

(Reminder : Use power source only with DC5V, 2.0A to charge, otherwise, the life of rechgeable battery inside will be shortened.)

4.MAINTENANCE & CARE

- 1) WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.
- 2) FAN: Clean the Fan with a soft cloth, to remove presistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.
- 3) CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS.
- 4) STORAGE: Store the Fan with these instructions in the original box in a cool and dry place.

5. WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months)from the date of receipt against manufacturing defect. The warranty does not cover the battery, USB cable and other accessories, damage or defect caused by negligence or use not according to this instruction manual.

****Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk*

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

Service Centre

ORIGIN MARKETING LIMITED
Unit H,21/F, Reason Group Tower
(nearby 12 Wah Sing Street), 403 Castle Peak Road,
Kwai Chung, N.T., Hong Kong.
Tel: 2156 8238

Office Hours

10.30am - 12:30pm (Mon ~ Fri)
02:30pm - 05:30pm (Mon ~ Fri)
10:30am - 12:30pm (Sat)
(Closed on Sunday and Holiday)

www.origo.hk

Find us on



Origin Map

