 


電陶爐

型號: CC69
電壓: 交流電220-240伏特, 50/60赫茲
功率: 2200瓦特 (發熱元件:2000瓦特)

產品部件名稱

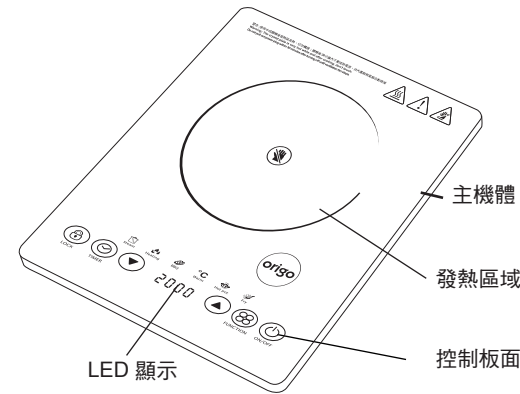

圖片只供參考，一切以實物為準

注意安全事項

1. 使用本產品前，請先細閱使用此說明書，並請妥善保存，以便日後翻閱。
***本說明書可於本公司網站:www.origin.hk下載。
2. 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
3. 本產品是家用或在類似環境使用，例如:商店內部、辦事處以及其他類似工作環境的廚房區域;農舍;客戶在旅館、汽車旅館和其他住宅類型的環境。
4. 使用本產品前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向服務中心查詢。
5. 本機不能用於附加外置的時計或控制器。
6. 電源線或保險線損壞時，不應自行更換。應到指定維修中心更換相同或更高規格的電源線 或更換保險線。
7. 如發現電陶爐玻璃面板破損，請即拔掉電源插頭及停止使用。
8. 電陶爐不應使用延長線與標稱小於13A的插座，必須使用與原裝同規格之電線。
9. 防止電插座負荷過重或損害保險線，高耗電量之電器不能同時接駁到同一電插座或同一線路。
10. 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡服務中心。
11. 使用時確保本品放置於安全、平穩的表面上。
12. 切勿於水源或易燃物品附近使用。
13. 切勿於高溫表面上或附近使用本產品。
14. 使用時，切勿把本產品放置於火爐或發熱的物體附近。

15. 電源線切勿靠近火源、高溫或隱藏在地毯之下，亦不可靠近水源。
16. 為防止損害電源線，請勿把電源線掛放在檯邊上或接觸發熱的物體。
17. 使用本產品時，鍋具必須放上食物，不可進行乾燒。此舉將嚴重縮短產品使用壽命。
18. 所有平底的鍋具都適合使用電陶爐，加入之食物重量不可超過4公斤。
19. 所有未開封的密封包裝食品(例如:罐頭)，不可使用電陶爐直接進行加熱，避免發生危險。
20. 如電陶爐溫度過高，LED將會顯示將會顯示“E0”及警示聲響，請即拔掉電源，等待數分鐘後重新啟動。
21. 在本產品冷卻前，切勿接觸其發熱表面。

使用前的準備

1. 先拿出電陶爐，以濕潤毛巾清潔。將電陶爐放置於平坦位置上。
2. 使用前請確保已拆除所有包裝物料。
3. 選擇靠近電源插座的位置，不要放在有水的地方使用。

使用方法

1. 將鍋具穩固地放在電陶爐發熱區域位置上。
2. 將電源插頭插入電源插座，按“ON/OFF”開/關鍵，電陶爐進入準備狀態。
3. 按“Function”功能鍵，火鍋“Hot Pot”指示燈會亮起，再按“Function”功能鍵可以選擇炒菜“Fry”，蒸煮“Steam”，加熱“Heating”，燒烤“BBQ”和保溫“Warm”功能:
選擇火鍋“Hot Pot”功能時，LED顯示 “ 2000W”，當按“▲”和“▼”鍵時，有7段不同火力可以選擇。
選擇炒菜“Fry”功能時，LED顯示 “ 700℃”，當按“▲”和“▼”鍵時，可以將加熱溫度設置為“60℃”至“700℃”。
選擇蒸煮“Steam”功能時，LED顯示 “ 1800W”，然後電陶爐將自動進入30分鐘定時狀態。
選擇加熱“Heating”功能時，LED顯示 “ 60℃”，當按“▲”和“▼”鍵時，可以將加熱溫度設置為“60℃”至“700℃”。
選擇燒烤“BBQ”功能時，LED顯示 “ 600℃”，當按“▲”和“▼”鍵時，可以將加熱溫度設置為“60℃”至“700℃”。
選擇保溫“Warm”功能時，LED顯示 “ 60℃”，當按“▲”和“▼”鍵時，可以將加熱溫度設置為“60℃”至“700℃”。
4. 按“Timer”定時鍵時，按“▲”和“▼”鍵時，可以選定不同自動關機時間(0分鐘至99分鐘)。
5. 連續按“Lock”鎖定鍵3秒，控制板面即被鎖定。連續再按“Lock”鎖定鍵3秒，鎖定即可解除。
6. 使用完畢後，按“ON/OFF”開/關鍵關機。
切勿拔掉電源插頭，必須等待機內風扇停止運作才可切斷電源，因機內正在進行散熱程序，大約需時30分鐘之內。
7. 待發熱區域完全冷卻後方可清潔或移動機身。

清潔保養

1. 清潔前應確保電陶爐已拔掉電源插頭及處於冷卻狀態。
2. 清潔時，應用濕軟的布團擦拭電陶爐的表面。如有難以擦拭的污垢，可使用日用的洗潔精進行擦拭，但不宜使用鋼絲球類狀物進行磨擦。
3. 請不要將主機體浸入到液體中進行清潔。
4. 清潔後放置在乾爽陰涼的地方。

保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題；並不包括玻璃面板及其配件，因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用: 凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。

請即登入網站:www.origo.hk

注意: 保用時，須帶同收據及請先致電服務中心。

服務中心


源澤市務有限公司
香港新界葵涌青山公路403號
匯城集團大廈21樓H室 (近華星街12號)
電話:2156 8238

辦公時間

上午10:30 - 下午12:30(星期一至五)
下午02:30 - 下午05:30(星期一至五)
上午10:30 - 下午12:30(星期六)
(星期日及公眾假期休息)



 源澤地圖

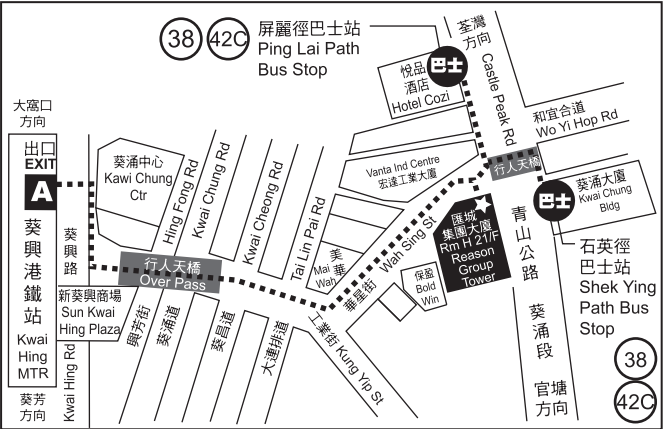


ELECTRIC CERAMIC COOKER

Model : CC69
Voltage : 220-240V~50/60Hz
Power : 2200W (Heating element: 2000W)



 MAIN PARTS

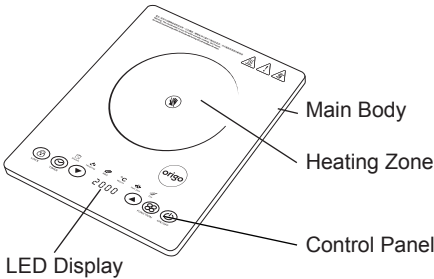

The picture is for reference only, everything in kind shall prevail.

IMPORTANT SAFETY INFORMATION

1. Read all instructions carefully before using the appliance. Appropriately keep it for future reference when necessary.
***This instruction manual can be acquired at www.origin.hk.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible or their safety. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.
4. Before using the appliance, check if the voltage marked on the rating label corresponds to the mains at your home.
5. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
6. To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires, broken fuse or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
7. If the glass surface is cracked, pull out the plug to prevent the risk of electric shock.
8. Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
9. To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
10. Open the package and ensure that the appliance is undamaged. In case of doubt, do not use and contact your service centre.

11. Ensure the appliance is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the set.
12. DO NOT OPERATE this appliance near water sources or flammable liquids.
13. DO NOT OPERATE this appliance on or near any hot surface. (Hot plate, electric stoves etc).
14. This appliance cannot be used beside the stove and other high temperature objects.
15. DO NOT PUT the cord under the carpet, blankets. Always keep the power cable away from the walk way in room.
16. Do not hang the power cord on the edge of table or touch the surface with high temperature in order to avoid damage to the power cord.
17. Do not allow to turn on this appliance if you have not place any food on it.
18. All flat bottom pots are available and please limit the food within 4kg.
19. To avoid any danger of explosion, please do not heat the canned goods before remove their cover.
20. If the temperature is too high, LED display will show "E0" with alarm. Please cut off the power and restart after several minutes.
21. Never try to touch the hot surface of this appliance before it is cool down.

PREPARATION BEFORE USE

1. Take apart the Cooker clean with a soft damp cloth. Place your Cooker on the level and stable surface.
2. Make sure that all packing materials are removed before use.
3. Choose the near part of socket during use. Do not use it near any sources with water.

OPERATIONS

1. Place the cookware on the heating zone and make sure the bottom fully contacts with the glass plate of main body.
2. Connect this Cooker to the power supply and press "ON/OFF" key, the cooker is on stand-by mode.
3. Press "Function" key, "Hot Pot" indicator light on, choose "Fry", "Steam", "Heating", "BBQ" and "Warm" function by pressing the "Function" key again.
When choosing "Hot Pot" function, the LED will display "2000W", press "▲" and "▼" key to set the power. There are 7 power intervals.
When choosing "Fry" function, the LED will display "700°C", press "▲" and "▼" key to set the temperature from "60°C" to "700°C".
When choosing "Steam" function, the LED will display "1800W", then the cooker will automatically enter into 30 minutes timer status.
When choosing "Heating" function, the LED will display "60°C", press "▲" and "▼" key to set the temperature from "60°C" to "700°C".
When choosing "BBQ" function, the LED will display "600°C", press "▲" and "▼" key to set the temperature from "60°C" to "700°C".
When choosing "Warm" function, the LED will display "60°C", press "+" and "-" to set the temperature from "60°C" to "700°C".
4. Press "Timer" key, then press "+" and "-" key to set desired auto power off time (0 to 99 minutes).
5. Press "Lock" key and hold on for 3 seconds to lock control panel. To release child lock function, press "Lock" key again and hold on for 3 seconds.
6. To stop using the cooker, press "ON/OFF" key again.
Don't pull out plug immediately, wait for air ventilation works for within 30 minutes to cool down the Cooker. until the fan stops completely.

7. Wait until the heating zone is completely cool down before moving or cleaning the cooker.

MAINTENANCE & CARE

1. Make sure the plug is removed from the power supply socket. After the appliance is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.
2. PLEASE DO NOT CLEAN THE SET WHEN IT IS STILL HOT
DO NOT USE hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose.
3. Do not immerse the main body in water to clean.
4. Put the appliance on the cool place right after the cleaning.

WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the glass surface and its accessories, damage or defect caused by negligence or use not according to this instruction manual.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origin.hk

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

Service Centre

ORIGIN MARKETING LIMITED
Unit H,21/F, Reason Group Tower
(nearby 12 Wah Sing Street), 403 Castle Peak Road,
Kwai Chung, N.T., Hong Kong.
Tel: 2156 8238

Office Hours

10.30am - 12:30pm (Mon ~ Fri)
02:30pm - 05:30pm (Mon ~ Fri)
10:30am - 12:30pm (Sat)
(Closed on Sunday and Holiday)



Origin Map

