


4. WARNING: To avoid danger of electric shock, unplug the USB cable and switched off the Fan when not in use and before cleaning. If the Fan is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for For wall-mounted use, the two books should be pasted on the wall according For vertical use, the end with the power input port shall be kept on the top, and the Fan should be clamped

1. Place the Fan on a stable and flat surface(or wall-mounted use). Plug the USB cable into the power input port of the Fan then plug the USB cable into a source of power or charging use.

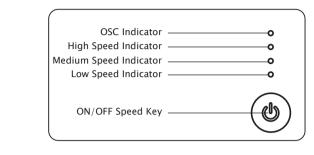

POWER: Long press the on/off speed key "(a)" by 3 seconds, the Fan start at

3.SPEED: Adjust the Fan speed to the desired level: Low, Medium, High by pressing (b) key. The speed setting is displayed on the LED light. 4.OSC(LEFT/RIGHT): Press the on/off speed "@" key twice to allow the Fan to oscillation, press this key again.

LEFT/RIGHT oscillate the wind direction, the OSC indicator light on. To stop the oscillation, press this key twice again. 5.OFF: To turn off the Fan, press the on/off speed key (b) until it stops.

- . All functions performed by the Remote Control work are different to the Manual.
- . Battery replacement: Install one 3V Lithium battery (CR2032).
- 1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately
- . Do not recharge or dispose in fire.
- 3. Keep in a dry and cool place. 1. Insert battery in right direction
- Battery disposal Please dispose the used battery per municipal or provincial law.
- . POWER: Long press the on/off key "O", the Fan start at low speed. LOW 2. SPEED: Press the low speed key "(1)", the Fan operates at low speed, the low speed indicator light on. . MEDIUM SPEED: Press the medium speed key "2", the Fan operates at
- medium speed, the medium speed indicator light on. . HIGH SPEED: Press the high speed key (3), the Fan operates at high
- speed, the high speed indicator light on 5. OSC(LEFT/RIGHT): Press the OSC key (0) to allow the Fan to LEFT/RIGHT oscillate the wind direction, the OSC indicator light on. To stop the
- 6. OFF: To turn off the Fan, press the on/off key (again.


- 2. Operation Time: Approx. 6 Hours (*Depending on different speeds)
- 3. Please charge the product for more than 5-7 hours before use.
- 4. It is recommended to charge it every 3 months to avoid battery damage and affect product functions if the product is not working for a long time.
- 5. When the product is not working for a long time, please make sure it can storage under low humidity or room temperature in case of environment factors to the product function damage.
- b. It is recommended to use DC5V 1.5A power supply for charging to achieve
- the better battery performance. (Power adaptor not included) When using the Fan while charging, it is recommended to use a DC5V1.5A
- power supply. . Charging and operation time vary with settings and environmental factors; actual results will vary.

IAINTENANCE & CARE

WARNING: ALWAYS LINPLIE THE POWER CORD REFORE MOVING OR SERVICING, DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM Service Centre THE MAIN OUTLET.

House: Clean the outside of the Fan with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS. 02:30pm - 05:30pm (Mon ~ Fri) STORAGE: Store the Fan with these instructions in the original box in a cool 10:30am - 12:30pm (Sat)

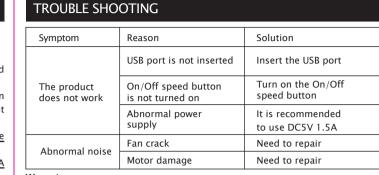

his product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt agains struction manual.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk Remark: For any repair service, please contact and bring with the invoice or receipt to the Service

ORIGIN MARKETING LIMITED


Unit H.21/F, Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong. Tel: 2156 8238

Office Hours


(Closed on Sunday and Holiday)






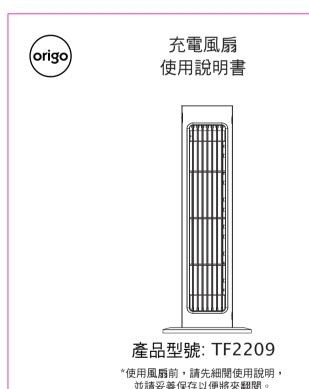

**本說明書可於本公司網站下載 www.origo.hk。

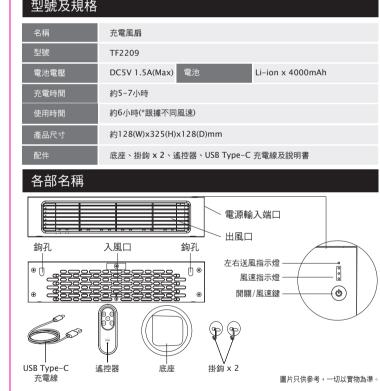

- . 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用,除 非他們曾經接受負責安全人士的監督或指示,大人應指導小孩不可把玩電器。 2. 本產品內有鋰電池,禁止拆解、撞擊、擠壓或投入火中。若出現嚴重鼓脹,請勿繼
- 續使用。請勿置於高溫環境。 3. 本風扇不適用於室外及作工業用途。
- 4. 必須按照使用說明指示操作本風扇,否則可能引致產品損壞、短路、火警或人命損
- 5. 打開包裝,檢查風扇。如發現產品有損壞,請勿使用及即時聯絡供應商。 6. 包裝物料並非玩具,不可讓小孩玩耍。
- 7. 本產品內置充電池,請使用本產品提供的USB電源線替產品進行完全充電。
- 3. 不可擅自拆卸、修理、改造本產品,如有任何問題請先致電客戶服務中心。 . 切勿將任何異物放入風扇內;或阻擋風扇出風口及入風口,皆因以上一切行為均可
- 能導致風扇指壞。 0. 非使用風扇時請關掉風扇。
- . 如須移動風扇,請先拔除USB線及關掉風扇。
- 2. 不可在潮濕或有積水的環境使用,不可將風扇擺放於浴缸或大型容器上面
- 3. 切勿將風扇擺放在發熱源頭或火源附近。 14. 警告;清理前必須先拔除USB線及關掉風扇。若風扇損壞,必須交由製造商或其代
- 理指定維修服務中心檢查及修理。
- 本產品含有可回收材料,不可把本產品作為未分類廢物。請聯繫當地就近指定 人 回收點。

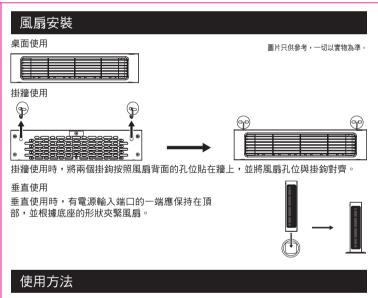

風扇可使用控制面板按鍵或改用遙控器操控

1. 將風扇擺放於穩固的平面上(或掛牆使用),將USB線接駁到風扇頂部電源輸入端口, 再把USB線連接到設備或充電使用。



2. 開/關: 長按開關/風速鍵(🕲) 3秒,風扇以低風速啟動。

4.左右送風:按開關/風速鍵 💇 2次,左右送風指示燈亮起,風扇風簾以自動左右搖擺 模式送風。如欲停止自動左右搖擺送風,再按此鍵2次。 5. 關機: 如需關機,按開關/風速鍵 也 直至停機為止。

- 遙控器操作方式與機頂按鍵操作方式不同。
- 更換電池:使用一枚3伏特鋰電池(CR2032)。
- 1. 請把電池放在兒童碰不到的地方,如果孩子吞下電
- 池,雲立即致雷咨詢醫生。 2. 不要對電池進行充電或隨意棄置在有火源的地方。
- 3. 應保持雷池存放於乾燥,陰涼的地方。
- 4. 以正確的方向插入電池。



電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

- 1. 開/關:按開關鍵 (O) ,風扇以低風速啟動。
- 2. 低風速: 按低風速鍵 "①",低風速指示燈亮起,風扇以低風速運作。
- 3. 中風速: 按中風速鍵 (2),中風速指示燈亮起,風扇以中風速運作。
- 4. 高風速: 按高風速鍵 3, 高風速指示燈亮起,風扇以高風速運作。
- 5. 左右送風: 按左右送風鍵 💿 ,左右送風指示燈亮起,風扇風簾以自動左右搖擺模 式送風。如欲停止自動左右搖擺送風,再按此鍵一次。
- 6. 關機:如需關機,按開關鍵 (〇) 直至停機為止。

充電及使用時間

- . 充雷時間:約5-7小時
- . 使用時間:約6小時(*跟據不同風速)
- 3. 購買本產品請充電5-7小時以上再使用。
- 4. 如本產品長期不使用時,建議每三個月充電一次,避免電池損壞導致產品不能使用。
- 5. 產品長期不使用時,請在常溫低濕度的環境下儲存,以免不良的環境導致產品功能損
- 5. 建議使用DC5V 1.5A電源充電,以達致最佳的電池使用表現。(電源適配器不包括在
- 7. 充電時同時使用風扇,建議使用DC5V 1.5A電源。
- 8. 充電及使用時間視乎設定和環境因素而定;實際結果可能有所差異。

- 警告:不使用風扇時,經常保持拔除電源,及切勿將風扇浸於水或其他液體中。在清潔 本風扇前,先將風扇關掉及把電源線從插座拔出。 外殼:清理時切勿將風扇浸於水或其他液體中。使用濕潤軟布抹擦清潔,頑固污垢可用
- 軟布沾上含肥皂的溫水抹擦。 注意:切勿使用含有腐蝕性的清潔劑或溶液清理風扇。
- 儲存:連同使用說明,把風扇存放於清涼及乾爽的地方。

- 1				
		故障	原因	解決方法
		產品無法運作	USB 連接埠未插入	插入USB連接埠
			開關/風速按鍵沒有開啟	開啟開關/風速按鍵
			電源異常	建議使用DC5V 1.5A電源
		異常噪音	風輪破裂	需要到代理維修
			電機損壞	需要到代理維修

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用此保用只包含生產所導致的品質問 ;並不包括機身外殼、電池、底座、掛鉤、遙控器、USB線及其他附件,因誤用或不依說明書指 示使用而遵致的指壞。

***額外3個月保用凡於購買產品後10天內完成網上登記,即可免費延長保用期3個月,即15個月免 費保用(商業用途除外)。請即登入網站: www.origo.hk 注意:保用時,須帶同收據及請先致電服務中心。

源澤市森有限公司

域集團大廈21樓H室(近華星街12號) 話:2156 8238

上午10:30 - 下午12:30 (星期六) (星期日及公眾假期休息)



源澤地圖/Origin Map

