 




涼夏冷風扇 aereus tower fan cooler

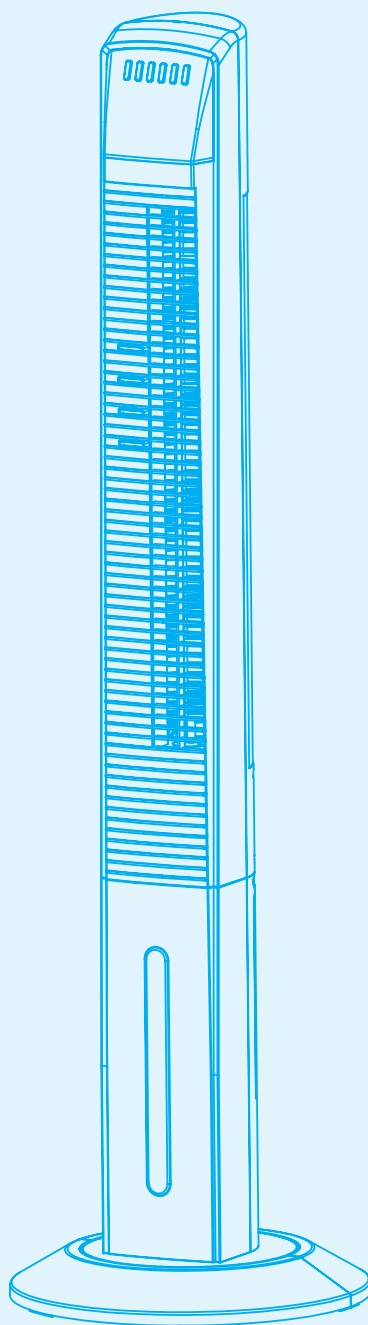


TFC1260

使用說明書


INSTRUCTION MANUAL

 - * 使用冷風扇前，請先細閱使用說明，並請妥善保存以便將來翻閱。
- ** 本說明書可於本公司網站下載 www.origo.hk。
- * Read all instructions carefully before using the FAN COOLER, and keep this instruction for future reference when necessary.
- ** This instruction manual can be acquired at www.origo.hk.

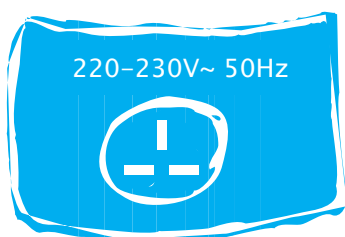

- 使用冷風扇前，請先細閱使用說明。
Read all instructions carefully before using the Fan Cooler.
- 必須按照使用說明指示操作冷風扇，否則可能引致產品損壞、短路、火警或人命損傷。
Use this Fan Cooler only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- 打開包裝，檢查冷風扇。如發現產品有損壞，請勿使用及即時聯絡供應商。
Open the package and ensure that the Fan is undamaged. In case of doubt, do not use the FAN COOLER and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。
Do not let children play parts of package.
- 使用冷風扇前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。
Before using the Fan Cooler, check if the voltage marked on the rating label corresponds to the mains at your home.

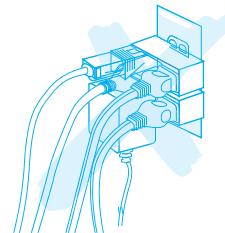 


- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。
Avoid using extension cord as it may overheat and cause fire.



- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。
Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.
- 冷風扇不適用於室外及作工業用途。
This Fan Cooler is intended for household use ONLY and not for industrial or outdoor use.

 
- 切勿將任何異物放入冷風扇內；或阻擋風扇出風口及入風口，皆因以上一切行為均可能導致風扇損壞。
Do not insert any objects into the Fan Cooler as it may cause an electric shock or damage. Do not block or tamper with the Fan Cooler in any manner while it is in operation.
- 非使用冷風扇時請拔除插頭，切斷電源。
Do not leave the Fan Cooler unattended. Always unplug the Fan Cooler when not in use.
- 警告：開/關鍵不應作為切斷電源的用途。
WARNING: The On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- 如需移動冷風扇，請先拔除插頭切斷電源。
Always disconnected the Fan Cooler from the power supply when moving it from one location to another.
- 不可在潮濕或有積水的環境使用，不可將冷風扇擺放於浴缸或大型容器上面。
The Fan Cooler is not intended for use in wet or damp locations. Never locate the Fan Cooler where it may fall into a bathtub or other water container.
- 切勿將風扇擺放在發熱源頭或火源附近。
Do not place the Fan Cooler near a source of heat or fire.
- 警告；清理前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。
WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 清潔冷風扇前，必須確保冷風扇已拔掉電源。
Ensure that the Fan Cooler is switched off from the supply mains before cleaning the Fan Cooler.
- 請保持清潔以維持冷風扇處於良好狀態(詳細請參閱清理及維護部份)。
Keep the Fan Cooler clean to maintain in good condition (refer to maintenance section).
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

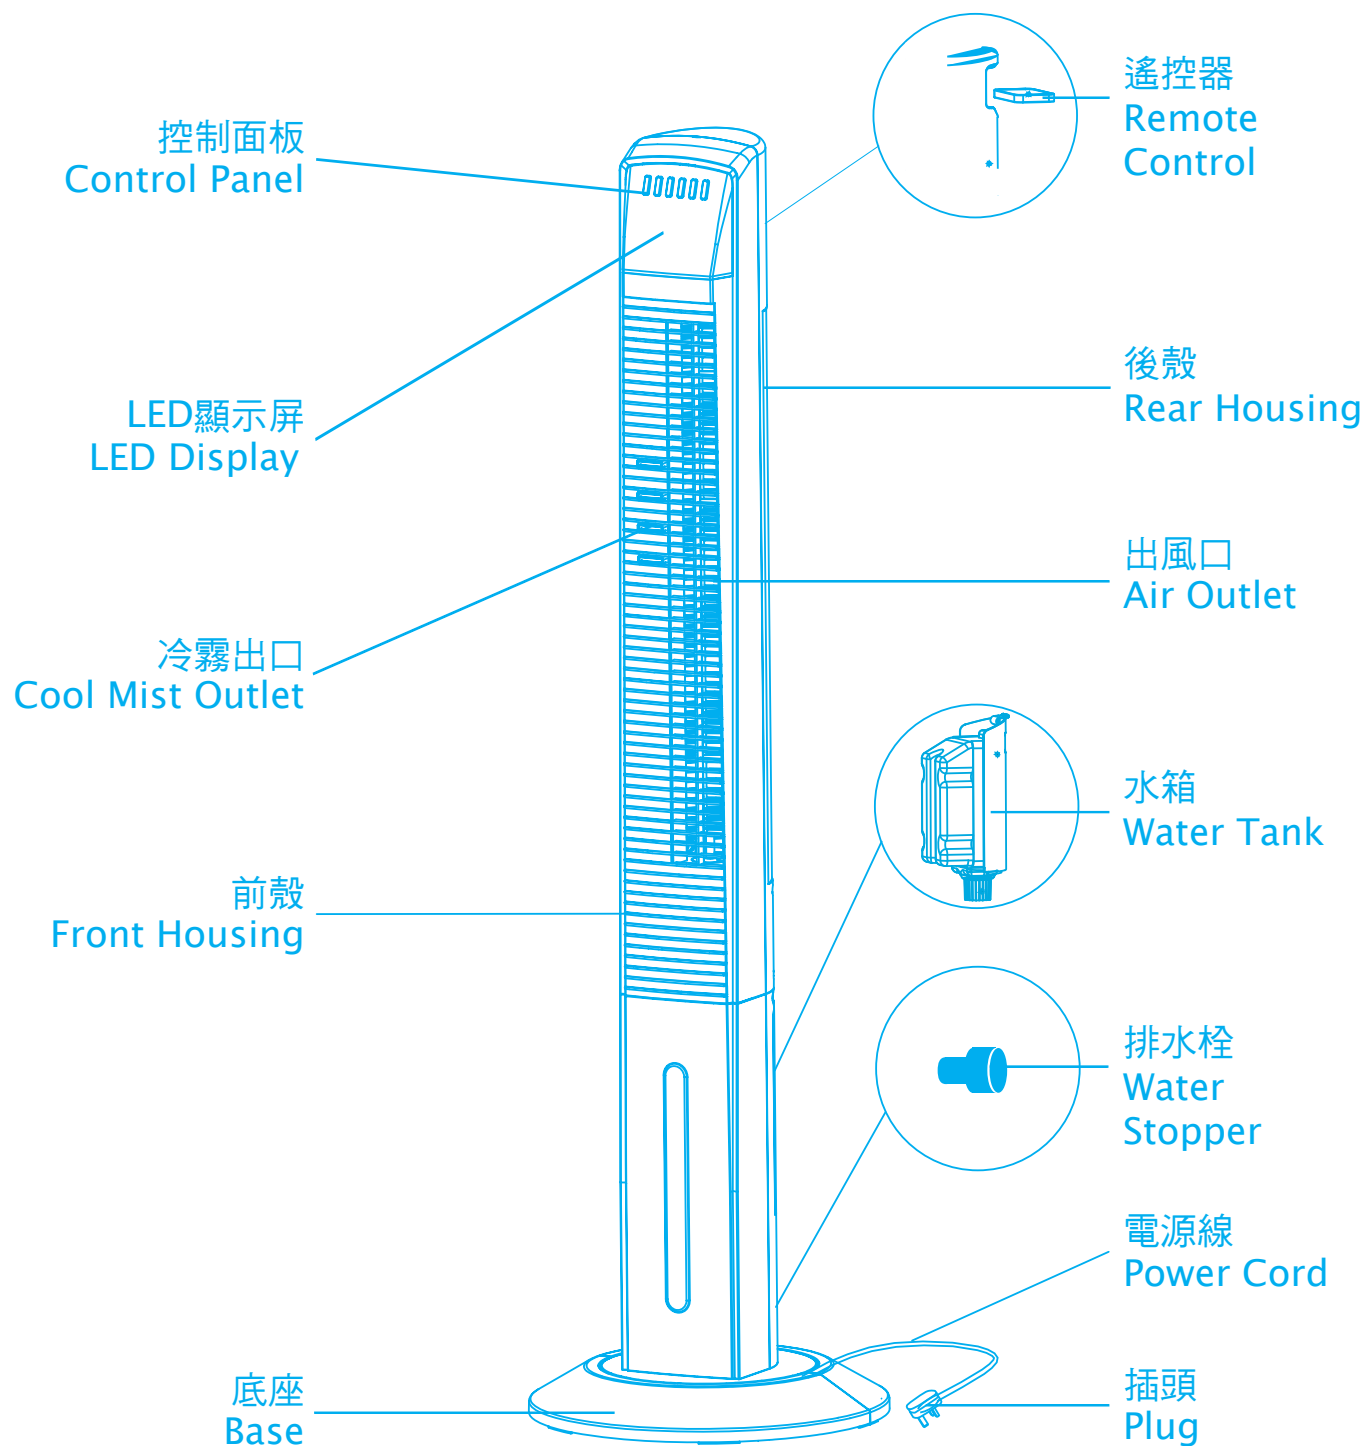

圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

注意：底座完成安裝前，切勿使用本冷風扇。
Caution: Do not operate the Fan Cooler before base assembling finished.

 1. 把兩塊底板互相扣緊。
Snap the two parts of the base together.
2. 把電源線扣於底板指定位置上(其中一塊底板設有電源線安全管道)。
Pass the power cord through the center hole of the base, after snapping the two pieces together.
3. 把冷風扇主體垂直放於底座上，使用三枚螺絲將冷風扇主體及底座鎖緊。
Line up the Fan Cooler on the base, and fix with the 3 manual screws.

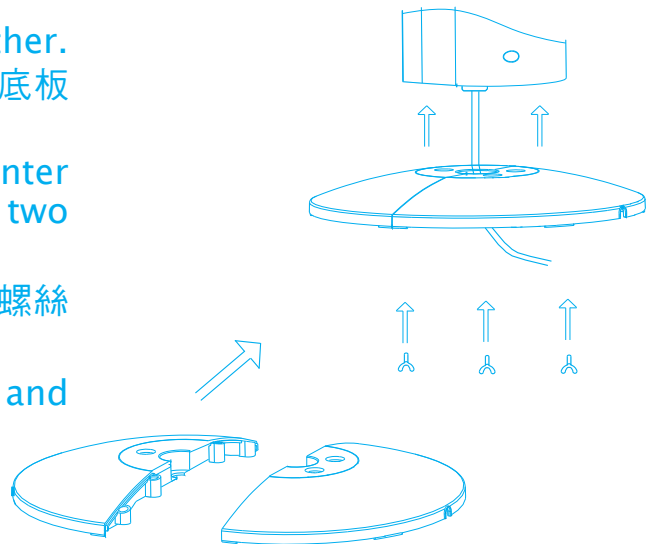

圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

遙控器 Remote Control

1. 遙控器操作方式與機身按鍵操作方式相同。
2. 更換電池：使用一枚3伏特鋰電池 (CR2032)。
1. All functions performed by the Remote Control work are identical to the Manual.
2. Battery replacement: Install one 3V Lithium battery (CR2032).

警告

 
 
- 1) 請把電池放在兒童碰不到的地方，如果孩子吞下電池，需立即致電諮詢醫生。
- 2) 不要對電池進行充電或隨意棄置在有火源的地方。
- 3) 應保持電池存放於乾燥，陰涼的地方。
- 4) 以正確的方向插入電池。

🔄 電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

WARNING

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in right direction.

🔄 Battery disposal - Please dispose the used battery per municipal or provincial law.

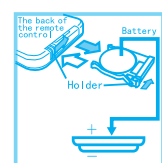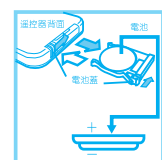

冷風扇可使用機身頂部按鍵操控(如圖1)，或改用遙控器操控。

 
1. 將冷風扇擺放於穩固的平面上，將插頭插入交流電壓220-230V~ 50Hz的獨立插座，風扇會"嗶"聲響起，室內溫度顯示於LED顯示屏。

2. 開/關：按開關鍵 ，冷風扇以低檔啟動。



The Fan Cooler may be operated by the control button (as shown in Figure 1) or using remote control.

1. Place the Fan Cooler on a stable and flat surface. Plug the Power Cord into an 220-230V~ 50Hz electrical outlet. The Fan Cooler have a "beep" sound, the LED display will display the current room temperature.

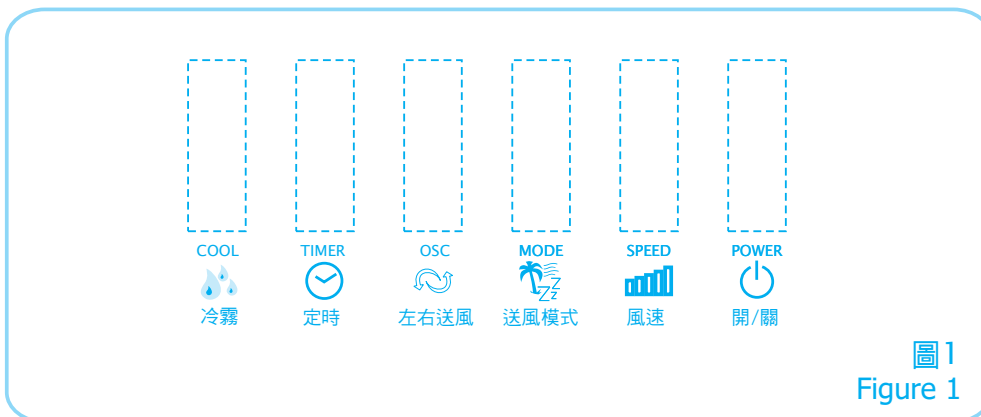2. POWER: Turn the Fan Cooler ON by pressing the  button, the Fan Cooler start at low speed.




圖片只供參考，一切以實物為準
The picture is for reference only, everything in kind shall prevail.

3. 風速：按風速鍵 ，設定所需風速：低、中、或高。LED顯示屏將會顯示風速。
SPEED: Adjust the Fan speed to the desired level: Low, medium, or high by pressing  button. The speed setting is displayed on the LED display.

4. 送風模式：按送風模式鍵 ，設定所需送風模式：常風、自然風、或睡眠風。LED顯示屏將會顯示送風模式。



MODE: Press the  button to set the Fan Cooler as normal, natural, or sleep mode.

5. 左右送風：按下左右送風鍵 ，冷風扇以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。



OSC(LEFT/RIGHT): Press the  button to allow the Fan Cooler to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, press this button again.

6. 定時設置：按下定時設置鍵 ，選定16個不同的自動關機時間，分別由0.5至8小時，並顯示於LED顯示屏。

TIMER: Pressing the  button to set desired auto power off time. There are 16 time intervals, from 0.5 to 8 hours.

7. 冷霧(COOL): 取出水箱及將水箱蓋旋開，注入清水，將水箱蓋旋緊後置入本體及儲水槽中。按下冷霧鍵 ，冷風扇會產生冷霧(大量-綠色燈顯示，小量-橙色燈顯示)。水箱缺水時  標示會閃亮。

*本機可按使用者需要，選擇獨立操作冷霧或風扇功能，或同時使用兩項功能。

COOL: Remove the water tank from the main body and unscrew the cap. After fill in clear water, screw the cap back on and replace water tank into the reservoir. Pressing the  button to start the cool mist function (large – green light, small – orange light).  sign will be flash on when water shortage.

*COOL and FAN function can be operated together or independently.

提示/CAUTIONS:

- 為確保做出高品質的"冷霧"效果，我們建議使用"蒸餾水"或"過濾水"。
For higher quality of "Cool Mist" performance, we recommend to use the "Distilled Water" or "Filtered Water".
- 在高度"潮濕"的環境下使用本產品，可能會出現"滴水"情況，此乃正常現象。
"Water Drops" may be occurred, if this appliance is using under "High Humid" environments.
- 如發現"冷霧"出口出現"滴水"情況，可能原因是受其他氣流影響，將"冷霧"倒吹回出口而做成，此乃正常現象。改善方法可嘗試將"冷霧"出口轉向其他方向。
Don't let the "Cool Mist" outlet opposite to other airflow, otherwise "Water Drops" may result.

警告：不使用冷風扇時，經常保持拔除電源，及切勿將冷風扇浸於水或其他液體中。在清潔冷風扇前，先將冷風扇關掉及把電源線從插座拔出。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN COOLER IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

外殼及後網：清理時切勿將冷風扇浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

 
House & Rear Grille: Clean the outside and grille of the Fan Cooler with a soft cloth. To remove persistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

風輪：將後網下方螺絲鬆脫後取出後網，使用濕潤軟布抹擦清潔風輪。清潔後，放回後網並用螺絲鎖緊，才可使用冷風扇。

Wind Wheel: Loose the screw and pull the rear grille out. Clean the wind wheel with a soft damp cloth, place and fix the rear grille with the screw after cleaning.


注意：切勿使用含有腐蝕性的清潔劑或溶液清理冷風扇。

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan Cooler. NEVER use ALCOHOL or any other SOLVENTS.

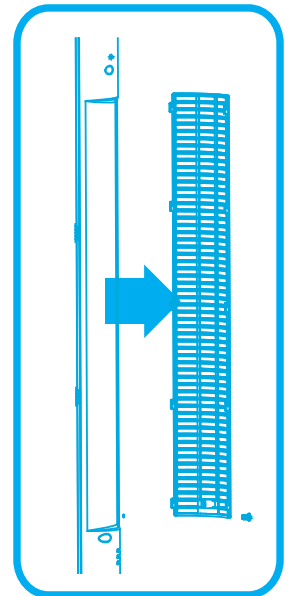

型號 Model Number	TFC1260
電源 Power Supply	220-230V~ 50Hz
額定功率 Rated Power	80W
產品尺寸 Product Dimension	343(W) x 1250(H) x 343(D) mm (約/Approx.)

 源澤地圖 Origin Map

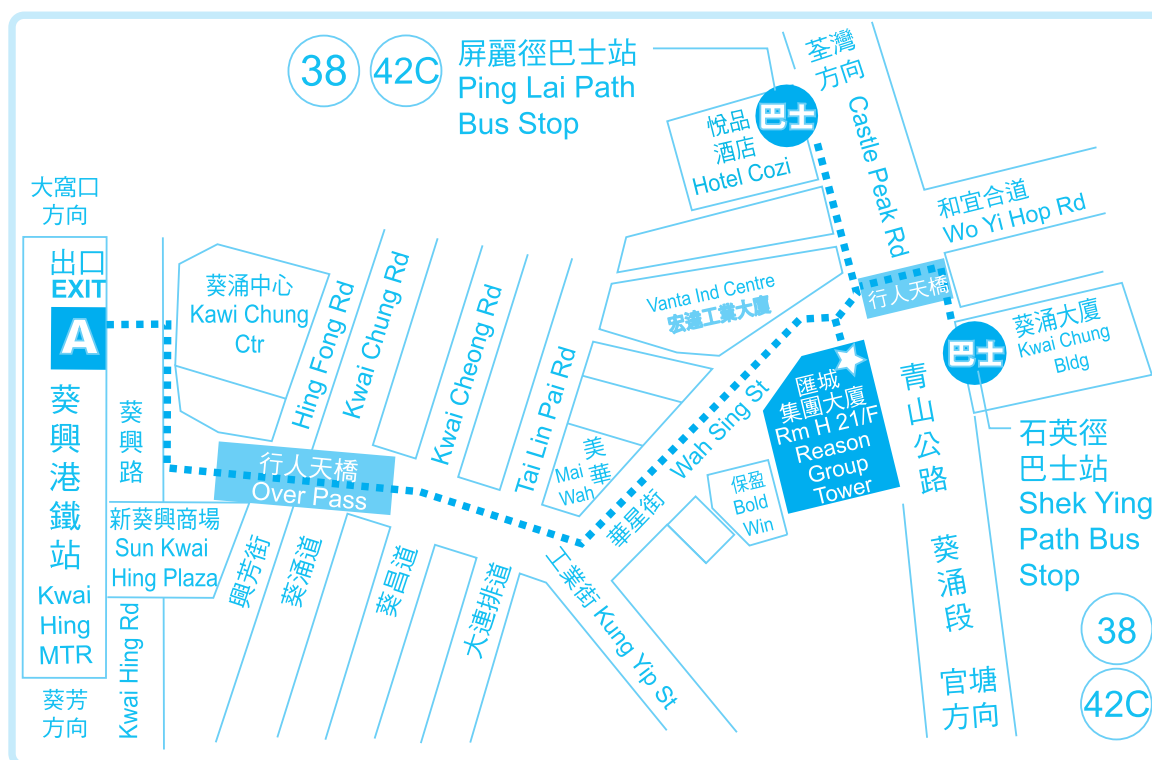

辦公時間

10:30am – 12:30pm (星期一至五)
02:30pm – 05:30pm (星期一至五)
10:30am – 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am – 12:30pm (Mon to Fri)
02:30pm – 05:30pm (Mon to Fri)
10:30am – 12:30pm (Saturday)
(Closed on Sunday and Holiday)

產品保用証(一年自攜服務)

涼夏冷風扇
aereus tower fan cooler

origo

產品： 涼夏冷風扇

型號： TFC1260

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用享為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。
2. 以下情況不被包括在保養範圍內：
 - 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
 - 未經授權之自行處理、維修及/或改裝；
 - 任何機殼、面蓋、後網、底座、底座螺絲、水箱、排水栓、遙控，以及配件。
3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。
4. 更換後之任何損壞零件，均屬本公司所有。
5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

*** 額外3個月保用：凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站：www.origo.hk

服務中心

 
源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室


電話：2156 8238

www.origo.hk

www.origo.hk

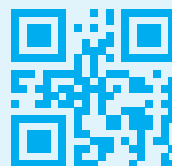

Find us on

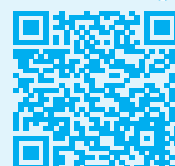 

Warranty Card(1 year carry-in)

Item : Aereus Tower Fan Cooler

Model : TFC1260

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
 - If the product has been damaged through abuse, misuse, negligence or accidents;
 - Unauthorized repair, alteration/modification;
 - The housing, cover, rear grille, base, base screws, water tank, water stopper, remote control or accessories, is excluded from this warranty.
3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.
4. Any defective parts, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Please show the Invoice to get free service.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origo.hk

Service Centre

 
ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

www.origo.hk

www.origo.hk

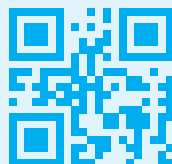

Find us on

