 


Batus

Rechargeable Salt & Pepper Grinder

User Manual

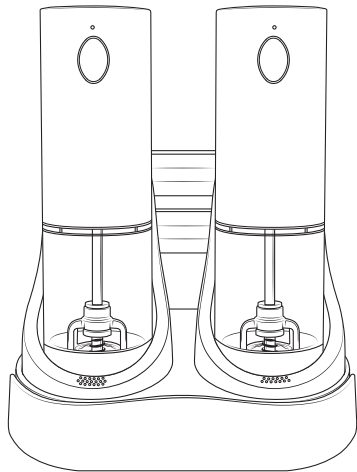

Model: SP11


*Please read the instruction carefully before use, and keep the instruction manual properly.

**This user manual can be acquired at www.batus.hk.

MODEL & SPECIFICATION

Product Name	Rechargeable Salt & Pepper Grinder
Product Model	SP11
Input Voltage	DC5V 2A (Max.)
Battery	Li-ion 300mAh x 2
Charging Time	Approx. 2 Hours
Chamber Capacity	95 ML (Approx.) per unit
Product Size	170(W) X 197(H) X 130(D)mm (Approx.)
Accessories	Storage Base, Grinder x 2, USB Type-C Cable and User Manual

 MAIN PARTS

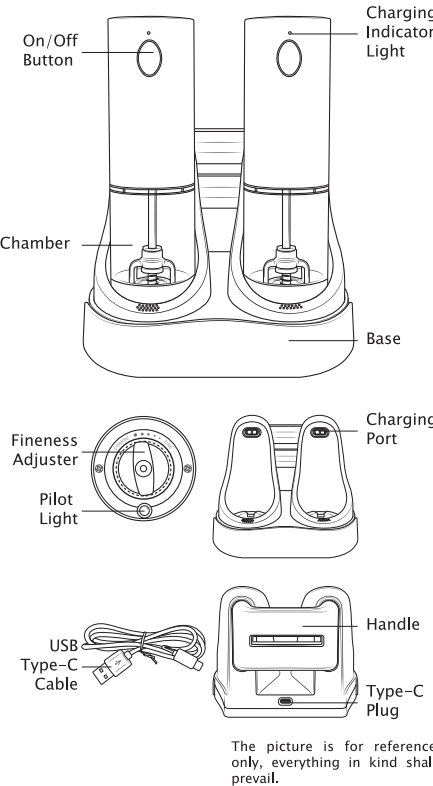


The picture is for reference only, everything in kind shall prevail.

ATTENTIONS

 
1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
2. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.
3. This product contains a lithium battery, and it is for hidden to disassemble, hit, squeeze or throw it into fire. Do not use if severe swelling occurs. Do not place in a high temperature environment.
4. This Product is intended for household use ONLY and not for industrial or outdoor use.
5. Use this Product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
6. Open the package and ensure that the Product is undamaged. In case of doubt, do not use the Product and contact your supplier.
7. Do not let children play parts of package.
8. This Product is driven by batteries. Please use the USB cable provided to fully charge the product before use.
9. Do not take this Product apart exposing electrical parts. Call customer service for assistance and guarantee information.
10. Use this product for pepper and salt only, please do not use for others purposes.
11. Do not force the Product to tighten or twist it or attempt to speed up the mechanism.

12. Keep body parts (e.g. finger) and utensils away from the grinding head to avoid damage. Please hold the Product tightly when using.
13. Do not leave the product unattended. Always switched off the Product when not in use.
14. Always switched off the Product and unplug the USB cable when moving it from one location to another.
15. The Product is not intended for use in wet or damp locations. Never locate the Product where it may fall into a bathtub or other water container.
16. Do not place the Product near a source of heat or fire.
17. WARNING: To avoid danger of electric shock, unplug the USB cable and switched off the Product when not in use and before cleaning. If the Product is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

DIRECTIONS FOR USE


1. Holding the Grinder, turn it clockwise as shown and open the chamber.



2. Fill chamber with peppercorns or salt crystals, turn counterclockwise to lock the chamber onto the Grinder.



 3. According to the personal needs to rotate the fineness adjuster.

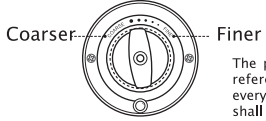

The picture is for reference only, everything in kind shall prevail.

4. Press and hold the on/off button to grind, the pilot light will light on, release the button to stop.
5. This product adopts an fineness adjuster. The adjusting knob could be rotated between the finest and the coarsest grinding.
6. Adjust to Finer: Rotate the fineness adjuster from "COARSER" to "FINER", continue to rotate until the desired fineness is achieved.
7. Adjust to Coarser: Rotate the fineness adjuster from "FINER" to "COARSER", continue to rotate until the desired roughness is achieved.
8. If the fineness adjuster loosens, it could be caused by some pepper grains stuck in the disc. Start the Grinder to rotate, then the disc will be loosened and then continue to adjust. This is a normal situation of ceramic grinding disc and will not affect its normal use.
9. Note: With seasonings in the chamber, please do not turn the Grinder upside down for a long time in case grains of seasonings might get into the battery compartment and cause battery corrosion.

CHARGING TIME

1. Charging Time: Approx. 2 Hours.
2. Please charge the product for more than 2 hours before use.
3. It is recommended to charge it every 3 months to avoid battery damage and affect product functions if the product is not working for a long time.
4. When the product is not working for a long time, please make sure it can storage under low humidity or room temperature in case of environment factors to the product function damage.
5. It is recommended to use DC5V 2A power supply for charging to achieve the better battery performance. (Power adaptor not included)
6. Charging time vary with settings and environmental factors; actual results will vary.

 
MAINTENANCE & CARE

The chambers of the Grinder can be cleaned by rinsing with clean water, but do not soak it or put it in a dishwasher. (Note: Do not rinse the main unit of the Grinder with water.)

The base of the Grinder can be disassembled. Hold both sides of the base with two hands and push the charging port backward to disassemble.



The base can be washed directly. Do not wash the charging port.



CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Product. NEVER use ALCOHOL or any other SOLVENTS.
STORAGE: Store the Grinder with these instructions in the original box in a cool and dry place.

TROUBLE SHOOTING

If the Grinder does not work or stops while grinding:
- Please charge it. (Note: It is not recommended to use the product while charging.)
- Please adjust the fineness adjuster with counter-clockwise direction.
- If the above operations are all correct and the Grinder still works abnormally, please contact the customer service for maintenance service.

WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the cover, battery, Type-C cable, base and other accessories, damage or defect caused by negligence or use not according to this instruction manual.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.batus.hk

Service Centre
ORIGIN MARKETING LIMITED
Unit H,21/F, Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Office Hours
10:30am - 12:30pm (Mon ~ Fri)
02:30pm - 05:30pm (Mon ~ Fri)
10:30am - 12:30pm (Sat)
(Closed on Sunday and Holiday)

www.batus.hk

 
Find us on



Batus

充電式鹽及胡椒研磨器

使用說明書

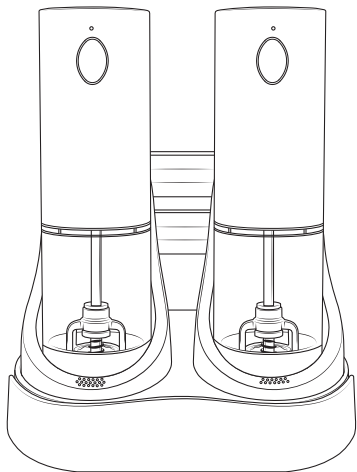

產品型號: SP11


*使用產品前，請先細閱使用說明，並請妥善保存以便將來翻閱。

**本說明書可於本公司網站下載 www.batus.hk。

型號及規格

名稱	充電式鹽及胡椒研磨器
型號	SP11
輸入電壓	DC5V 2A (Max.)
電池	Li-ion 300mAh x 2
充電時間	約2小時
容器容量	每個約95 毫升
產品尺寸	約170(W)x 197(H)x 139(D)mm
配件	收納底座、研磨器兩個、USB Type-C 充電線及說明書

 
各部名稱

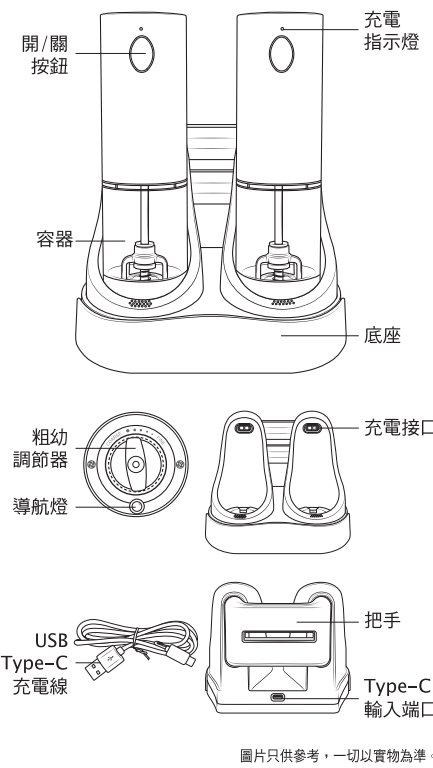

圖片只供參考，一切以實物為準。

 
重要安全提示

1. 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
2. 本產品是家用或在類似環境使用，例如：商店內部、辦事處以及其他類似工作環境的廚房區域；農舍；客戶在旅館、汽車旅館和其他住宅類型的環境。
3. 本產品內有鋰電池，禁止拆解、撞擊、擠壓或投入火中。若出現嚴重鼓脹，請勿繼續使用。請勿置於高溫環境。
4. 本產品不適用於室外及作工業用途。
5. 必須按照使用說明指示操作本產品，否則可能引致產品損壞、短路、火警或人命損傷。
6. 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。
7. 包裝物料並非玩具，不可讓小孩玩耍。
8. 本產品內置充電電池，請使用本產品提供的USB電源線替產品進行完全充電。
9. 不可擅自拆卸、修理、改造本產品，如有任何問題請先致電客戶服務中心。
10. 本產品僅適用於胡椒和鹽，請勿用於其他用途。
11. 請勿強行拉緊或扭轉產品或嘗試加快該產品的速度。
12. 將身體部位(如手指)和器皿遠離磨頭，以免損壞。使用時請握緊產品。
13. 非使用產品時請關掉產品。
14. 如須移動產品，請先拔除USB線及關掉產品。
15. 不可在潮濕或有積水的環境使用，不可將產品擺放於浴缸或大型容器上面。
16. 切勿將產品擺放在發熱源頭或火源附近。
17. 警告：清理前必須先拔除USB線及關掉產品。若產品損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。

 本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。

使用方法


1. 握住研磨機，根據圖示順時針旋轉並打開容器。



2. 將胡椒顆粒或鹽晶體放入容器內，逆時針旋轉將容器鎖緊在研磨器。



 3. 根據個人需要旋轉調整調節器。

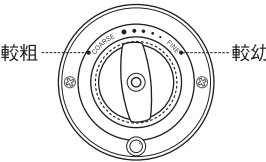

圖片只供參考，一切以實物為準。

 
4. 按住開/關按鈕進行研磨，導航燈將會亮起，放開按鈕即可停止。
5. 本產品採用調節器。調節器可在較幼和較粗之間旋轉。
6. 調幼:將調節器從 "COARSER" 旋轉至 "FINER"，直至達到所需的幼度。
7. 調粗:將調節器從 "FINER" 旋轉至 "COARSER"，直至達到所需的粗度。
8. 如果調節器鬆脫，可能是研磨盤卡了一些胡椒顆粒造成的。啟動研磨器旋轉，研磨盤就會鬆動，然後繼續調整。這是陶瓷研磨盤的正常情況，不會影響其正常使用。
9. 注意：當容器有調味料時，請勿將研磨器長時間倒置，以免調味料顆粒進入電池內，導致電池腐蝕。

充電時間

1. 充電時間:約2小時。
2. 首次使用本產品前請充電2小時以上才可使用。
3. 如本產品長期不使用時，建議每三個月充電一次，避免電池損壞導致產品不能使用。
4. 產品長期不使用時，請在常溫及乾燥的環境下儲存，以免不良的環境導致產品功能損壞。
5. 建議使用DC5V 2A電源充電，以達致最佳的電池使用表現。(電源適配器不包括在內)
6. 充電時間視乎設定和環境因素而定；實際結果可能有所差異。

清理及維護


研磨器容器可以用清水沖洗來清潔，但請勿浸泡或放入洗碗機。(注意:請勿用水沖洗研磨器主機。)

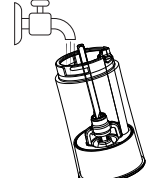

研磨器底座可拆卸。雙手握住底座兩側，向後推動充電接口部分即可拆卸。



 底座可直接清洗。請勿清洗充電接口。

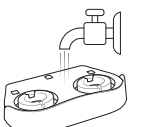

圖片只供參考，一切以實物為準。

注意：切勿使用含有腐蝕性的清潔劑或溶液清理研磨器。
儲存：連同使用說明，把研磨器存放於清涼及乾爽的地方。

故障排除

如果研磨器在研磨時不工作或停止:
- 請充電。(註:不建議在充電時使用產品。)
- 請逆時針方向調整調節器。
- 若以上操作均正確，研磨器仍然工作異常，請聯絡客戶服務中心進行維修服務。

保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)此保用只包含生產所導致的品質問題；並不包括機身外殼、電池、Type-C充電線、底座及其他配件，因誤用或不按說明書指示使用而導致的損壞。

***額外3個月保用凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。請即登入網站: www.batus.hk

注意:保用時，須帶同收據及請先致電服務中心。

服務中心

源澤市務有限公司
香港新界葵涌青山公路403號
匯城集團大廈21樓H室(近華星街12號)
電話: 2156 8238

辦公時間

上午10:30 - 下午12:30 (星期一至五)
下午02:30 - 下午05:30 (星期一至五)
上午10:30 - 下午12:30 (星期六)
(星期日及公眾假期休息)

www.batus.hk

Find us on



源澤地圖/Origin Map

