


# 電燒烤爐

型號 : EG803  
電壓 : 交流電220-240伏特, 50赫茲  
功率 : 1000瓦特

## 產品部件名稱

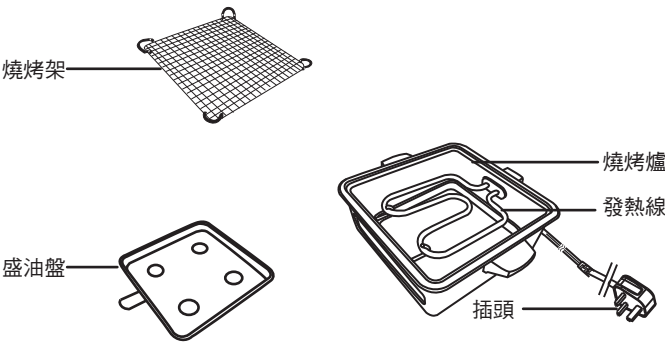

圖片只供參考，一切以實物為準

## 注意安全事項

1. 使用本產品前，請先細閱使用此說明書，並請妥善保存，以便日後翻閱。  
\*\*\*本說明書可於本公司網站:www.origo.hk下載。
2. 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
3. 本產品是家用或在類似環境使用，例如:商店內部、辦事處以及其他類似工作環境的廚房區域;農舍;客戶在旅館、汽車旅館和其他住宅類型的環境。
4. 使用本產品前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向服務中心查詢。
5. 本機不能用於附加外置的時計或控制器。
6. 電源線或保險線損壞時，不應自行更換。應到指定維修中心更換相同或更高規格的電源線或更換保險線。
7. 燒烤爐不應使用延長線與標稱小於13A的插座，必須使用與原裝同規格之電線。
8. 防止電插座負荷過重或損害保險線，高耗電量之電器不能同時接駁到同一電插座或同一線路。
9. 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡服務中心。
10. 使用時確保本品放置於安全、平穩的表面上。
11. 切勿於水源或易燃物品附近使用。
12. 切勿於高溫表面上或附近使用本產品。
13. 使用時，切勿把本產品放置於火爐或發熱的物體附近。



14. 電源線切勿靠近火源、高溫或隱藏在地毯之下，亦不可靠近水源。
15. 為防止損害電源線，請勿把電源線掛放在檯邊上或接觸發熱的物體。
16. 使用本產品時，燒烤爐必須放上食物，不可進行乾燒。此舉將嚴重縮短產品使用壽命。
17. 所有未開封的密封包裝食品(例如:罐頭)，不可使用燒烤爐直接進行加熱，避免發生危險。
18. 首次使用時，會有短暫時間的煙霧冒出，並有輕微異味。此種現象屬正常，請不用擔心。
19. 燒烤爐使用時間較長後，表面顏色有所變化，這是正常現象。
20. 切勿把盛油盤作燒烤盤使用。不可把盛油盤直接放在明火或發熱線上加熱。
21. 使用燒烤爐時，切勿離開你的視線。若要離開，請先關掉燒烤爐。
22. 若油脂滴到黏附在燒烤架、發熱線或盛油盤上的食物碎屑上，會短暫冒煙或閃出火花，此乃屬正常現象。
23. 燒烤時，除食物以外，請勿使用其他物品(例如:錫箔紙)完全覆蓋燒烤架。
24. 燒烤過程中，如有太多食物碎屑黏在燒烤架或發熱線上，可先關機清理碎屑後再燒烤。

### 使用前的準備

1. 先拿出所有配件，以濕潤毛巾清潔，將燒烤爐放置於平坦位置上。
2. 使用前請確保已拆除所有包裝物料。
3. 選擇靠近電源插座的位置，不要放在有水的地方使用。
4. 將插頭插入交流電220-240伏特，50赫茲的獨立插座，燒烤爐已可使用。
5. 第一次使用燒烤爐，先預熱10分鐘(切勿放上任何食物)。燒烤爐可能會出現少量冒煙及氣味約60秒，因為本產品在生產時發熱線帶有一層保護油，此乃正常現象。

### 使用方法

1. 將燒烤架放置在燒烤爐上面。
2. 燒烤前取出盛油盤，加入適量的水到盛油盤內，然後把盛油盤放回燒烤爐裡發熱線下方，注水時需確保水位保持在發熱線的下方。(注意：注水時切勿將水滴到發熱線上及切勿注入過多的水到盛油盤內。)
3. 將電源線的插頭插於插座。
4. 把開關從“O”調至“I”，指示燈會亮起。
5. 使用前，預熱五分鐘，然後放置食物在燒烤架上面。
6. 燒烤完畢後，把開關調至“O”位置，再拔掉插頭。
7. 待燒烤爐完全冷卻後方可清潔或移動機身。

### 清潔保養

1. 清潔前應確保燒烤爐已拔掉電源插頭及處於冷卻狀態。
2. 清潔時，應用濕軟的布圍擦拭燒烤爐的表面。如有難以擦拭的污垢，可使用日用的洗潔精進行擦拭，但不宜使用鋼絲球類狀物進行磨擦。
3. 請不要將燒烤爐主體及發熱線浸入到液體中進行清潔。盛油盤及燒烤架可以直接進行清洗，方便衛生。
4. 清潔後放置於乾爽陰涼的地方。

圖片只供參考，一切以實物為準

## 保用

本機可獲自購買日起1年免費保用(商業用途享有三個月免費保用)。此保用只包含生產所導致的品質問題；並不包括盛油盤、燒烤架、燒烤爐手柄及其他附件，因誤用或不依說明書指示使用而導致的損壞。

\*\*\*額外3個月保用: 凡於購買產品後10天內完成網上登記，即可免費延長保用期3個月，即15個月免費保用(商業用途除外)。  
請即登入網站:www.origo.hk

注意: 保用時，須帶同收據及請先致電服務中心。

## 服務中心

源澤市務有限公司  
香港新界葵涌青山公路403號  
匯城集團大廈21樓H室(近華星街12號)  
電話:2156 8238

## 辦公時間


上午10:30 - 下午12:30(星期一至五)  
下午02:30 - 下午05:30(星期一至五)  
上午10:30 - 下午12:30(星期六)  
(星期日及公眾假期休息)

www.origo.hk

Find us on



## 源澤地圖

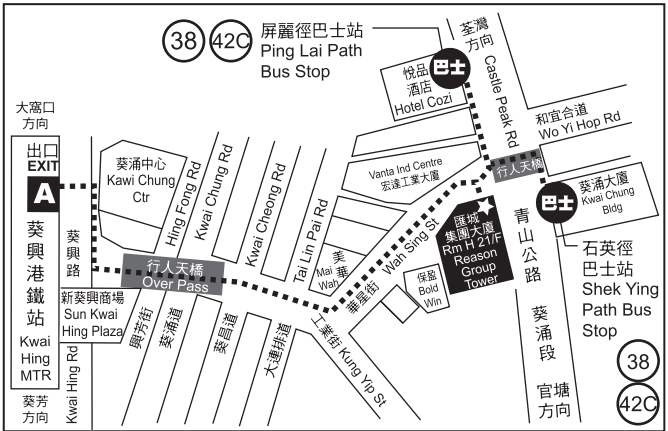




# Electric BBQ Grill

Model : EG803  
Voltage : 220-240V~50Hz  
Power : 1000W



## MAIN PARTS

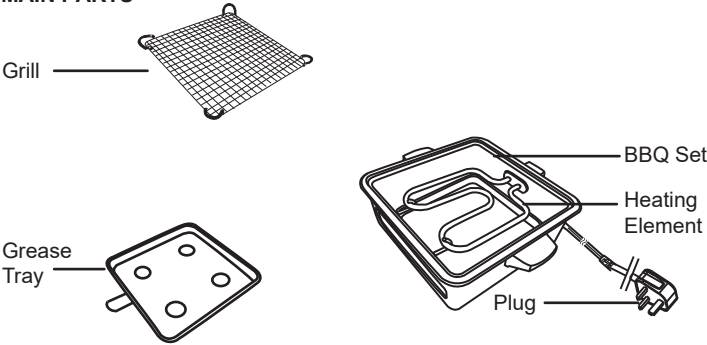

The picture is for reference only, everything in kind shall prevail.

## IMPORTANT SAFETY INFORMATION

1. Read all instructions carefully before using the appliance. Appropriately keep it for future reference when necessary.  
\*\*\*This instruction manual can be acquired at [www.origo.hk](http://www.origo.hk).
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible or their safety. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farm houses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.
4. Before using the appliance, check if the voltage marked on the rating label corresponds to the mains at your home.
5. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
6. To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires, broken fuse or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
7. Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
8. To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
9. Open the package and ensure that the appliance is undamaged. In case of doubt, do not use and contact your service centre.

10. Ensure the appliance is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the set.
11. DO NOT OPERATE this appliance near water sources or flammable liquids.
12. DO NOT OPERATE this appliance on or near any hot surface. (Hot plate, electric stoves etc).
13. This appliance cannot be used beside the stove and other high temperature objects.
14. DO NOT PUT the cord under the carpet, blankets. Always keep the power cable away from the walk way in room.
15. Do not hang the power cord on the edge of table or touch the surface with high temperature in order to avoid damage to the power cord.
16. Do not allow to turn on this appliance if you have not place any food on it.
17. To avoid any danger of explosion, please do not heat the canned goods before remove their cover.
18. For first time operation, there will have some smoke or smell. This situation happens properly. Don't worry about that.
19. If this Grill is using very long time, the surface of Grill will become fade, this situation also happens properly.
20. Never use the grease tray as a grill tray. Do not place the grease tray directly on the fire or heating element.
21. When the grill is in use, do not leave your eye sight. If you want to leave, please turn off the grill first.
22. If grease drips onto food crumbs stuck to the grill, heating elements, or grease tray, it may smoke or generate sparks briefly. This is a normal phenomenon.
23. When grilling, do not completely cover the grill with anything other than food (for example: tin foil).
24. When grilling, it too much food crumbs stuck to the grill or heating element, please turn off the grill and clean up the crumbs first.

## PREPARATION BEFORE USE

1. Take apart the grill, grease tray, clean with a soft damp cloth. Place your BBQ set on the level and stable surface.
2. Make sure that all packing materials are removed before use.
3. Choose the near part of socket during use. Do not use it near any sources with water.
4. Plug the power plug into an 220-240V~, 50Hz electrical outlet, the Grill is ready for use.
5. Before using for the first time, operate the appliance for 10 minutes without any food. There will have some smoke or smell for about 60 seconds. Because this BBQ set have some protective oil on the surface of the heating element during production.

## OPERATIONS

1. Put grill on top of the BBQ set.
2. Before grilling, take out the grease tray and fill with water, than place back the grease tray below the heating element of the BBQ set.  
(Note: Please do not drip water onto the heating element and never inject too much water into the grease tray.)
3. Connect this grill to the power supply.
4. Turn the switch from "O" to "I" and the indicator light is on for working.
5. After preheating the BBQ set for 5 minutes, then place any food on grill under the heating element according to different heat of cooking request.
6. When finished using the BBQ set, turn the switch to "O" position and unplug it from the socket.



7. Wait until the appliance is completely cool down before moving or cleaning.

## MAINTENANCE & CARE

1. Make sure the plug is removed from the power supply socket. After the appliance is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.
2. PLEASE DO NOT CLEAN THE SET WHEN IT IS STILL HOT
3. DO NOT USE hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose.
4. Do not immerse the main body of BBQ set and heating element in water to clean.
5. Put the appliance on the cool place right after the cleaning.

## WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the grill, grease tray, the handle of BBQ set and other accessories damage or defect caused by negligence or use not according to this instruction manual.

*\*\*\*Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: [www.origo.hk](http://www.origo.hk)*

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

## Service Centre

ORIGIN MARKETING LIMITED  
Unit H,21/F, Reason Group Tower  
(nearby 12 Wah Sing Street), 403 Castle Peak Road,  
Kwai Chung, N.T., Hong Kong.  
Tel: 2156 8238

## Office Hours

10:30am - 12:30pm (Mon ~ Fri)  
02:30pm - 05:30pm (Mon ~ Fri)  
10:30am - 12:30pm (Sat)  
(Closed on Sunday and Holiday)



Find us on

## Origin Map

