

#### obalplug Adaptor 45W Indicator P451W USB-A1 Port 00-250V~10A Max, 00W Max

00-250V~, 50-60Hz

.0V - 3.0A 15.0W

0.0V == 3.0A 27.0W, 2.0V == 3.0A 36.0W, 5.0V == 3.0A 45.0W,

0.0V - 2.25A 45.0W

.0V - 2.4A 12.0W Max

0V == 3 0A 15 0W

.0V == 3.0A 27.0W, 2.0V == 2.5A 30.0W,

.0V - 2.0A 30.0W

.0V == 1.5A 30.0W

9(W) X 90(H) X 53.5(D)

m (Approx.)

Storage Case and User Manual

5.0W



MAIN PARTS

### ATTENTIONS

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
 To prevent the risk of electric shock, DO NOT USE the set with broken charging cable, broken fuse or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
 To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another sochet which is connected in the same sochet.

socket which is connected in the same

4. Adaptor (AC-AC) does not convert voltage 5. Do not use with appliance requiring ground

wire. 6.FOR used with unearthed appliance only. 7.This Adaptor is for temporary use only. 8.Unplug when not in use, Indoor use only. 9 Use this Product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons. DIRECTIONS FOR USE

1.Plug the Adaptor into an AC

.00

AUS

AUS

1

Australia China New Zealand

<u>u</u>

ŬК

UK

۵

United

Singapore Malaysia

- -

socket

shown

ŬSA

USA

United States Japan Taiwan Thailand

# 10.Open the package and ensure that the Product is undamaged. In case of doubt, do not use the Product and contact your supplier.

supplier. 11.Do not let children play parts of package. 12.Do not take this Product apart exposing electrical parts. Call customer service for assistance and guarantee information. 13.The Product is not intended for use in wet

The Product is not intended for use in wet or damp locations. Never locate the Product where it may fall into a bathtub or other water container.
 Do not place the Product near a source of heat or fire.
 DO NOT OPERATE this Product near water sources or flammable liquids.
 Please do not let water or other liquids flow into the interface of this product, causing damage to the product:

causing damage to the product; 17. Avoid running high energy-consuming programs for a long time during use or charging.

charging; 18. The length of USB cable should be less than

3M. 19.If overheating occurs, please stop using it. 20.For Use Outside Hong Kong Only. 21.UK Pins Sealed According to HK Laws. 22.Refer to Manual to Unseal for Use Outside

 This product contains recyclable materials. Do not dispose this X

product as unsorted municipal waste. Please contact your local municipality for the nearest collection

Applicable in over 210 countries and regions. The picture is for reference only, everything in kind shall prevai.



### powered 2. Connect the USB cable to the Adaptor and Connect the USB cable to the Adaptor and yours devices. After charging or using, remove the Adaptor from the power socket. Note: Due to regional restrictions, some features may not be available. Slide the curich to change plug three as Slide the switch to change plug types as

EU

 $| \odot |$ Austria Germany Korea Indonesia France

### UNSEAL TO UK PLUG

ust cut the blockage, make sure there is no debris blocking the pins. It can be used with a multitude of appliance up to 2500W at 250V or 1000W at 100V as shown:

🗆 🎙 🛋 🔮 🤋 🖁 USB port is suitable for this device as shown: 1 27 <u>6</u> • • • • • • MAINTENANCE & CARE

WARNING: ALWAYS UNPLUG THE POWER PLUC REFORE MOVING OR SERVICING DO NO BEFORE THE ADAPTOR IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

House: Clean the outside of the Adaptor with House: Clean the outside of the Adaptor with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water. CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Adaptor. NEVER use ALCOHOL or any other SOLVENTS. STORAGE: Store the Adaptor with these instructions in the original box in a cool and dry place.

drv place.

清理及維護

警告: 不使用充雷插座時 · 經常保持拔除插頭 · 及切

勿將充電插座浸於水或其他液體中。在清潔本充電 插座前·先將充電插座關掉及把充電插座從電源插

外殼: 清理時切勿將充電插座浸於水或其他液體中。 使用濕潤軟布抹擦清潔, 頑固污垢可用軟布沾上含

肥皂的溫水抹擦。 注意:切勿使用含有腐蝕性的清潔劑或溶液清理充

電插座。 儲存:連同使用說明書,把充電插座存放於清涼及

### TROUBLE SHOOTING

LED indicator does not light

- Possible overload, unplug the device and check the LED indicator again.
  Fuse burn-out, it cannot be replaced by
- Fuse purn-out, it cannot be replaced by yourself, please go to the service center for repair.

#### WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the housing, USB-C cable and other accessories, damage or defect caused by negligence or use not according to this instruction manual.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to commercial use)

- A.Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or
- B. Extra 6 months warranty: follow "Origin Marketing Limited for Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

### Service Centre ORIGIN MARKETING LIMITED

Unit H,21/F, Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong Tel: (852) 2156 8238

#### Office Hours

10:30am - 12:30pm (Mon ~ Fri) 02:30pm - 05:30pm (Mon ~ Fri) 10:30am - 12:30pm (Sat) (Closed on Sunday and Holiday)





### Origin Map



U	
)	
利調査に図け	

座拔出

I FD 指示 熔不高

乾爽的地方。

. 可能負荷過重,拔除設備後並再次檢查LED指示

故障排除

2. 保險絲損壞·不可自行更換·請自行到服務中心 維修。

## 保用

本產品可獲自購買日起1年免費保用(商業用途享有3 個月免費保用)此保用只包含生產所導致的品質問題 ;並不包括機身外殼、USB-C電線及其他配件,因 誤用或不依說明書指示使用而導致的損壞。

升級保用:(須於購買本產品後10天內完成以下步驟 ;升級保用不適用於商業用途)

A.額外3個月保用: 於本公司網站完成登記·可享有 B. 共15個月免費保用;或

額外6個月保用:到訪並"追蹤"本公司 (Origin Marketing Limited)的Facebook 即可享有共 18個月免費保用。(如果已追蹤,則自動享有此升 級保用·毋須再進行上述步驟)

注意:保用時、須帶同收據及請先致電服務中心。

#### 服務中心

源澤市務有限公司

香港新界葵涌青山公路403號 匯城集團大廈21樓H室(近華星街12號) 電話: (852) 2156 8238

#### 辦公時間

上午10:30 - 下午12:30 (星期一至五) 下午02:30 - 下午05:30 (星期一至五) 上午10:30 - 下午12:30 (星期六) (星期日及公眾假期休息)



