 




# 立體搖擺對流扇 3D Convection Fan

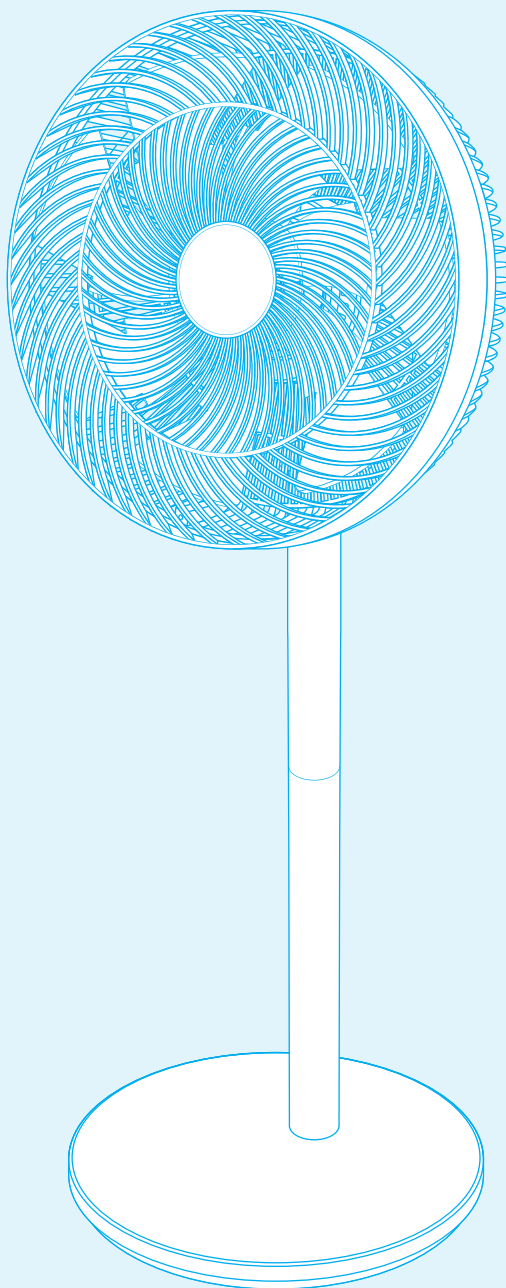

 
## CF1818/CF1819

### 使用說明書


### INSTRUCTION MANUAL

- \* 使用風扇前，請先細閱使用說明，並請妥善保存以便將來翻閱。
- \*\* 本說明書可於本公司網站下載 [www.origo.hk](http://www.origo.hk)。
- \* Read all instructions carefully before using the FAN, and keep this instruction for future reference when necessary.
- \*\* This instruction manual can be acquired at [www.origo.hk](http://www.origo.hk).

- 使用本風扇前，請先細閱使用說明。  
Read all instructions carefully before using the Fan.
- 必須按照使用說明指示操作本風扇，否則可能引致產品損壞、短路、火警或人命損傷。  
Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- 打開包裝，檢查風扇。如發現產品有損壞，請勿使用及即時聯絡供應商。  
Open the package and ensure that the Fan is undamaged. In case of doubt, do not use the FAN and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。  
Do not let children play parts of package.
- 本產品所提供的電源適配器僅供本風扇使用。  
The power adaptor provided is designed for the Fan only.
- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。  
Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.

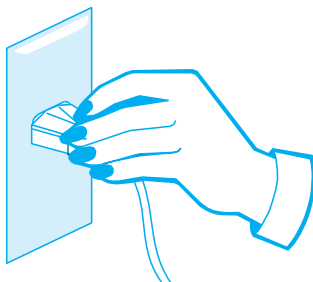

- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。  
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。  
Avoid using extension cord as it may overheat and cause fire.

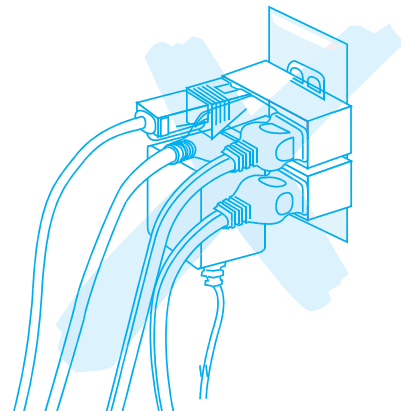 

- 本風扇不適用於室外及作工業用途。  
This Fan is intended for household use ONLY and not for industrial or outdoor use.

- 切勿將任何異物放入風扇內；或阻擋風扇出風口及入風口，皆因以上一切行為均可能導致風扇損壞。

Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.

- 非使用風扇時請拔除插頭，切斷電源。

Do not leave the Fan unattended. Always unplug the Fan when not in use.

- 警告："⏻" 鍵不應作為切斷電源的用途。

WARNING: The "⏻" switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

- 如須移動風扇，請先拔除插頭切斷電源。

Always disconnected the Fan from the power supply when moving it from one location to another.

- 不可在潮濕或有積水的環境使用，不可將風扇擺放於浴缸或大型容器上面。

The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.

- 切勿將風扇擺放在發熱源頭或火源附近。


Do not place the Fan near a source of heat or fire.


- 警告；清理前必須先拔除電源插頭。若電源線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。

WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

- 請保持清潔以維持風扇處於良好狀態(詳細請參閱清理及維護部份)。

Keep the Fan clean to maintain in good condition (refer to maintenance section).


-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。

 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.


# 各部名稱 Main Parts

 立體搖擺對流扇  
3D Convection Fan


origo

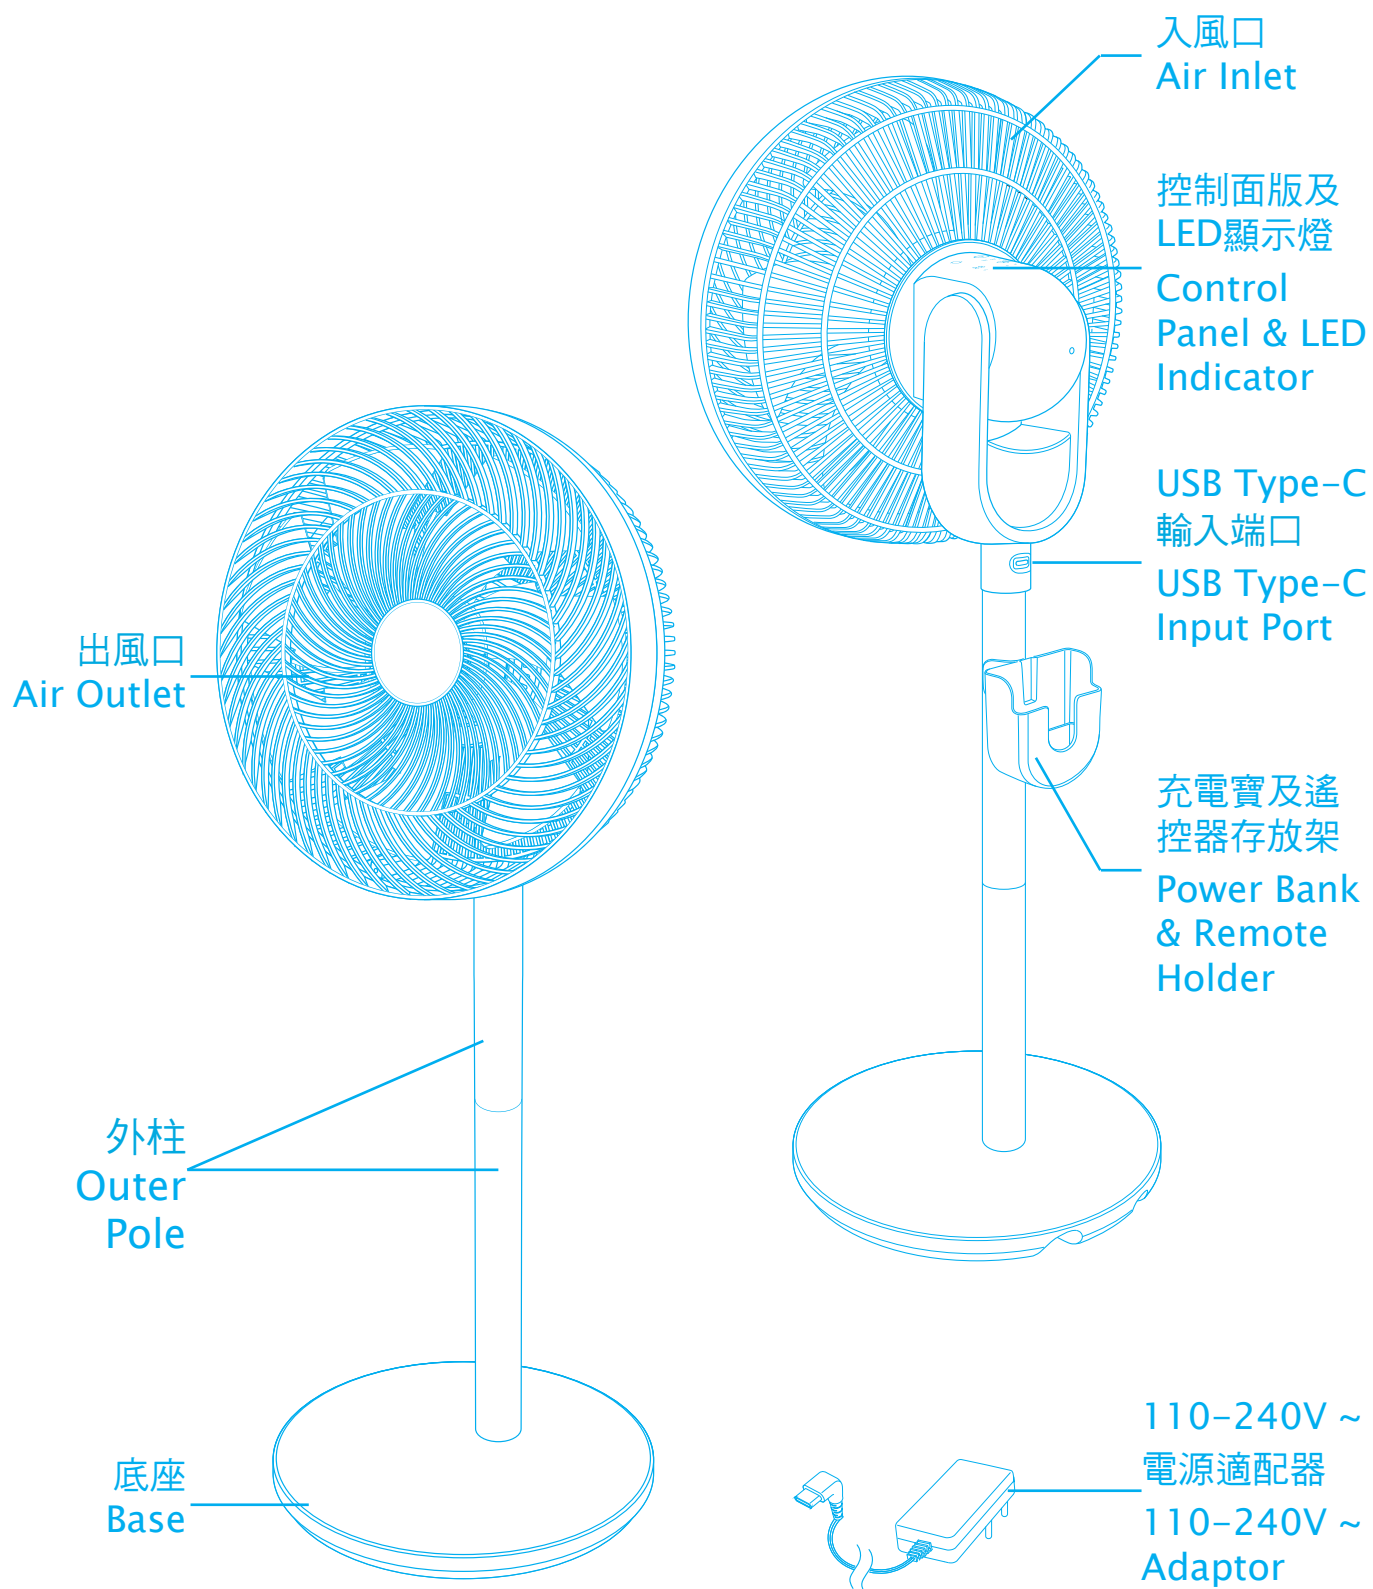

 
圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

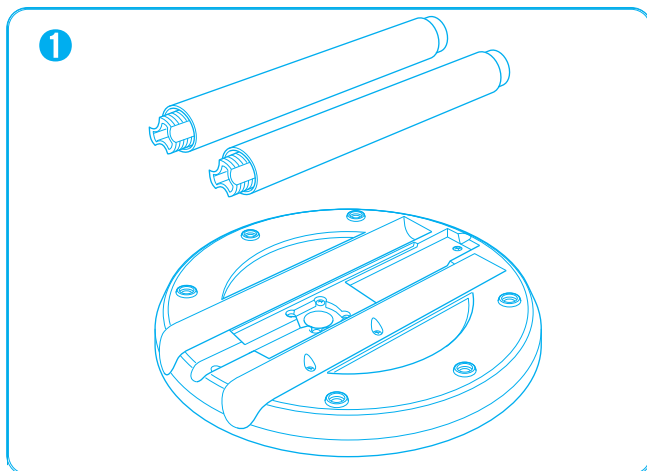

 
1. 從包裝內取出兩條外柱及底座。  
Take out the two outer poles and base from the packing.

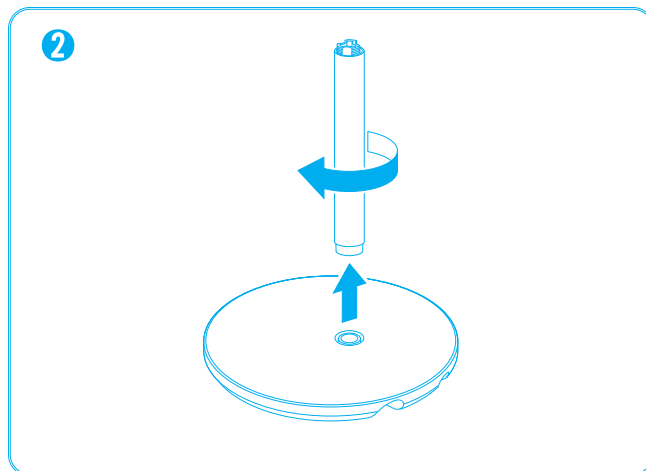

 2. 把外柱插入底座的圓孔中，並順時針旋轉外柱將外柱鎖緊在底座。(可以選擇安裝一條或兩條外柱)  
Insert the outer pole into the round hole of the base and rotate the outer pole clockwise to lock the outer pole to the base. (Option to install one or two outer pole)

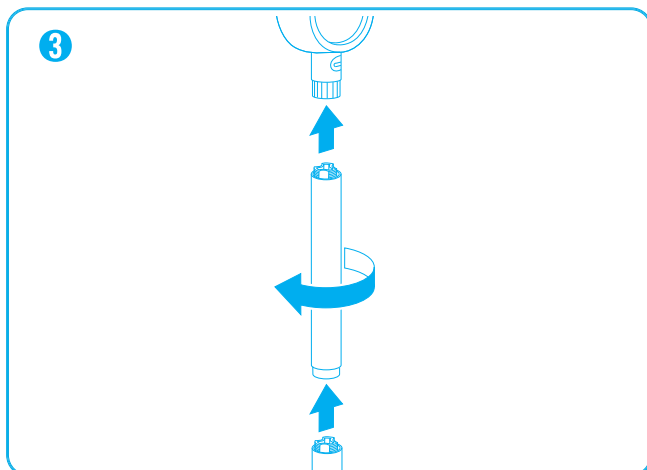

 3. 把主機體插入外柱中，並順時針旋轉主機體將主機體鎖緊在外柱。  
Insert the main body into the outer pole and rotate the main body clockwise to lock the main body to the outer pole.

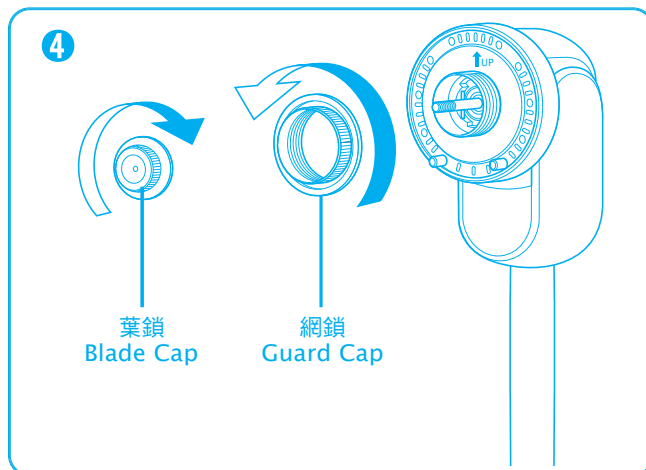


4. 從電機軸取出葉鎖及網鎖。  
Remove the blade cap and guard cap from the motor shaft.

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.




 8

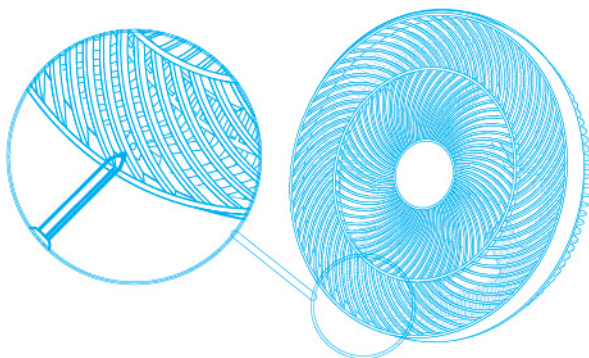


5. 使用網鎖把後網鎖緊在電機外殼前面。  
Fixing the rear guard onto the front of motor housing by the guard cap.

 8

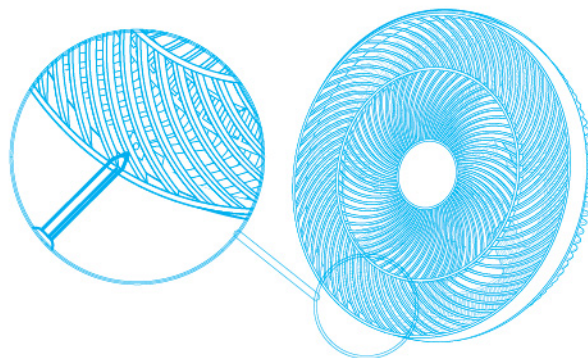


6. 使用葉鎖把扇葉鎖緊在電機軸。  
Fixing the blade on the motor shaft by the blade cap.

 8

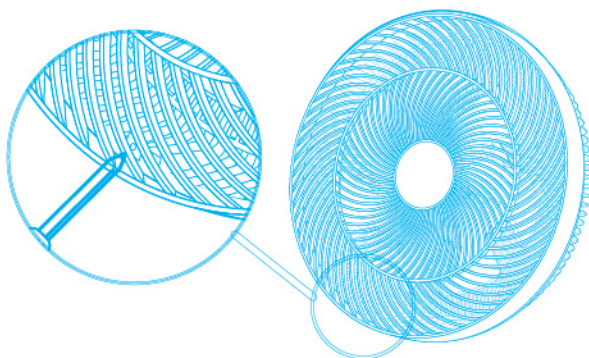

7. 把前網放在後網上，順時針旋轉前網。  
Put the front guard onto the rear guard, turn the front guard clockwise.

 8

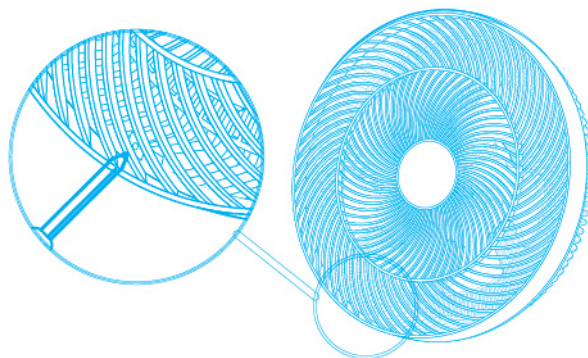

8. 將後網下方螺絲鎖緊。  
Fix the rear guard with the screw.

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

風扇可使用控制面板按鈕操控(如圖1)，或改用遙控器操控。

 
1. 將風扇擺放於穩固的平面上，將電源適配器接駁到風扇電源輸入端口，再將插頭插入獨立插座或連接充電寶使用(\*充電寶及USB Type-C電源線不包括在內)。

2. 開/關: 按 "⏻" 鍵，風扇以第1檔啟動。

The Fan may be operated by the control panel (as shown in Figure 1) or using remote control.

1. Place the Fan on a stable and flat surface. Plug the power adaptor to the power socket, then plug the power cord into an electrical outlet or connect it to a power bank for use (\*Power bank and USB Type-C cable not included).

2. POWER: Turn the Fan ON by pressing the "⏻" key, the Fan start at speed 1.

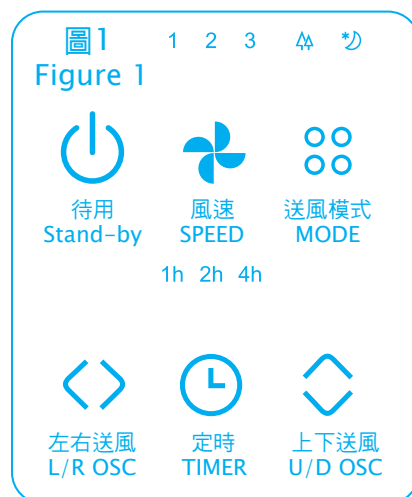

圖片只供參考，一切以實物為準  
The picture is for reference only, everything in kind shall prevail.

3. 風速: 按風速設定鍵 "🌀"，設定所需風速: 6段風速。LED顯示燈將會顯示風速。

SPEED: Adjust the Fan speed to the desired level: 6 levels wind speed by pressing "🌀" key. The speed setting is displayed on the LED light.

4. 上下送風: 按上下送風鍵 "⬆️⬆️"，風扇以自動上下搖擺模式送風。如欲停止自動上下搖擺送風，再按此鍵一次。

OSC(UP/DOWN): Press the "⬆️⬆️" key to allow the Fan to UP/DOWN oscillate the wind direction. To stop the oscillation, press this key again.

5. 左右送風: 按左右送風鍵 "⬅️➡️"，風扇以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。

OSC(LEFT/RIGHT): Press the "⬅️➡️" key to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, press this key again.

6. 定時設置: 按定時設置鍵 "🕒"，選定7個不同的自動關機時間，分別由1至7小時，LED顯示燈將會顯示關機時間。

TIMER: Press the "🕒" key to set desired auto power off time. There are 7 time intervals, from 1 to 7-hours, the power off time is displayed on the LED light.

7. 送風模式: 按送風模式鍵 "⌘", 設定所需送風模式: 自然風或睡眠風。LED顯示燈將會顯示送風模式。按送風模式鍵三次, 送風模式會變回常風。

MODE: Press the "⌘" key to set the Fan as Natural or Sleep mode. The mode is displayed on the LED light. Press the mode key 3 times, it will come back to default setting normal mode.

8. 關機: 如需關機, 再按 "⏻" 鍵一次, 關機後的風扇會自動回復到原來位置。

OFF: To turn the Fan off, press the "⏻" key again, the Fan will automatically resume to its original position after shutdown.

注意: 如果使用充電寶供電, 某些功能可能會受到限制, 例如: 風速和搖擺模式。

Note: If powered by power bank, some functions may be limited, e.g. speed and oscillations.

## 遙控器 Remote Control

1. 遙控器操作方式與機身按鍵操作方式部分不同。

Part of functions performed by the Remote Control work are different to the control panel.

風速 🌀: 按風速 "+" 鍵或 "-" 鍵, 設定所需風速。

SPEED 🌀: Press the "+" key or "-" key to adjust the Fan speed.

超強風速: 按 "⚡" 鍵, 風扇以第6檔運作。

GALE SPEED: Press the "⚡" key the Fan will operate at speed 6.

定時設置 ⌚: 按定時設置 "+" 鍵或 "-" 鍵, 設定所需自動關機時間。

TIMER ⌚: Press the "+" key or "-" key to set the power off time.

消除按鍵提示聲音: 按 "🔊" 鍵, 按鍵提示聲音消失。再按此鍵, 按鍵提示聲音恢復。(此功能只限遙控器操作)

ELIMINATE KEY PROMPT SOUND: Press the "🔊" key, and the sound of key prompts will disappear. Press this key again, the sound of key prompts will resume. (This function can only be operated by remote control)

2. 更換電池: 使用一枚3伏特鋰電池 (CR2025)。

 
 
Battery replacement: Install one 3V Lithium battery (CR2025).

### 警告 / WARNING

1. 請把電池放在兒童碰不到的地方, 如果孩子吞下電池, 需立即致電諮詢醫生。  
Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. 不要對電池進行充電或隨意棄置在有火源的地方。  
Do not recharge or dispose in fire.
3. 應保持電池存放於乾燥, 陰涼的地方。  
Keep in a dry and cool place.
4. 以正確的方向插入電池。  
Insert battery in right direction.

電池的處理 - 請按相關地區的法律規定處理曾經使用的電池。

Battery disposal - Please dispose the used battery per municipal or provincial law.

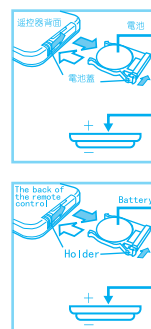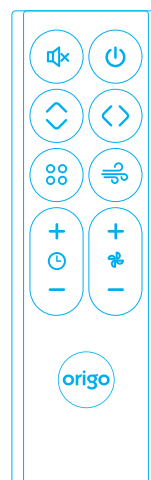



警告：不使用風扇時，經常保持拔除電源，及切勿將風扇浸於水或其他液體中。在清潔本風扇前，先將風扇關掉及把電源線從插座拔出。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

外殼及前後網：清理時切勿將風扇浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

Housing & Guard: Clean the outside of the Fan with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water.

扇葉：將後網下方螺絲鬆脫後取出前網，使用濕潤軟布抹擦清潔扇葉。清潔後，放回前網並用螺絲鎖緊，才可使用風扇。

Blade: Loose the screw and pull the front guard out. Clean the blade with a soft damp cloth, place back and fix the front guard with the screw after cleaning.

注意：切勿使用含有腐蝕性的清潔劑或溶液清理風扇。

 
CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS.

儲存：連同使用說明書，把風扇存放於清涼及乾爽的地方。

STORAGE: Store the Fan with these instructions in the original box in a cool and dry place.

外柱及遙控可放在底座底部指示位置收納。


The outer poles and remote control can be placed at the indicated position at the bottom of the base for storage.

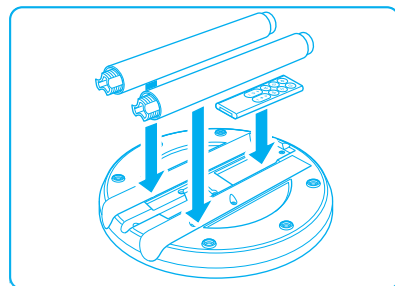

## 技術規格

### Specification

 型號 Model Number	CF1818/CF1819
輸入 Input	DC12V 3A
額定功率 Rated Power	36W
產品尺寸 Product Dimension	335(W) x 890(H) x 330(D) mm (約/Approx.)

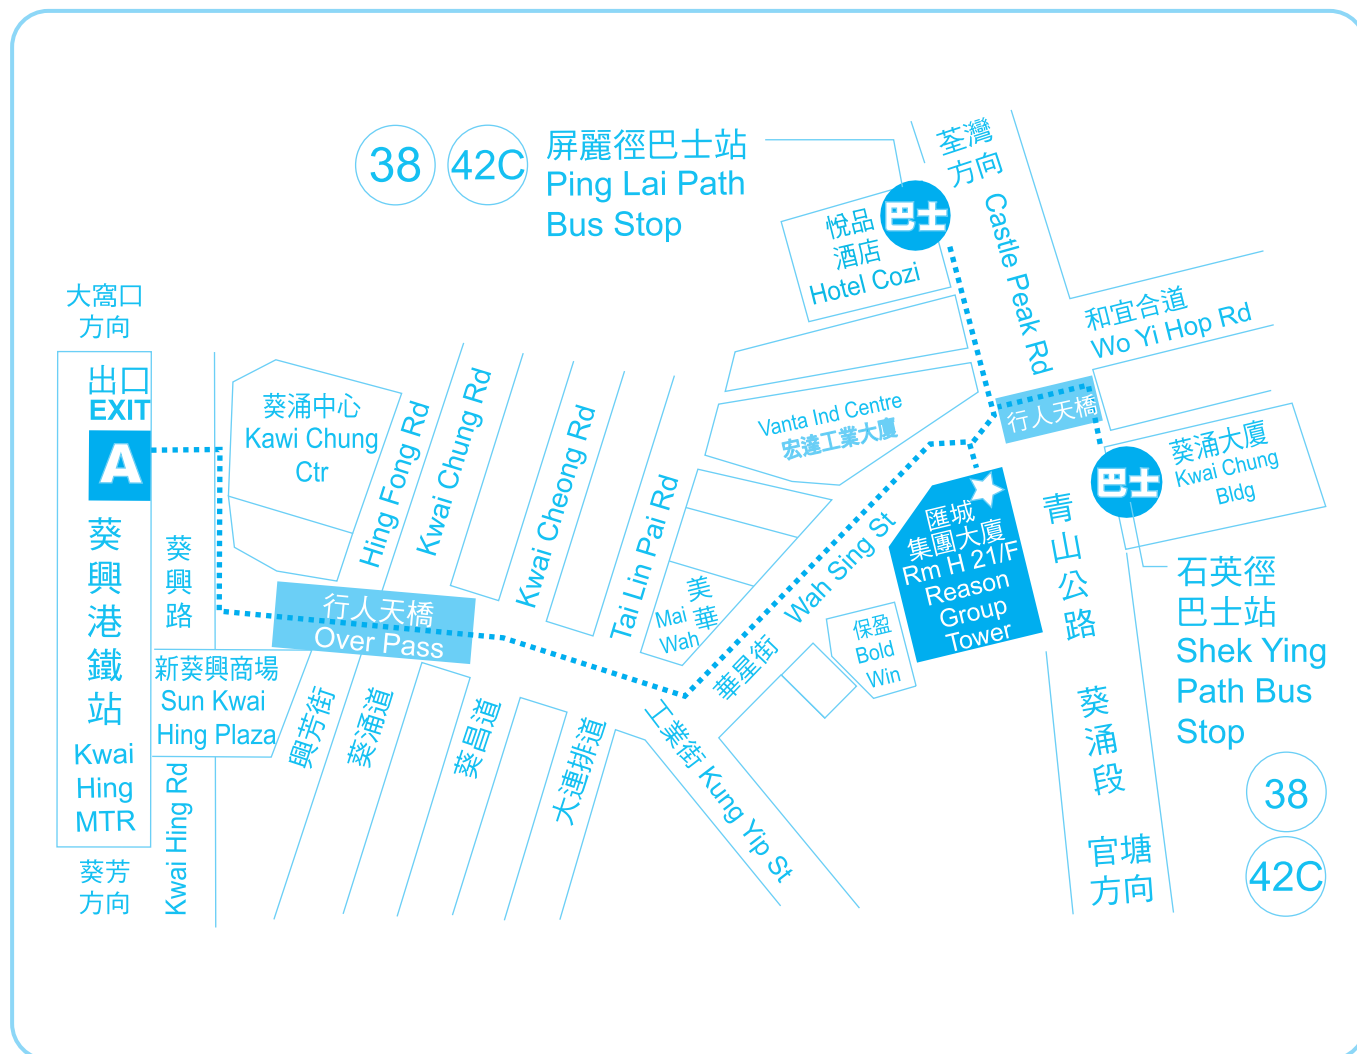

辦公時間

10:30am – 12:30pm (星期一至五)  
02:30pm – 05:30pm (星期一至五)  
10:30am – 12:30pm (星期六)  
(星期日及公眾假期休息)

OFFICE HOURS

10:30am – 12:30pm (Mon to Fri)  
02:30pm – 05:30pm (Mon to Fri)  
10:30am – 12:30pm (Saturday)  
(Closed on Sunday and Holiday)

# 產品保用証(一年自攜服務)

立體搖擺對流扇  
3D Convection Fan



產品： 立體搖擺對流扇

型號： CF1818/CF1819

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。
2. 以下情況不被包括在保養範圍內：
  - 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
  - 未經本公司授權之自行處理、維修及/或改裝；
  - 任何機殼、前網、扇葉、葉鎖、後網、網鎖、遙控器，以及配件。
3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。
4. 更換後之任何零件或配件，均屬本公司所有。
5. 本保養服務只適用於香港特別行政區。
6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

**升級保用：**(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

- A. 額外3個月保用: 於本公司網站完成登記，可享有共15個月免費保用；或
- B. 額外6個月保用: 到訪並“追蹤”本公司 (Origin Marketing Limited) 的 Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

www.origo.hk



Find us on



## 服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

電話: 2156 8238 www.origo.hk

# Warranty Card(1 year carry-in)

Item : 3D Convection Fan

Model : CF1818/CF1819

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
  - If the product was damaged by abuse, misuse, negligence or accidents;
  - Repair, alteration/modification by unauthorized technician;
  - The housing, front grille, fan blade, blade cap, rear grille, grille cap or accessories.
3. The customer is requested to bring the product to and from our Service Centre.
4. Any parts or accessories, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Original invoice should be presented in order to get free service.

**Extended Warranty:** (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to commercial use)

- A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or
- B. Extra 6 months warranty: follow “Origin Marketing Limited” on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

## Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),  
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238 www.origo.hk

www.origo.hk



Find us on

