


Batus

Rechargeable Fan User Manual

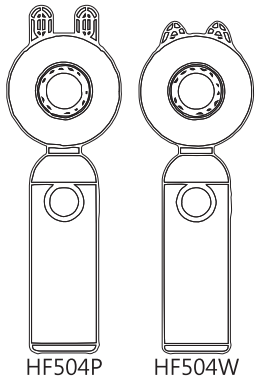


Model: HF504

*Please read the instruction carefully before use, and keep the instruction manual properly.
**This user manual can be acquired at www.batus.hk.

MODEL & SPECIFICATION

Product Name	Rechargeable Fan
Product Model	HF504P/W
Input Voltage	DC5V 2.0A
Battery	Li-ion x 3000mAh
Speed	4 Speeds.
Charging Time	Approx. 4 Hours.
Operation Time	Approx. 6 Hours Max. (Depending on different settings)
HF504P Size	56(W) x 172(H) x 54(D)mm (Approx.)
HF504W Size	56(W) x 164(H) x 54(D)mm (Approx.)
Accessories	USB Type-C Cable and User Manual

MAIN PARTS

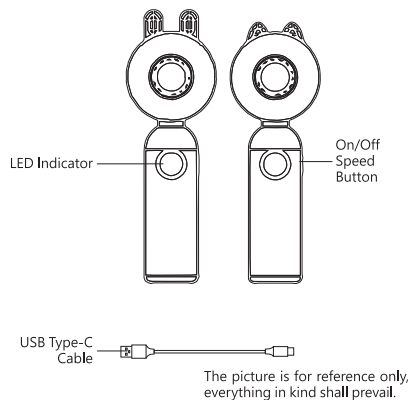

ATTENTIONS

1. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
2. This product contains a lithium battery, and it is for hidden to disassemble, hit, squeeze or throw it into fire. Do not use if severe swelling occurs. Do not place in a high temperature environment.
3. Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
4. Open the package and ensure that the Fan is undamaged. In case of doubt, do not use the FAN and contact your supplier.
5. Do not let children play parts of package.
6. This Fan is driven by batteries. Please use the USB Type-C cable provided to fully charge the product before use.
7. Do not take this Fan apart exposing electrical parts. Call customer service for assistance and guarantee information.
8. Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.

9. Do not leave the Fan unattended while using. Always switched off the Fan when not in use.
10. The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.

11. Do not place the Fan near a source of heat or fire.
12. WARNING: To avoid danger of electric shock, unplug the USB Type-C cable and switched off the Fan when not in use and before cleaning. If the Fan is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.

DIRECTIONS FOR USE

1. Please use the correct power to connect with USB Type-C cable or charging use.
2. On/Off: Turn the Fan on by pressing the on/off speed button , the Fan start at speed 1.
3. Speed: Adjust the Fan speed to the desired level by pressing on/off speed button, the speed setting is displayed on the LED indicator. Long press this button to quickly increase the wind speed.
4. Off: To turn the Fan off, press and hold the on/off speed button until it stops.

CHARGING/OPERATION TIME

1. It is recommended to charge it every 3 months to avoid battery damage and affect product functions if the product is not working for a long time.
2. When the product is not working for a long time, please make sure it can storage under low humidity or room temperature in case of environment factors to the product function damage.
3. It is recommended to use DC5V 2.0A power supply for charging to achieve the better battery performance. (Power adaptor