 




陶瓷暖風機
Ceramic Fan Heater

Cool & Warm

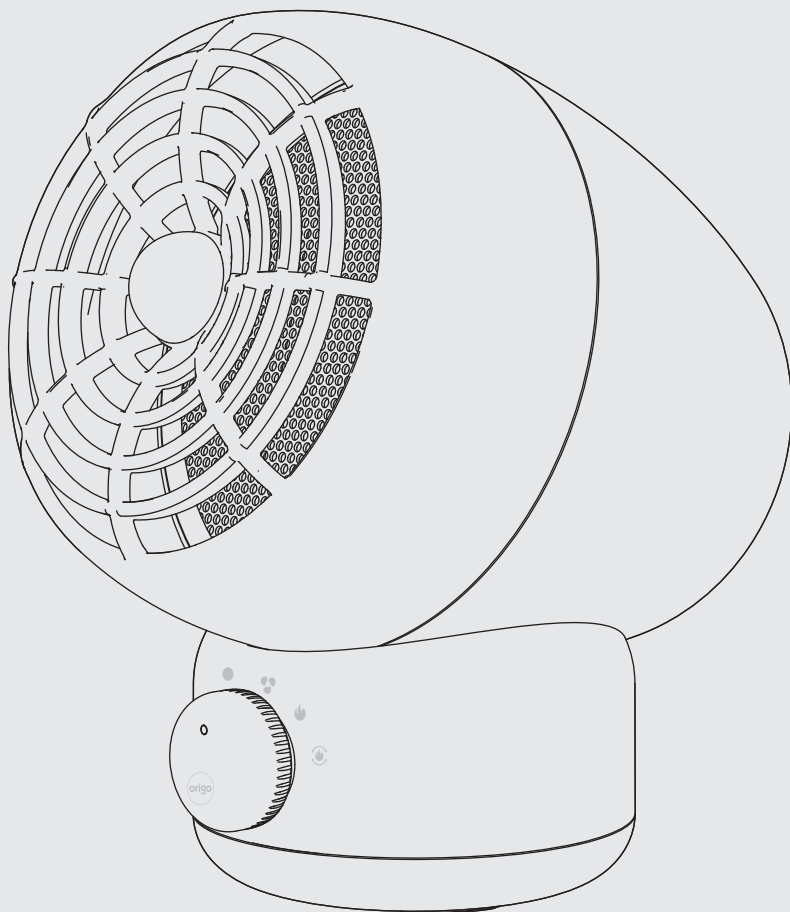

FH9200W
使用說明書
Instruction Manual

- 使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。
- 本說明書及其修正版本（如有）可於本公司網站www.origin.hk下載。
- 本說明書所載的功能、外觀、圖片及數據皆以實物為準。
- Read all instructions before using the product. Keep this manual for future reference.
- This instruction manual is also available at www.origin.hk.
- In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.

- 本機不是為8歲以下小孩，體質、感覺或智力有障礙人士或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- 未滿3歲的小孩除非受到持續監督，否則應該遠離本產品。

Children of less than 3 years should be kept away unless continuously supervised.

- 使用時確保暖風機放置於安全、平穩的表面上。

Use this Heater on a horizontal and stable surface.

- 請不要使用曾經掉落的暖風機。
- Do not use this Heater if it has been dropped.

- 年齡在3至8歲的小孩只有在產品已經被放置或安裝在其預期的正常操作位置，並已經接受了使用本產品的安全指導或監督並理解可能存在的危險時，才能開關產品。其不得插拔電源、調節和清潔產品，也不得進行用戶維護。

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- 如本產品的電源線有損壞痕跡，為保障安全，請立即停止使用並聯絡供應商更換。

If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- 如暖風機有明顯的損壞跡象，請勿使用。
Do not use if there are visible signs of damage to the Heater.
- 警告：除非提供持續監督，否則當無法自行離開房間的人佔用時，請勿在細小房間內使用此暖風機。
WARNING: Do not use this Heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- 切勿把暖風機擺放於電源插座之下。
The Heater must not be located immediately below a socket outlet.
-  警告：為防暖風機過熱，切勿覆蓋暖風機的出、入風口。使用中的暖風機出口會發出高熱，切勿觸碰。
 WARNING: In order to avoid over heating, do not cover the Heater. The Heater is hot when in use. To avoid burns, do not let bare skin touch hot surface.
- 暖風機不適用於室外及作工業用途。
Heater is intended for household use ONLY, not for industrial or outdoor use.
- 警告：暖風機的出、入風口應與易燃物品(如傢俱、枕頭、床鋪、毛巾或窗簾等)保持安全距離不少於1米。
WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet and inlet of the Heater.
- 切勿使用可使暖風機自動開機的外加管理程式、時間制、遙控系統或任何其他裝置，以免因暖風機被覆蓋或擺放位置不當而發生火警。
The Heater is not intended to be operated by means of an external programmer, timer, separate remote-control system or any other device that switches the Heater on automatically, since a fire risk exists if Heater is covered or positioned incorrectly.
- 暖風機不可擺放於有潛在危險的地方使用(例如：非常潮濕環境、易燃物品或化學品倉庫)。
The Heater must NOT be used in potentially dangerous location such as flammable explosive, chemical laden or wet atmospheres.

- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。

Remove the package and ensure that the Heater is undamaged. In case of doubt do not use the Heater and contact your supplier.

- 包裝物料並非玩具，不可讓小孩玩耍。

Do not let children play parts of package.

 
- 切勿將物品放置在暖風機上。Please do not put any object on the Heater.

- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。

Avoid using extension cord as the extension cord may overheat and cause fire.

- 使用暖風機前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。

Before using the Heater, check if the voltage marked on the rating label corresponds to the mains in your home.

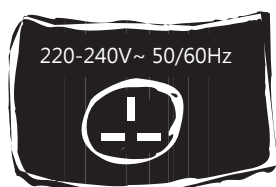

- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。

Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.

- 警告：開關/功率鍵不應作為切斷電源用途。

WARNING: The On/Off and power switch should not be used as the sole means of disconnecting power.

- 警告：清理前必須先拔除電源插頭。

WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning.

- 切勿將水倒入機身或將濕衣服掛在機身上，避免發生漏電及觸電危險。嚴禁將易燃物及濕的衣物覆蓋在機身出風口上，避免發生火災或觸電危險。

Please do not pour water into the Heater or hang wet clothes over the Heater so as to avoid current leakage and electric shock; Please do not put flammable materials and wet clothes covered on the air outlet so as to avoid risk of fire or electric shock.

- 暖風機不可擺近水盆、浴缸、花灑、泳池、潮濕或有積水的周邊環境使用。

The Heater is not intended for use in the immediate surroundings of a basin, a bath, a shower, a swimming pool, a wet or damp locations.

- 切勿將任何異物放入機內；或阻擋機身出風口及入風口；或將暖風機放置在柔軟或不穩固的表面上(例如床鋪)，皆因以上一切行為均會導致機身過熱，引發短路或火警。

Do not insert any objects into the Heater as it may cause an electric shock or fire or damage to the Heater. Do not block or tamper with the Heater in any manner while it is in operation. To prevent a possible fire, do not block air inlet or outlet in any manner. Do not place on soft surfaces, like a bed, where opening may become blocked.

- 切勿讓手指或導電物體插入機體任何通氣口，以免導致觸電、身體損傷、火災或損壞機體。

Do not insert fingers or conductive object into the front air outlet and back air inlet of the Heater to avoid the risk of human injury, electric shock, fire and product damage.

- 每次使用此產品前，必須確保電源線是完全鬆開的。避免使用延長電源線，因為延長電源線可能會過熱而導致火災風險。另外，切勿在同一插座上使用多於一個暖風機或其他裝置，因為插座可能會負荷過重。

Fully unwind the lead each time before use. Where possible, avoid using of extension cords because the extension cord may overheat and cause a risk of fire. Never use a single extension cord to operate more than one Heater. And make sure no other appliances are plugged into the same socket with this Heater. Otherwise, a socket overload could occur.

- 暖風機內置恆溫保護裝置，當機身溫度過熱，暖風機將自動停止操作，應立即關機檢查並立即停止使用此機。

The Heater includes a thermal overload protector to warn when the Heater are overheat. When the Heater is overheat, it will be shut off automatically, immediately turn the Heater off and inspect the Heater.

- 注意：本產品的某些部位使用時會變得非常熱，並可能導致燙傷，兒童及易受傷害人士應特別注意。

CAUTION : After use, some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- 轉動開關/功率旋鈕時，切勿用力過度，以免損壞控制旋鈕。
When turning the on/off & power knob, do not turn it with extra force to avoid damaging the knob.

- 切勿將金屬物件(如針或金屬線等)插入產品的機殼的縫隙，以防觸電及其他危險。

Do not insert metallic objects (such as pins or wire) into the enclosure, gaps of the housing to avoid electric shock or other dangers.

- 本機在使用時不可用力敲擊或震動機身。

Avoid any shocks or concussions to the appliance.

- 要定期清除電源插頭及插座上之灰塵，否則引致絕緣不良而導致火災。

Wipe off dust on the plug and socket periodically. Accumulation of dust on main plug may cause poor insulation and may result in fire.

- 為了安全起見，當人離開產品時，必須關機，以免發生意外事件。當沒有人使用此產品時，拔除電源。

Shut down the Heater before the user leave the Heater so as to avoid accidents. Unplug the power when not in use.

- 本機在使用一段時間後，若出現異聲或風速不均勻的現象，可能是後殼入風口處的灰塵太多阻塞了氣流，此時用毛刷清潔一下後即可恢復正常。

If it occurs problems of abnormal sound or uneven wind speed after using for some time, perhaps there is too much dust in the air inlet grid and make the air flow blocked, the fan could get right by cleaning the fan with a plastic brush.

-  本產品含有可回收材料，
— 不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。

 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

 
各部名稱 Main Parts

陶瓷暖風機 Ceramic Fan Heater

origo


正面
FRONT

出風口
Air Outlet
開關/功率
旋鈕
On/Off &
Power Knob
防傾倒
安全開關
Tip Over
Safety Off

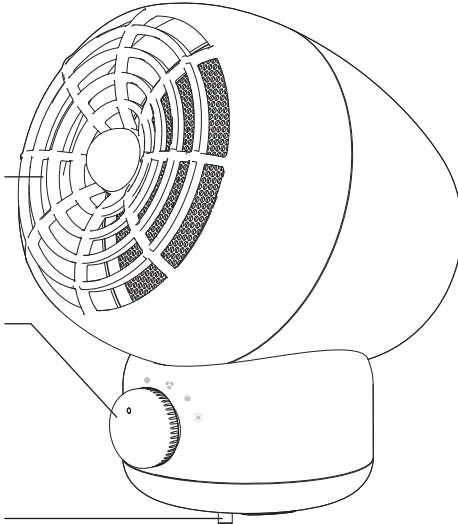

背面
BACK

 入風口
Air Inlet
電源線及插頭
Power Cord
& Plug

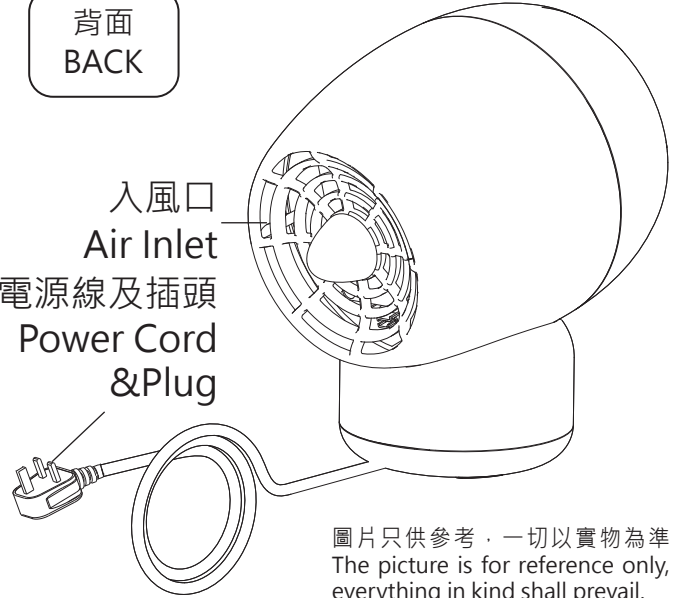

圖片只供參考，一切以實物為準
The picture is for reference only,
everything in kind shall prevail.

功能設定 Function Setting

注意：第一次使用暖風機，可能會出現少量氣味約數分鐘，因本產品在生產時發熱元件帶有一層保護油，此乃正常現象。

NOTE: For first time operation, there will have some smell for about few minutes. Because this Heater have some protective oil on the surface of the heating element.

暖風機可使用開關/功率旋鈕操控。

The Heater may be operated by the on/off & power knob located on the Heater.

1. 將暖風機擺放於穩固的平面上。

Place the Heater on a stable flat surface.



2. 旋轉按開關/功率旋鈕至關機狀態 ●，將插頭插入電壓220-240V的獨立插座。旋轉開關/功率旋鈕，選擇不同模式運作：風扇、暖風(800W)及暖風加左右搖擺。

Turn the on/off & power knob to ● position. Plug the Power Cord into a a.c. 220-240V electrical outlet. Turn the on/off & power knob to set the Heater into different MODE: FAN, HEATER(800W) or Heater and Oscillation.

3. 關機: 如需關掉暖風機，旋轉按開關/功率旋鈕至關機狀態 ●。

OFF: Turn the on/off & power knob to ● position to shut down the Heater.

1. 暖風機內置恆溫保護裝置，防止機身過熱。

A thermal overload protector is built-in to prevent overheating.

2. 當機內溫度超出限定溫度，暖風機將自動停止操作。需要重新設置才可恢復正常：
When the Heater is overheat, it will be shut off automatically. To RESET the Heater:

2.1. 拔除插頭，等待30分鐘，讓機內溫度降低。

Unplug the Heater and wait for 30 minutes to cool down.

2.2. 重新插上插頭，讓暖風機正常繼續操作。

Turn ON the Heater again to resume operation.

***注意: 當暖風機發生傾倒時，暖風機會自動切斷電源，扶正機身後即可恢復運作。

***Note: If the Heater topples, the Heater will cut the power automatically, and then get back to work after it restores the upright state.

清理及維護 Maintenance

警告：不使用本機時，經常保持拔除電源。清理時切勿將此機浸於水或其他液體中。清潔前應確保暖風機處於冷卻狀態。

清理：使用吸塵機毛刷將入風口的塵埃及雜物吸走。機身使用濕潤軟布抹擦清潔。

注意：切勿使用含有腐蝕性的清潔劑或溶液清理此機。

儲存：連同使用說明書，把暖風機存放於清涼及乾爽的地方。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE HEATER IN WATER! MAKE SURE THE HEATER IS COMPLETELY COOL DOWN BEFORE CLEANING.


CLEANING: Clean the Air Inlet with the vacuum brush attachment on your vacuum cleaner. Clean the body of the Heater with a soft cloth.

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc, as they will damage the Heater. NEVER use ALCOHOL or any other SOLVENTS.

STORAGE: Store the Heater with these instructions in the original box in a cool and dry place.

型號 Model Number	FH9200W
電源 Power Supply	220-240V~ 50/60Hz
額定功率 Rated Power	800瓦特/Watts
淨重 Net Weight	760克(gram) (約/Approx.)
產品尺寸 Product Dimension	140(W) x 195(H) x 175(D) mm (約/Approx.)

 源澤地圖 Origin Map

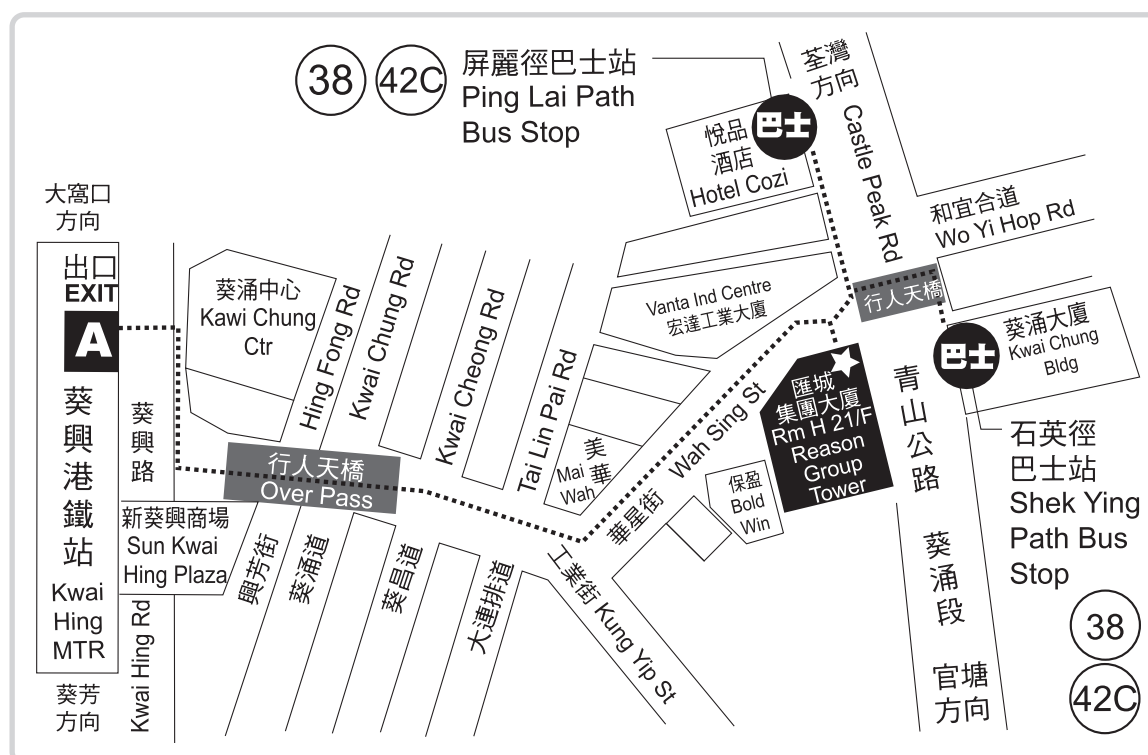

辦公時間

10:30am - 12:30pm (星期一至五)
02:30pm - 05:30pm (星期一至五)
10:30am - 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)
02:30pm - 05:30pm (Mon to Fri)
10:30am - 12:30pm (Saturday)
(Closed on Sunday and Holiday)

保用

陶瓷暖風機
Ceramic Fan Heater

origo

產品： 陶瓷暖風機

型號： FH9200W

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月):

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、開關/功率旋鈕、電源線及插頭，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

升級保用：(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用：於本公司網站完成登記，可享有共15個月免費保用；或

B. 額外6個月保用：到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk

電話: 2156 8238

www.origin.hk



Find us on f



Instragarm



Warranty

Item : Ceramic Fan Heater

Model : FH9200W

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, on/off & power knob, power cord & plug or accessories.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase.

Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),

403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

www.origin.hk



Find us on f



Instragarm

