




陶 瓷 暖 風 機
Ceramic Heater

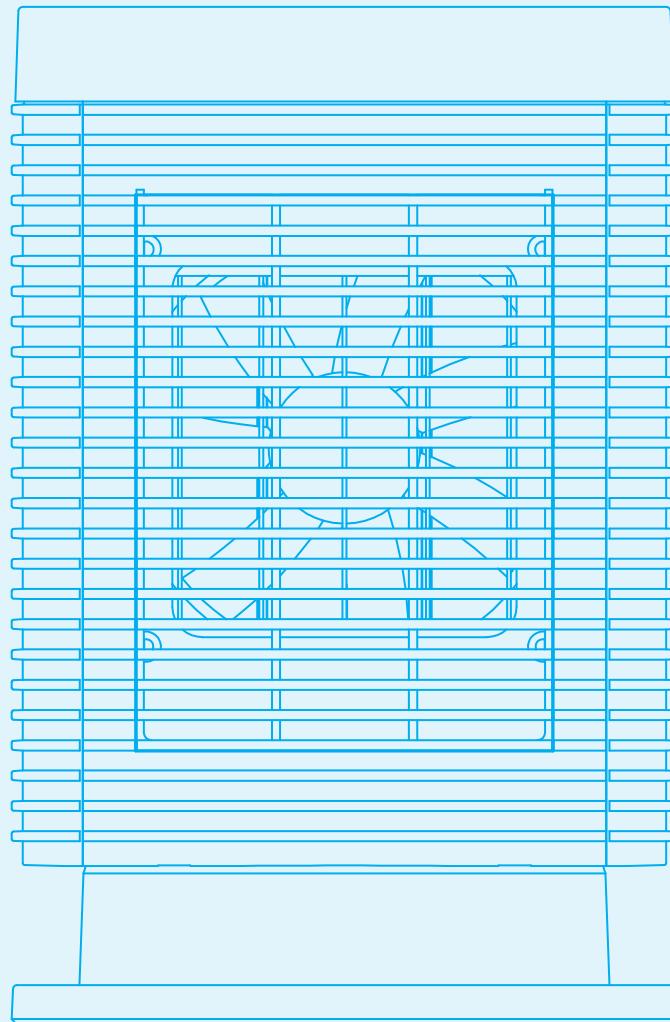

FH9518K 使用說明書 Instruction Manual

- 使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。
- 本說明書及其修正版本（如有）可於本公司網站www.origin.hk下載。
- 本說明書所載的功能、外觀、圖片及數據皆以實物為準。
- Read all instructions before using the product. Keep this manual for future reference.
- This instruction manual is also available at www.origin.hk.
- In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.

- 本機不是為8歲以下小孩，體質、感覺或智力有障礙人士或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- 未滿3歲的小孩除非受到持續監護，否則應該遠離本產品。

Children of less than 3 years should be kept away unless continuously supervised.

- 年齡在3至8歲的小孩只有在產品已經被放置或安裝在其預期的正常操作位置，並已經接受了使用本產品的安全指導或監督並理解可能存在的危險時，才能開關產品。其不得插拔電源、調節和清潔產品，也不得進行用戶維護。

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- 使用時確保暖風機放置於安全、平穩的表面上。

Use this Heater on a horizontal and stable surface.

- 如本產品的電源線有損壞痕跡，為保障安全，請立即停止使用並聯絡供應商更換。

If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- 如暖風機有明顯的損壞跡象，請勿使用。

Do not use if there are visible signs of damage to the Heater.

- 警告: 除非提供持續監督，否則當無法自行離開房間的人佔用時，請勿在細小房間內使用此暖風機。

WARNING: Do not use this Heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- 請不要使用曾經掉落的暖風機。

Do not use this Heater if it has been dropped.

- 切勿把暖風機擺放於電源插座之下。

The Heater must not be located immediately below a socket outlet.

-  警告: 為防暖風機過熱，切勿覆蓋暖風機的出、入風口。使用中的暖風機出口會發出高熱，切勿觸碰。

 WARNING: In order to avoid overheating, do not cover the Heater. The Heater is hot when in use. To avoid burns, do not let bare skin touch hot surface.

- 警告: 暖風機的出、入風口應與易燃物品(如傢俱、枕頭、床舖、毛巾或窗簾等)保持安全距離不少於1米。

WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet and inlet of the Heater.

- 切勿使用可使暖風機自動開機的外加管理程式、時間制、遙控系統或任何其他裝置，以免因暖風機被覆蓋或擺放位置不當而發生火警。

The Heater is not intended to be operated by means of an external programmer, timer, separate remote-control system or any other device that switches the Heater on automatically, since a fire risk exists if Heater is covered or positioned incorrectly.

- 暖風機不可擺放於有潛在危險的地方使用(例如: 非常潮濕環境、易燃物品或化學品倉庫)。

The Heater must NOT be used in potentially dangerous location such as flammable explosive, chemical laden or wet atmospheres.

- 暖風機不適用於室外及作工業用途。 Heater is intended for household use ONLY, not for industrial or outdoor use.

- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。 Remove the package and ensure that the Heater is undamaged. In case of doubt do not use the Heater and contact your supplier.

- 包裝物料並非玩具，不可讓小孩玩耍。 Do not let children play parts of package.

- 切勿將物品放置在暖風機上。 Please do not put any object on the Heater.

- 請使用獨立插座。使用萬能插頭或拖板，容易發生危險。

Avoid using extension cord as the extension cord may overheat and cause fire.

- 使用暖風機前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。

Before using the Heater, check if the voltage marked on the rating label corresponds to the mains in your home.



- 拔除插頭時不可拉扯電源線，必須緊握插頭，把插頭拔出。

Do not pull the power cord to disconnect with power source. Always grasp the plug to pull out.

- 警告: ⏹ 鍵不應作為切斷電源用途。 WARNING: The ⏹ key should not be used as the sole means of disconnecting power.

- 警告: 清理前必須先拔除電源插頭。 WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning.

- 暖風機不可擺近水盆、浴缸、花灑、泳池、潮濕或有積水的周邊環境使用。

The Heater is not intended for use in the immediate surroundings of a basin, a bath, a shower, a swimming pool, a wet or damp locations.

- 切勿將任何異物放入機內；或阻擋機身出風口及入風口；或將暖風機放置在柔軟或不穩固的表面上(例如床舖)，皆因以上一切行為均會導致機身過熱，引發短路或火警。

Do not insert any objects into the Heater as it may cause an electric shock or fire or damage to the Heater. Do not block or tamper with the Heater in any manner while it is in operation. To prevent a possible fire, do not block air inlet or outlet in any manner. Do not place on soft surfaces, like a bed, where opening may become blocked.

- 每次使用此產品前，必須確保電源線是完全鬆開的。避免使用延長電源線，因為延長電源線可能會過熱而導致火災風險。另外，切勿在同一插座上使用多於一個暖風機或其他裝置，因為插座可能會負荷過重。

Fully unwind the lead each time before use. Where possible, avoid using of extension cords because the extension cord may overheat and cause a risk of fire. Never use a single extension cord to operate more than one Heater. And make sure no other appliances are plugged into the same socket with this Heater. Otherwise, a socket overload could occur.

- 切勿讓手指或導電物體插入機體任何通氣口，以免導致觸電、身體損傷、火災或損壞機體。

Do not insert fingers or conductive object into the front air outlet and back air inlet of the Heater to avoid the risk of human injury, electric shock, fire and product damage.

- 暖風機設有發聲警報裝置，當機身溫度過熱，警報器自動發聲提示，應立即關機檢查並立即停止使用此機。

The Heater includes an audible alarm to warn when the Heater are overheat. If the alarm sounds, immediately turn the Heater off and inspect the Heater. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING!

- 切勿將水倒入機身或將濕衣服掛在機身上，避免發生漏電及觸電危險。嚴禁將易燃物及濕的衣物覆蓋在機身出風口上，避免發生火災或觸電危險。

Please do not pour water into the Heater or hang wet clothes over the Heater so as to avoid current leakage and electric shock; Please do not put flammable materials and wet clothes covered on the air outlet so as to avoid risk of fire or electric shock.


- 注意：本產品的某些部位使用時會變得非常熱，並可能導致燙傷，兒童及易受傷害人士應特別注意。

CAUTION : After use, some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.


-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。

 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

正面
FRONT

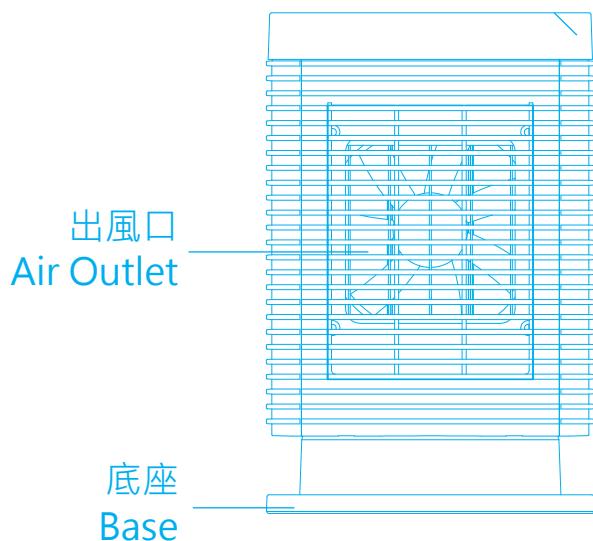


背面
BACK

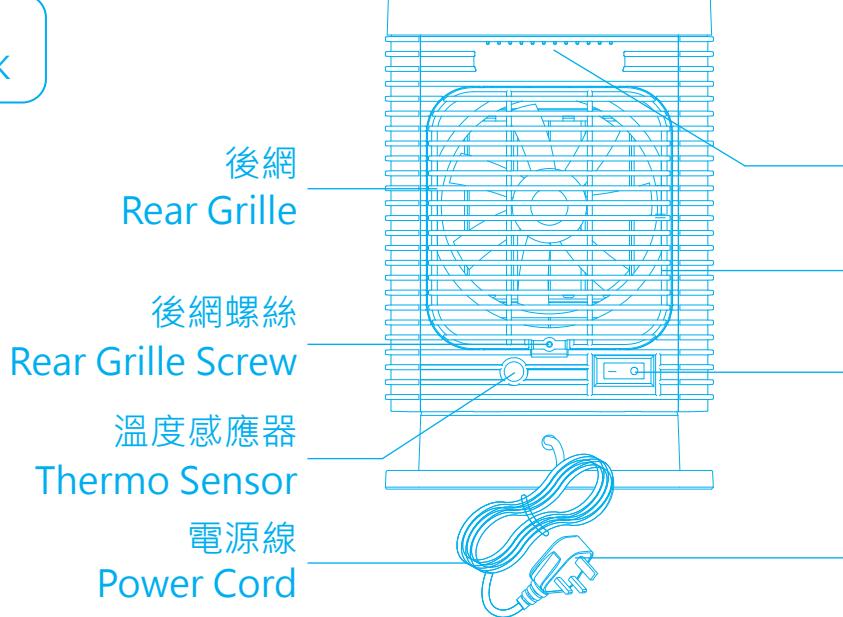

LED顯示屏

LED
Display

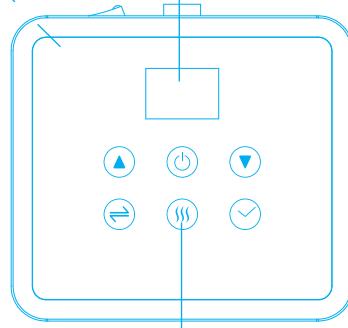

控制面板
Control
Panel

把手
Handle

入風口
Air Inlet

總電源開/關鍵
Main Power
Switch

插頭
Plug

圖片只供參考，一切以
實物為準
The picture is for
reference only,
everything in kind
shall prevail.

浴室使用 Bathroom Use

本暖風機已通過IP21防滴要求，可放置於任何室內位置(包括浴室)使用。如在浴室中使用本暖風機，則必須擺放於與水源(洗手盤/浴缸)及使用者(伸手不能達到)的0.6米以外位置。

This is a "IP21" Heater which is constructed for protection against splashing and allowed to be in all rooms, including bathroom. The appliance must be placed 0.6 meter away from water sources, such as washbasin and bathtub, and out of reach of hands.

注意：第一次使用暖風機，可能會出現少量氣味約數分鐘，因本產品在生產時發熱元件帶有一層保護油，此乃正常現象。

NOTE: For first time operation, there will have some smell for about few minutes. Because this Heater have some protective oil on the surface of the heating element.

暖風機可使用機身頂部控制面板操控。

The Heater may be operated by the control panel on the top of the Heater.

1. 將暖風機擺放於穩固的平面上。

Place the Heater on a stable flat surface.

2. 按總電源開/關鍵至關機狀態，將插頭插入電壓220-240V的獨立插座。按總電源開/關鍵至開機狀態，暖風機會嗶嗶聲響起，LED顯示屏會顯示當時室內溫度，暖風機進入準備狀態。

Set the main power switch to OFF position. Plug the power cord onto an a.c. 220-240V electrical outlet. Turn the Main Power Switch to ON position. The Heater will have a beep beep sound, and the LED display will show the current room temperature, then the Heater is ready to use.

3. 開/關：按  鍵，暖風機將以高熱運作，高熱指示燈同時亮起，按  鍵可轉換至風扇或低熱運作。

ON/OFF : Press the  key, the Heater will start operation at High Heat , High Heat indicator will light on. Press the  key to set the Heater into Fan or Low Heat .

4. 定時設定：使用  鍵連續按下選定8個不同的自動關機時間，分別由1至8小時，LED顯示屏顯示已選擇的時間。

TIMER : Press  key continually to set desired auto power off time. There are 8 time intervals, from 1-hour to 8-hour, for auto power off. The LED display indicates the time selected.

5. 左右送風：按  鍵，暖風機以自動左右搖擺模式送風。如欲停止自動左右搖擺送風，再按此鍵一次。

OSC : Pressing the  key will allow the Heater to oscillate the wind direction. To stop the oscillation, press this key again.

6. 溫控調節：暖風機在開機狀態下：

- 8.1. 按 **▲** 鍵或 **▼** 鍵選擇需要設定的溫度，可設定溫度：18-35°C。
- 8.2. 當室內溫度達到設定溫度，暖風機會自動停止工作。
- 8.3. 當室內溫度低於設定溫度，暖風機會自動恢復工作。
- 8.4. 注意：在溫度控制的設定狀態下，暖風機將不斷循環的自動開機/關機地工作。

SET TEMP : When the Heater is on:

- 8.1. Press the **▲** key to increase the desired temperature and the **▼** key to decrease the desired temperature. Working temperature: 18-35°C.
- 8.2. When the air temperature reaches the SET TEMP, the Heater will cut off.
- 8.3. When the air temperature drops below the SET TEMP, the Heater will back on.
- 8.4. Note: It is normal for the Heater to repeat ON and OFF as it maintains the SET TEMP.

7. 關機：如需關機，按 **◎** 鍵。為使機內溫度下降，關機後的暖風機，風扇將繼續送風30秒，才完全停止運作，之後再按總電源開/關鍵至關機狀態。

OFF : To turn the Heater off, press the **◎** key. The FAN will work for 30 seconds to cool down the Heater and then turn OFF, then set the Main Power Switch to OFF position.

注意：為加強使用安全，本暖風機預設10小時強制關機功能。

Note: In order to enhance the safety, this Heater is preset with a 10-hour forced shutdown function.

***注意：當暖風機發生傾倒時，暖風機會自動停止運作，LED顯示屏會顯示E3，扶正機身後即可恢復運作。

***Note : If the Heater topples, The Heater will automatically stop and the LED display will show E3, and then get back to work after it restores the upright state.

1. 暖風機內置恆溫保護裝置，防止機身過熱。

A thermal overload protector is built-in to prevent overheating.

2. 當機內溫度超出限定溫度，暖風機將自動停止操作。需要重新設置才可恢復正常：
When the Heater is overheated, it will be shut off automatically. To RESET the Heater:

2.1. 拔除插頭，等待30分鐘，讓機內溫度降低。

Unplug the Heater and wait for 30 minutes to cool down.

2.2. 重新插上插頭，讓暖風機正常繼續操作。

Turn ON the Heater again to resume operation.

清理及維護 Maintenance

警告：不使用本機時，經常保持拔除電源。清理時切勿將此機浸於水或其他液體中。清潔前應確保暖風機處於冷卻狀態。

清理：使用吸塵機毛刷將入風口的塵埃及雜物吸走。機身使用濕潤軟布抹擦清潔。

注意：切勿使用含有腐蝕性的清潔劑或溶液清理此機。

儲存：連同使用說明書，把暖風機存放於清涼及乾爽的地方。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE HEATER IN WATER! MAKE SURE THE HEATER IS COMPLETELY COOL DOWN BEFORE CLEANING.


CLEANING: Clean the Air Inlet with the vacuum brush attachment on your vacuum cleaner. Clean the body of the Heater with a soft cloth.

CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc, as they will damage the Heater. NEVER use ALCOHOL or any other SOLVENTS.

STORAGE: Store the Heater with these instructions in the original box in a cool and dry place.

型號 Model Number	FH9518K
電源 Power Supply	220-240V~ 50-60Hz
額定功率 Rated Power	1800瓦特/Watts
淨重 Net Weight	2000克(gram) (約/Approx.)
產品尺寸 Product Dimension	176(W) x 162(D) x 270(H) mm (約/Approx.)

源澤地圖 Origin Map

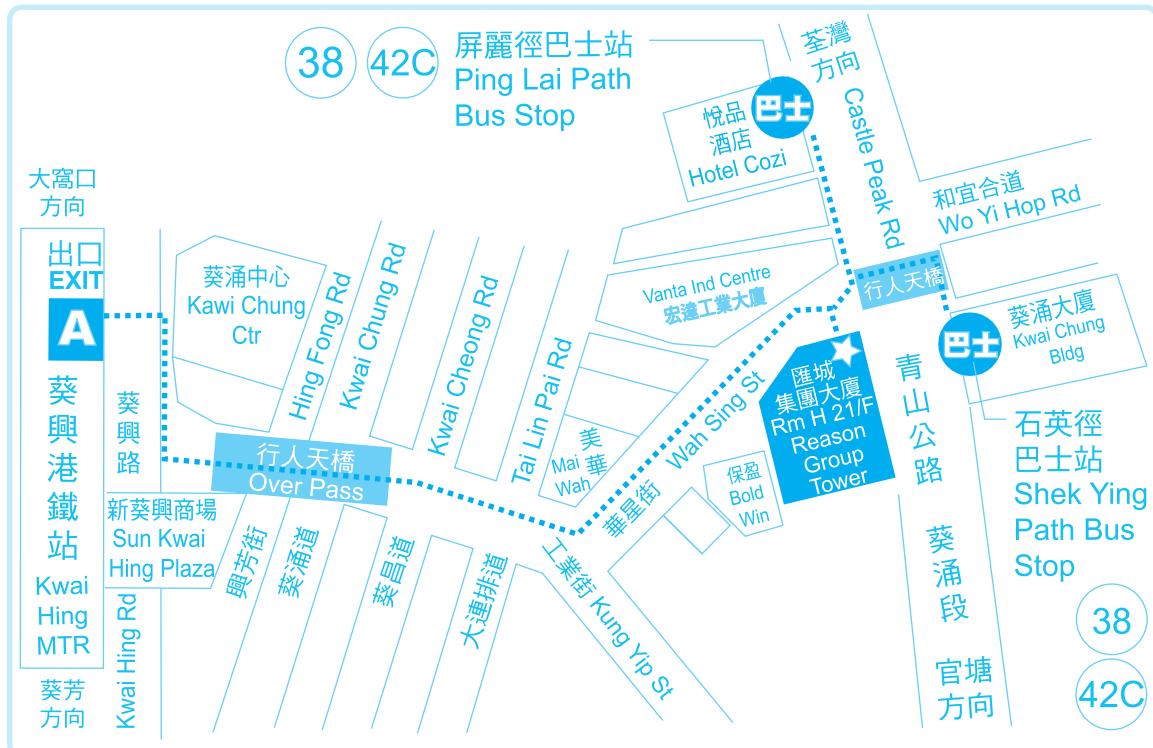

辦公時間

10:30am - 12:30pm (星期一至五)

02:30pm - 05:30pm (星期一至五)

10:30am - 12:30pm (星期六)

(星期日及公眾假期休息)

OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)

02:30pm - 05:30pm (Mon to Fri)

10:30am - 12:30pm (Saturday)

(Closed on Sunday and Holiday)

產品: 陶瓷暖風機

型號: FH9518K

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月)：

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、把手、後網、後網螺絲、電源線及插頭，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

升級保用：(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用：於本公司網站完成登記，可享有共15個月免費保用；或

B. 額外6個月保用：到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk

電話: 2156 8238

www.origin.hk



Find us on



Instragarm



Warranty

Item : Ceramic Heater

Model : FH9518K

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, handle, rear grille, rear grille screw, power cord & plug or accessories.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase.)

Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

www.origin.hk



Find us on



Instragarm

