


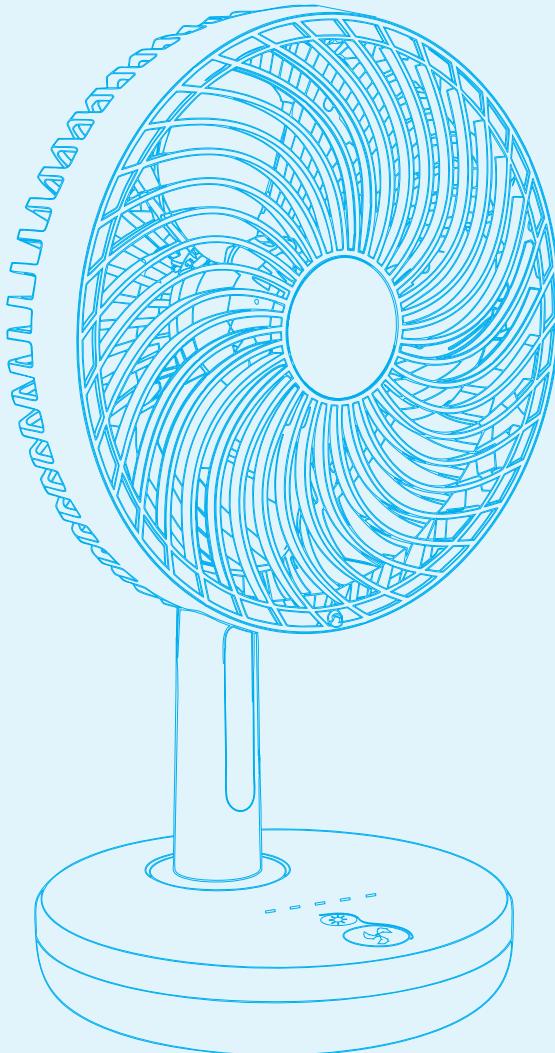

迷你充電式對流風扇

Rechargeable Convection Fan



CF-M88

使用說明書

Instruction Manual

- 使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。
- 本說明書及其修正版本（如有）可於本公司網站www.origin.hk下載。
- 本說明書所載的功能、外觀、圖片及數據皆以實物為準。
- Read all instructions before using the product. Keep this manual for future reference.
- This instruction manual is also available at www.origin.hk.
- In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.

- 必須按照使用說明書指示操作本產品，否則可能引致產品損壞、短路、火警或人命損傷。
- Use this product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons.
- 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。
- Open the package and ensure that the product is undamaged. In case of doubt, do not use the product and contact your supplier.
- 包裝物料並非玩具，不可讓小孩玩耍。Do not let children play parts of package.
- 為防止損害充電線，請勿把充電線掛放在檯邊上或接觸發熱的物體。
- Do not hang the charging cable on the edge of table or touch the surface with high temperature in order to avoid damage to the charging cable.
- 使用時，切勿把本產品放置於火爐或發熱的物體附近。
- This product cannot be used beside the stove and other high temperature objects.
- 本產品內置充電池，請使用本產品提供的USB充電線替產品進行完全充電。
- This product is driven by batteries. Please use the USB charging cable provided to fully charge the product before use.
- 本機不是為體質、感覺或智力有障礙人士(包括小孩)或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示，大人應指導小孩不可把玩電器。
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 本產品內有鋰電池，禁止拆解、撞擊、擠壓或投入火中。若出現嚴重鼓脹，請勿繼續使用。請勿置於高溫環境。
- This product contains a lithium battery, and it is for hidden to disassemble, hit, squeeze or throw it into fire. Do not use if severe swelling occurs. Do not place in a high temperature environment.
- 每存放三個月充電一次，避免電池損壞。
- Make a charging when not use the product for three months to avoid damage of battery.
- 在充電期間，切勿離開本產品。
- Do not leave the appliance unattended while it is charging.

- 切勿將任何異物放入本產品內；或阻擋產品出風口及入風口，皆因以上一切行為均可能導致產品損壞。
- Do not insert any objects into the product as it may cause an electric shock or damage. Do not block or tamper with the product in any manner while it is in operation.
- 本產品不適用於室外及作工業用途。
- This product is intended for household use ONLY and not for industrial or outdoor use.
- 切勿將本產品擺放在發熱源頭或火源附近。
- Do not place the product near a source of heat or fire.
- 不可在潮濕或有積水的環境使用，不可將本產品擺放於浴缸或大型容器上面。
- The product is not intended for use in wet or damp locations. Never locate the product where it may fall into a bathtub or other water container.
- 切勿於高溫表面上或附近使用本產品。
- DO NOT OPERATE this appliance on or near any hot surface.
- 本產品並非玩具，請把本產品放置在兒童不能觸及的地方，以免孩童拉扯充電線或推翻本產品，發生意外。
- Extreme caution is necessary when the product is used by or near children or invalids and whenever the product is left operating unattended.
- 充滿電後，必須拔除充電線。長時間充電，可能造成充電池過熱及燃燒等危險。
- Make sure to unplug the charging cable after fully charged. Charging for a long time may cause hazards such as rechargeable battery overheat and burn.
- 不可擅自拆卸、修理、改造本產品，如有任何問題請先致電客戶服務中心。
- Do not take this product apart exposing electrical parts. Call customer service for assistance and guarantee information.
- 警告：清理前必須先拔除USB線。若USB線損壞，必須交由製造商或其代理指定維修服務中心檢查及修理。
- WARNING: To avoid danger of electric shock, unplug the USB cable when not in use and before cleaning. If the USB cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- 請保持清潔以維持本產品處於良好狀態(詳細請參閱清理及維護部份)。
- Keep the product clean to maintain in good condition (refer to maintenance section).
- 本產品必須安裝電池後才可使用，切勿在沒有電池情況下直接連接USB線使用。
- This product need to install batteries before using. Do not use it directly by connecting the USB cable without batteries.

- 必須使用本產品附配的USB線為本產品充電。
- Use only the supplied USB cable to charge the product.
- 依規格表列使用相應的充電器。
- Use the corresponding charger according to the specification table.
- 為避免過熱和損壞裝置或電池，切勿在充電時使用本產品。
- Do not charge while operating the product.
- 充滿電後，必須拔除充電線。長時間充電，可能造成充電池過熱及燃燒等危險。
- To avoid overheating of rechargeable batteries, remove the USB cable after fully charged.
- 切勿在USB充電線纏結的情況下為產品充電。
- Do not charge the product when the USB cable is tangle.
- 充電前，須確保產品的電源已關閉。When charging, make sure that the power is off.
- 切勿使用有殘缺或鬆動的USB充電器。使用前確保USB充電器及充電線已充分抹乾及使用時插穩。
- Never use deficient or loosen USB adapter. Make sure the USB charger and charging cable is dry before use and inserted firmly when use.
- 切勿使用無線充電。
- Never use wireless charging.
- 充電期間，切勿離開本產品。
- Do not leave the appliance unattended while it is charging.
- 充電進行中，充電器及機身會變熱，此乃正常現象。(充電器不包括在內)
- The adaptor and main units will become hot while charging, which is normal. (Adaptor not included)
- 切勿在USB充電器、充電線及產品上放重物或讓其接觸灼熱的表面；切勿夾住、改裝、用力拉扯或扭曲USB充電器、充電線及產品。
- Do not put heavy objects on the charger cable, USB adaptor and appliance or let it touch any hot surface. Never clip, modify, stretch or twist the USB charger, USB charging cable and appliance.
- 切勿在連接產品的充電線上施加任何壓力，充電線可能因此造成磨損和斷裂。
- Do not put any stress on the charging cable where it connects to the appliance, as the cable may fray and break.
- 注意：持續使用本產品會使電池溫度升高，此乃正常現象。須待產品冷卻後再充電。
- Continuously using the appliance will raise the temperature of the battery pack, which is normal. Wait until the product cool down before recharging.
- 請勿用金屬等接觸連接器而使其短路。
- Do not short-circuit by allowing metals or other materials to come into contact with the socket terminals.

- 如本產品長期不使用時，建議每三個月充電一次，避免電池損壞導致產品不能使用。
• It is recommended to charge it every 3 months to avoid battery damage and affect product functions if the product is not working for a long time.
- 充電及使用時間視乎設定和環境因素而定；實際結果可能有所差異。
• Charging and operation time vary with settings and environmental factors; actual results will vary.
- 本產品包含只能由技術人員更換的電池。客戶不可自行更換。
• The appliance contains batteries that are only replaced by skilled persons. The battery which is not self-replaceable by the user.
- 當發現電池漏液時，應立即停止使用產品及切勿充電，並聯絡服務中心進行檢查及維修。
• When find the leaking batteries, stops use/charge the appliance immediately. Contact service centre for assistance.
- 若本產品出現嚴重膨脹，請立即停止使用，並聯絡服務中心安排檢查及維修。
• If the appliance has severe swelling, please stop using it immediately and contact service centre for checking and repairing.
- 切勿毀壞或焚燒電池組，因為它們在高溫下會爆炸。它們必須根據當地法律進行處置。
• Do not mutilate or incinerate the battery packs, as they will explode at high temperatures. They must be disposed of according to local laws.
- 為避免影響電池壽命，使用時因電量耗盡而自動停止時，請勿嘗試再次啟動，也請勿放置不管，以免電池過度放電。
• To avoid affecting the battery life, when the product stops automatically due to the exhausted battery during use, do not attempt to restart it or leave it alone to avoid over discharge.
- 切勿將產品存放在室外或任何車輛中，因過熱會導致電池爆炸。
• Do not store the appliance anywhere outdoors or in any vehicle as excessive heat can cause the batteries to explode.
- 本產品中的充電電池為消耗品。當即使正確充電後，使用時間仍明顯變短，電池壽命可能到了。
• The rechargeable battery in this product is a consumable product. When the service time is still significantly shorter even after correct charging, the battery life may reach the end of its service life.
- 本產品廢棄時請取出電池，並交給官方指定回收站，切勿與一般生活垃圾堆放一起，以免污染環境。
• Take out the battery before disposal and take it to the official designated recycle bin. Do not stack it with general domestic waste to avoid polluting the environment.
- 產品長期不使用時，請在常溫低濕度的環境下儲存，以免不良的環境導致產品功能損壞。
• When the product is not working for a long time, please make sure it can storage under low humidity or room temperature in case of environment factors to the product function damage.

- 在大約5°C至35°C的溫度下充電和儲存本產品。
- Charge and store this appliance at approximately 5°C to 35°C.
- 它被分類為第 III 類電器。III 類電器必須僅使用安全特低電壓 (SELV) 供電，除非它們是電池供電的，且電池是一次性電池或在電器外部充電的二次電池。除非它們是電池供電的，並且電池是一次性電池或在設備外部充電的二次電池。
- It is classified as a class III appliance. Class III appliances must be supplied exclusively with Safety Extra Low Voltage (SELV), unless they are battery-operated and the battery is either a primary battery or a secondary battery charged outside the appliance.
- 切勿在陽光直射、高溫(靠近火源、火爐、烈日等)和易燃氣體的地方充電或閒置產品。否則可能導致產品變形、變色、故障、爆炸或火災。
- Do not charge or leave in the places exposed to direct sunlight, places with high temperatures (near fires, stoves, under the scorching sun, etc) and flammable gas. It may cause deformation, discoloration, malfunction, explosion or fire of the product.
- 為避免充電對電視機、電話等產生干擾(如產生雜音等)，充電時請距離電視機、電話等1米以上。
- In order to avoid interference with TV sets, telephones, etc. (Such as noise), please keep more than 1 m away from these appliances when charging.

- 此產品需要一個特定的獨立電源單元將本產品連接到電源。
- A specific separated power supply unit is required to connect this appliance to power supply.
- 本產品可運行時間的長短會因電池溫度及其他使用條件而有所差異。
- The operation time can run varies depending on the temperature of the battery and other usage conditions.
- 當室溫低於 5°C 或高於 35°C 時，有可能無法充電。
- The battery may not be charged when the room temperature is below 5°C or above 35°C.
- 請勿使用本產品配置的充電線為其他產品充電。
- Do not use the USB charging cable configured with this appliance to charge other appliance.
- 注意：為了給電池充電，只能使用本產品隨附的充電線。
- WARNING: For the purpose of recharging the battery, only use the USB charging cable that provided with this appliance.
- 本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
- This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection.