 


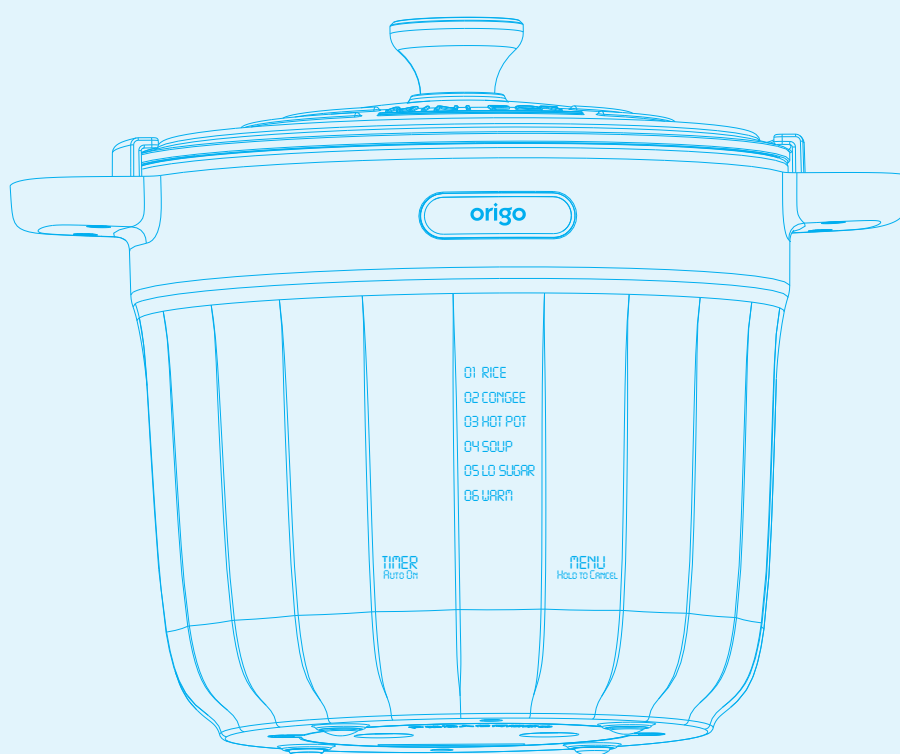

微壓多功能電熱鍋 Low Pressure Multi Cooker



MC125 使用說明書 Instruction Manual

- 使用產品前，請先細閱本使用說明書，並請妥善保存以便將來翻閱。
- 本說明書及其修正版本（如有）可於本公司網站www.origin.hk下載。
- 本說明書所載的功能、外觀、圖片及數據皆以實物為準。
- Read all instructions before using the product. Keep this manual for future reference.
- This instruction manual is also available at www.origin.hk.
- In case of any discrepancies between this manual and the actual product—such as functions, drawings, photos, or data—the actual product shall prevail.

 
- 本機不是為體質、感覺或智力有障礙人士包括小孩或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。大人應指導小孩不可把玩電器。
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - 本產品是家用或在類似環境使用，例如：商店內部、辦事處以及其他類似工作環境的廚房區域、農舍、客戶在旅館、汽車旅館和其他住宅類型的環境。
This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, office and other working environments; farmhouses; by clients in hotels; motels and other residential type environments; bed and breakfast type environments.
 - 本機不能用於附加外置的時計或控制器。
Appliances are not intended to be operated by means of an external timer or separate remote-control system.
 - 使用時確保本品放置於安全、平穩的表面上。
Ensure the appliance is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any
 - 使用本產品前，請確定規格標貼上所示的額定電壓與當地供電電壓相同。如有疑問可向供應商查詢。
Before using the appliance, check if the voltage marked on the rating label corresponds to the mains at your home.
- 
- 電源線或保險線損壞時，不應自行更換。應到指定維修中心更換相同或更高規格的電源線或更換保險線。
To prevent the risk of electric shock, DO NOT USE the set with broken power supply wires, broken fuse or broken plug. All repair works must be made by a professional (authorized distributor). NEVER TRY TO REPAIR the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center.
 - 本產品不應使用延長線與標稱小於13A的插座，必須使用與原裝同規格之電線。
Use of an extension cord is not recommended as it may overheat and cause risk of fire. Must use the same specification power cord with the original power cord.
 - 打開包裝，檢查產品。如發現產品有損壞，請勿使用及即時聯絡供應商。
Open the package and ensure that the appliance is undamaged. In case of doubt do not use the appliance and

- 防止電插座負荷過重或損害保險線，高耗電量之電器不能同時接駁到同一電插座或同一線路。
To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
- 切勿於水源或易燃物品附近使用。
DO NOT OPERATE this appliance near water sources or flammable liquids.
- 使用時，切勿把本產品放置於火爐或發熱的物體附近。
Do not use this appliance near a stove or heat source.
- 電源線切勿靠近火源、高溫或隱藏在地毯之下，亦不可靠近水源。
DO NOT PUT the cord under the carpet, blankets. Keep the power cord away from walkways.
- 不可在潮濕或有積水的環境使用，不可將本機放於浴缸或大型容器上面。
The appliance is not intended for use in wet or damp locations. Do not place the appliance where it could fall into water or other water container.
- 切勿於高溫表面上或附近使用本產品。
DO NOT OPERATE this appliance on or near any hot surface.
- 為防止損害電源線，請勿把電源線掛放在檯邊上或接觸發熱的物體。
Do not hang the power cord on the edge of table or touch the surface with high temperature in order to avoid damage to
- 使用本產品時，本產品必須放上食物，不可進行乾燒。此舉將嚴重縮短產品使用壽命。
Do not operate the appliance without food inside.
- 所有未開封的密封包裝食品(例如:罐頭)，不可使用本產品直接進行加熱，避免發生危險。
To avoid any danger of explosion, please do not heat the canned goods before remove their cover.
- 請勿將產品放在桌布或窗簾等可燃物料上或附近上使用。使用時不應靠近牆角，其周圍20厘米內不應放置其他易燃物品，免溫度過高引起爆裂、變形、變色等。
In order to prevent any accident, do not place the appliance on or near combustible materials such as a tablecloth or curtains. Do not operate this appliance near water sources or flammable liquids within 20 cm.
- 首次使用時，會有短暫時間的煙霧冒出，並有輕微異味。此種現象屬正常，請不用擔心。
For first time operation, there will have some smoke or smell. This is normal. Do not worry.
- 在本產品冷卻前，切勿接觸其發熱表面。
Do not touch hot surfaces until the appliance has cooled down.
- 本產品使用時間較長後，表面顏色有所變化，這是正常現象。
After prolonged use, the surface of appliance will become fade, this is normal.

- 本產品必須與原裝電源線配合使用。運作前，確保電源線與主體已徹底連接，否則會因接觸不良導致電源線過熱或損壞。
Use the appliance with the original power cord only. Make sure the power cord and main body are well connected before use; otherwise, it may cause power cord overheat or damage due to contact failure.
- 切勿將金屬物件(如針或金屬線等)插入產品的機殼的縫隙，以防觸電及其他危險。
Do not insert metallic objects (such as pins or wire) into the enclosure, gaps of the housing to avoid electric shock or other dangers.
- 切勿讓本產品在無人看管的情況下運作。
Never leave the appliance unattended when using.
- 切勿將本產品用於室外及建議烹飪以外的其他用途。(否則，有可能發生故障或產生危險。)
Do not use the appliance outdoors or any purposes other than cooking. (Misuse can cause potential injury and product damage.)
- 檢查食物時，建議使用長把手的用具。
Use long-handled utensils when checking food inside.
- 烹調過程中或烹調結束後，請勿移動本產品或將其放置在不穩定的地方。
Do not move the product or place it in an unstable place during or after cooking.
- 警告: 在使用過程中或剛沸騰後，大量水蒸氣會從蒸氣孔噴出。切勿靠近鍋蓋或觸摸主體表面，以免造成燙傷。使用後，發熱線仍有餘熱，切勿觸摸。如需立即打開鍋蓋，請小心灼熱，因蒸氣孔及鍋蓋有熱水滴落。
WARNING! Do not get close to the lid or touch the enclosure during operation or right after use as a large amount of steam will be released. Do not touch the heating element to avoid burning by residue heat, and be careful of the hot steam and hot water droplets dripping from the lid.
- 完成烹調後，機內仍有大量水氣，鍋蓋或會有水珠(倒汗水)凝聚，此乃正常現象。為避免被餘熱灼傷，切勿接觸產品或其發熱線。關閉產品電源及拔掉電源線，靜候數分鐘後再打開鍋蓋，以免被餘熱灼傷。
After cooking, lots of vapor and water droplets will remain inside the body and the lid, which is a normal phenomenon. To avoid burns, do not touch the appliance or the heating element. Switch off the appliance and unplug the power plug, wait for a few minutes before opening the
-  本產品含有可回收材料，不可把本產品作為未分類廢物。請聯繫當地就近指定回收點。
 This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

各部名稱 Main Parts



微壓多功能電熱鍋 Low Pressure Multi Cooker

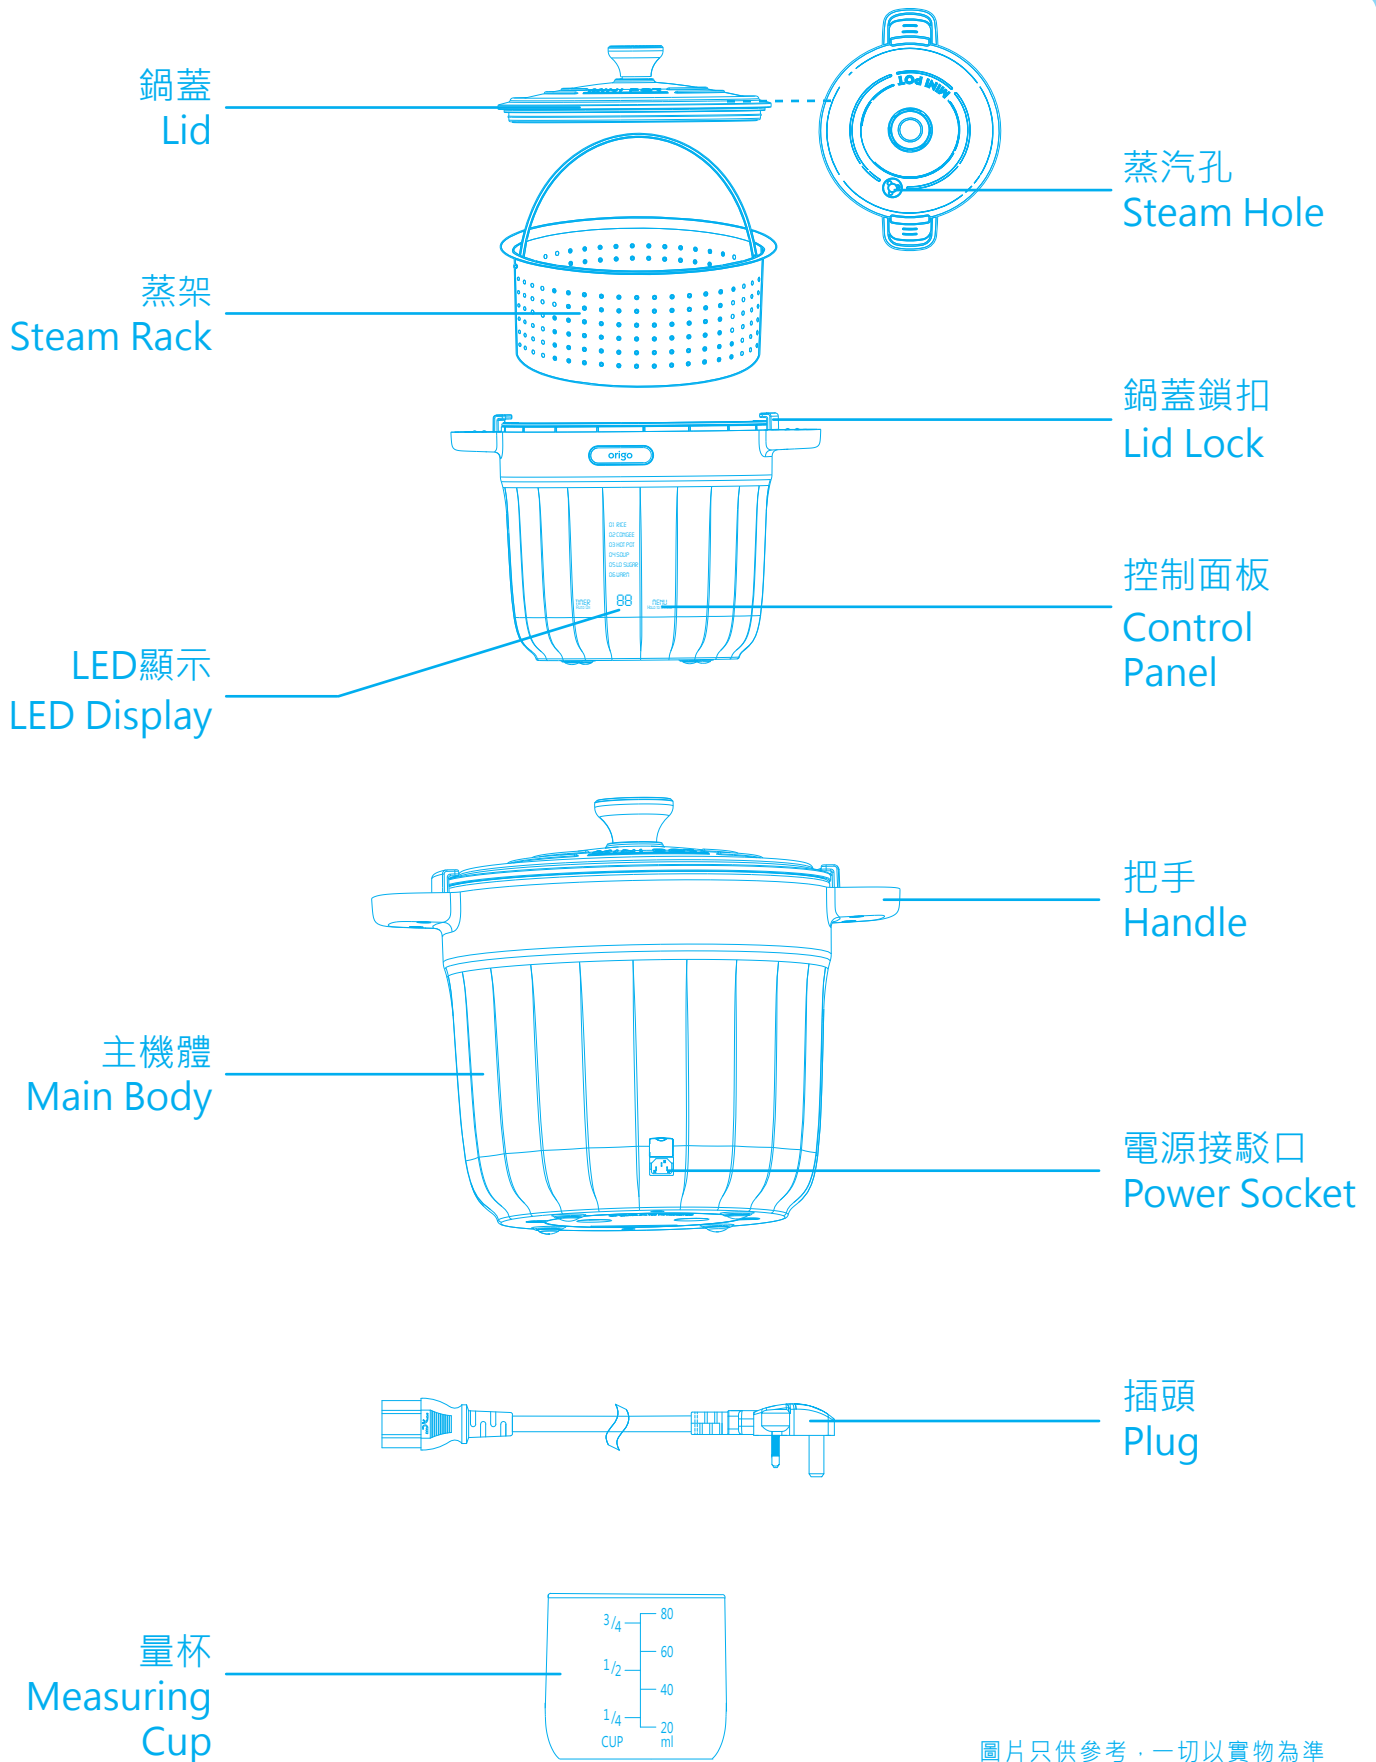

圖片只供參考·一切以實物為準
The picture is for reference only,
the actual product shall prevail.

使用前的準備 Preparation Before Use:

  1. 先拿出所有配件，以濕潤毛巾清潔，放置於平坦位置上。
Take apart all accessories, clean with a soft damp cloth. Place your appliance on the level and stable surface.
2. 使用前請確保已拆除所有包裝物料。
Make sure that all package materials are removed before use.
3. 將電熱鍋放在平坦的水平表面上。
Place the Cooker on a flat, level surface.
4. 選擇靠近電源插座的位置，不要放在有水的地方使用。
Place the appliance near a power outlet. Do not use it near any sources with water.
5. 將插頭接駁到電源接駁口。
Connect the plug to the power socket.
6. 將插頭插入赫茲的獨立插座，LED顯示屏顯示--，電熱鍋已可使用。
Plug the power plug into an electrical outlet, LED screen display --. The cooker is now ready for use.

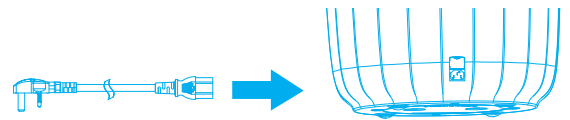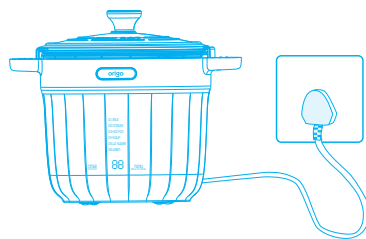

圖片只供參考，一切以實物為準
The picture is for reference only,
the actual product shall prevail.

7. 第一次使用電熱鍋，電熱鍋可能會出現少量冒煙及氣味約5分鐘，因為本產品在生產時發熱線帶有一層保護油，此乃正常現象。

Before using for the first time, there may be some smoke or odor about 5 minutes. This is because the cooker has a protective oil coating on the surface of the heating element during production.

注意: 當使用蒸架時，電熱鍋必須注水後才可使用，否則會損壞本機。

Caution: When using a steam rack, the Cooker must be filled with water before use, otherwise the Cooker will be damaged.

注意: 本產品不帶油溫控制系統，不可用作煎、炒及油炸用途。否則過高的油溫可能會導致火災或損壞內部電子組件。

Caution: The appliance does not equip with oil temperature control system, stir-fry, fry and deep dry are prohibited. Otherwise, overheated oil may catch fire or damage internal electric components.

警告: 防乾燒功能屬安全保護功能，切勿依賴此功能關機。

Warning: Boil-dry protection is the function for protection. Do not rely on this function as a normal shut-off method.

注意: 當沸騰時，請勿靠近蒸汽孔，以免燙傷。

Caution: When boiling, do not get close to the steam hole to avoid burns.

控制面板/Control Panel



圖片只供參考，一切以實物為準
The picture is for reference only, the actual product shall prevail.

電熱鍋可使用控制面板按鍵操控。

The Cooker may be operated by the control panel.

 
1. 將所需的水或食材加入電熱鍋中，所加水量不能超過鍋內最高注水線。
Add the required water or ingredients to the Cooker, and the amount of water should not exceed the maximum water level in the Cooker.
2. 按菜單鍵可以選擇不同功能，LED顯示屏顯示所選功能，再按此鍵則取消返回待機模式。LED顯示屏閃爍5秒後，電熱鍋開始工作。滑動並鎖緊兩邊鍋蓋，可作低壓烹調。
Press the **MENU** key to select different functions; the selected function will be displayed on the LED display. Press this key again to cancel and return to standby mode. The Cooker will start working after the LED display flashes for 5 seconds. The sliding and locking lid allows for low-pressure cooking.
3. 電熱鍋適用於煮飯、煲粥、火鍋、煲湯、低糖飯或保溫等。使用火鍋功能時必須打開鍋蓋。
The Cooker is suitable for cooking rice, porridge, hot pot, soup, low sugar and keeping warm, etc. The lid must be opened to use the hot pot function.
4. 工作過程中，長按菜單鍵返回待機模式。
During operation, press and hold the menu key to return to standby mode.
5. 在預約狀態下，先按預約鍵選擇預約時間，再按菜單鍵可以選擇功能01-05，LED顯示屏閃爍5秒後，預約功能啟動，LED顯示屏將交替顯示所選功能及預約時間。
In reservation mode, first press the **TIMER** key to select the reservation time, then press the **MENU** key to select function 01-05. After the LED display flashes for 5 seconds, the reservation function is activated, and the LED display will alternately display the selected function and reservation time.
6. 使用完畢後，請切斷電源。
When finished using the Cooker, unplug the power.
7. 待電熱鍋完全冷卻後方可清潔或移動機身。

Wait until the Cooker has completely cooled down before moving or cleaning.
注意: 本產品備有防乾燒功能，如鍋內水份已燒乾或達到指定的保護溫度，產品會自動停止加熱以作保護。但產品溫度下降後，產品會回復加熱。若產品曾觸發乾燒保護裝置，應立即關掉電源待其冷卻15分鐘後才可再次使用。注意: 切勿在無人看管的情況下使用本產品!

Caution: The appliance equipped with boil-dry protection system. If water inside the main body completely evaporated or temperature exceeds the protection level, the appliance will automatically stop heating for protection. □ The appliance may resume heating once the temperature drops. If the appliance was boiled dry once, switch off and cool down 15 minutes before reuse. Never leave the appliance unattended during operation!

低糖飯 Low Sugar Mode :

1

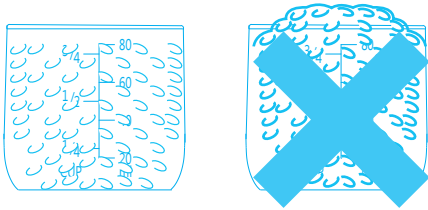

1. 量米時使用附帶的量杯(約80毫升) , 不搖晃量杯裝至與量杯口相平。不可超過3杯。

When measuring rice, use the provided measuring cup (approximately 80 ml). Do not shake or tap the cup. Fill the cup level with the rim. Do not exceed 3 cups.

 
2



2. 洗米後將米放入蒸架並將蒸架放入到電熱鍋內。

Wash the rice, then place it in the steaming rack and insert the rack into the Cooker.


3

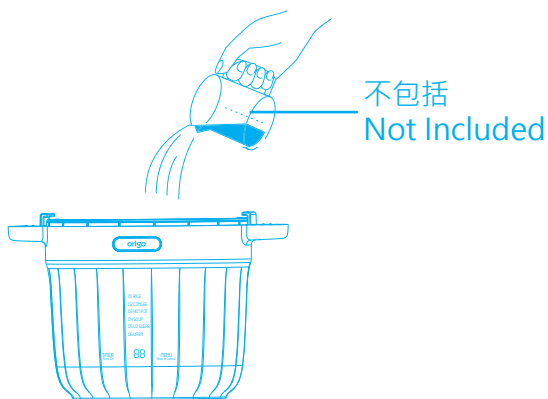


3. 再將適量的水加入到電熱鍋內，剛好泡過米，然後蓋上鍋蓋。滑動鎖扣並鎖緊兩邊鍋蓋。

Add enough water to just cover the rice. Then close the lid and secure the lid lock.

 4

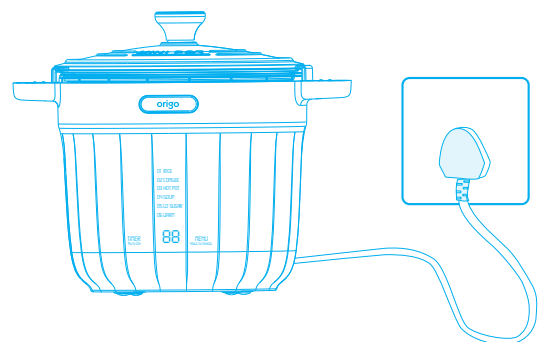

4. 接通電源後，按菜單鍵選擇LO SUGAR，電熱鍋開始工作。

Plug in the power and press the  key to select LO SUGAR, the Cooker will start.

圖片只供參考，一切以實物為準
The picture is for reference only,
the actual product shall prevail.

注意/CAUTION:

警告: 不使用電熱鍋時，經常保持拔除電源，及切勿將插頭、主機體浸於水或其他液體中。在清潔本電熱鍋前，先將電熱鍋關掉及把電源線從插座拔出，然後讓電熱鍋完全冷卻。

*注意：打開鍋蓋及取出蒸架，使電熱鍋冷卻更快。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE PLUG AND MAIN BODY IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET AND LET THE COOKER COOL DOWN COMPLETELY.

* Note: Open the lid and take out the steamer to let the Cooker cool down more quickly.

外殼: 清理時切勿將電熱鍋主機體浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

Housing: Clean the outside and grille of the main body of Cooker with a soft cloth. To remove persistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

 
- 每次使用後都要清潔電熱鍋。
- Clean the cooker after each use.
- 切勿使用研磨性、腐蝕性或易燃性清潔劑(例如漂白劑或酒精)清潔電熱鍋的任何部位。
- Do NOT use abrasive, corrosive or flammable cleansers (such as bleach or alcohol) to clean any part of the Cooker.
- 請勿使用金屬廚房用具或研磨性清潔材料來清潔鍋蓋、蒸架及主機體。
- Do not use metal kitchen utensils or abrasive cleaning materials to clean the lid, steam rack and main body.
- 用濕布擦拭電熱鍋的外部。
- Wipe the outside of the Cooker with a moist cloth.
- 用熱水，一些洗滌液和非研磨性海綿清潔所有配件。
- Clean all accessories with hot water, mild cleaner and a non-abrasive sponge.
- 請不要將插頭、主機體浸入到液體中進行清潔。鍋蓋及蒸架可以直接進行清洗，方便衛生。
- Do not immerse the plug and main body in water to clean.
- 使用後，電熱鍋內可能會出現小斑點(如啡色、乳白色、黑色等情況)或變色。這是由於水中所含的雜質引起變化或因水垢積聚太久所致，此屬正常現象。
- After use, some color spots (e.g. brown, milky, black, etc) and discolor may appear in the Cooker. This is because of the impurities contained in water or the accumulated scale, this situation also happens properly.

提示: 如果污垢粘在電熱鍋內，請在電熱鍋內注入一些清洗液。讓電熱鍋浸泡約5分鐘。

Tip: If dirt is stick in the Cooker, fill in with hot water and mild cleaner. Let the Cooker soak for approximately 5 minutes.


儲存: 連同使用說明書，把電熱鍋存放於清涼及乾爽的地方。

STORAGE: Store the Cooker with these instructions in the original box in a cool and dry place.

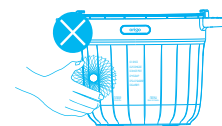

型號 Model Number	MC125
電源 Power Supply	220-240V~ 50/60Hz
額定功率 Rated Power	600瓦特/Watts
容量 Capacity	1.2公升(L) (約/Approx.)
淨重 Net Weight	950(gram) (約/Approx.)
產品尺寸 Product Dimension	245(W) x 196(H) x 179(D) mm (約/Approx.)

 源澤地圖 Origin Map

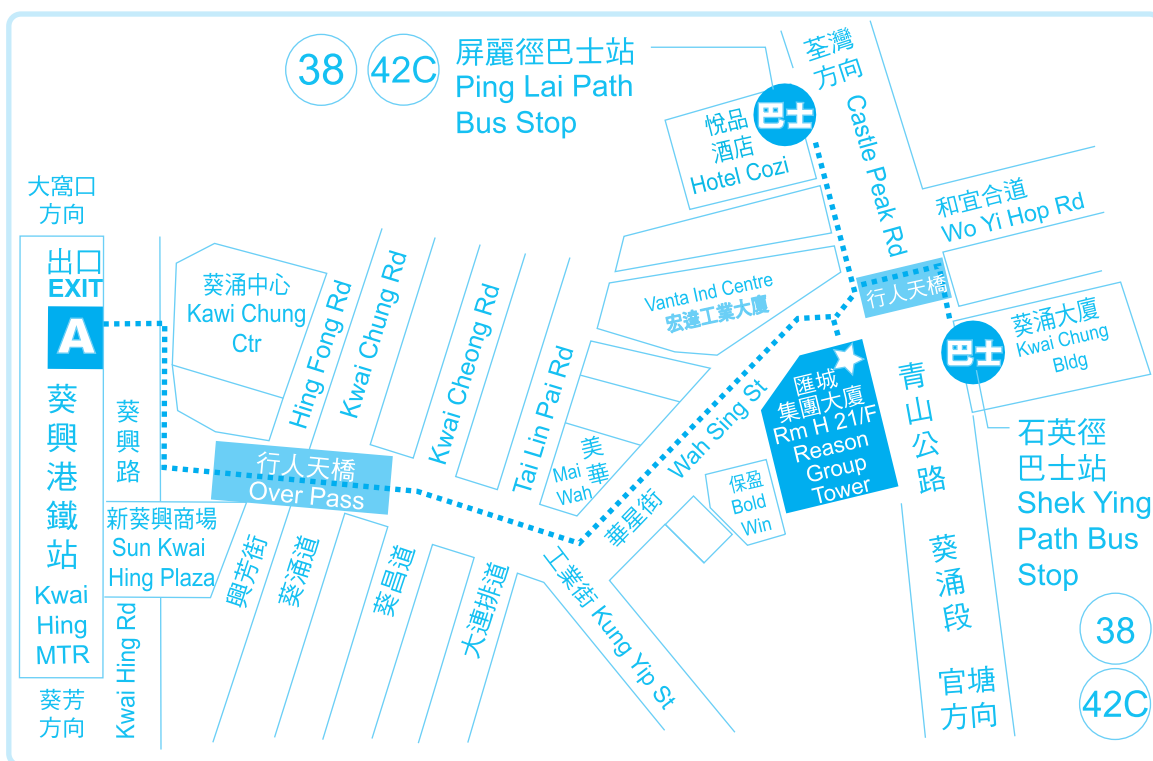

辦公時間
 10:30am - 12:30pm (星期一至五)
 02:30pm - 05:30pm (星期一至五)
 10:30am - 12:30pm (星期六)
 (星期日及公眾假期休息)

OFFICE HOURS
 10:30am - 12:30pm (Mon to Fri)
 02:30pm - 05:30pm (Mon to Fri)
 10:30am - 12:30pm (Saturday)
 (Closed on Sunday and Holiday)

保用

微壓多功能電熱鍋
Low Pressure Multi Cooker 

產品: 微壓多功能電熱鍋

型號: MC125

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月):

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。

2. 以下情況不被包括在保養範圍內：

- 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
- 未經本公司授權之自行處理、維修及/或改裝；
- 任何機殼、蒸架、鍋蓋、電源線及插頭，以及配件。

3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。

4. 更換後之任何零件或配件，均屬本公司所有。

5. 本保養服務只適用於香港特別行政區。

6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。

升級保用：(須於購買本產品後10天內完成以下步驟；升級保用不適用於商業用途)

A. 額外3個月保用: 於本公司網站完成登記，可享有共15個月免費保用；或

B. 額外6個月保用: 到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)

匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk 電話: 2156 8238

www.origin.hk



Find us on 



Instragarm



Warranty

Item : Low Pressure Multi Cooker

Model : MC125

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.

2. This warranty DOES NOT apply to:

- If the product was damaged by abuse, misuse, negligence or accidents;
- Repair, alteration/modification by unauthorized technician;
- The housing, steam rack, lid, power cord & plug or accessories.

3. The customer is requested to bring the product to and from our Service Centre.

4. Any parts or accessories, which had been replaced, shall be of our property.

5. This warranty is valid in H.K.S.A.R. only.

6. Original invoice should be presented in order to get free service.

Extended Warranty: (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to commercial use)

A. Extra 3 months warranty: complete Online Warranty Registration on our website to enjoy a total of 15 months of warranty; or

B. Extra 6 months warranty: follow " Origin Marketing Limited " on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),

403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

www.origin.hk



Find us on 



Instragarm

