 


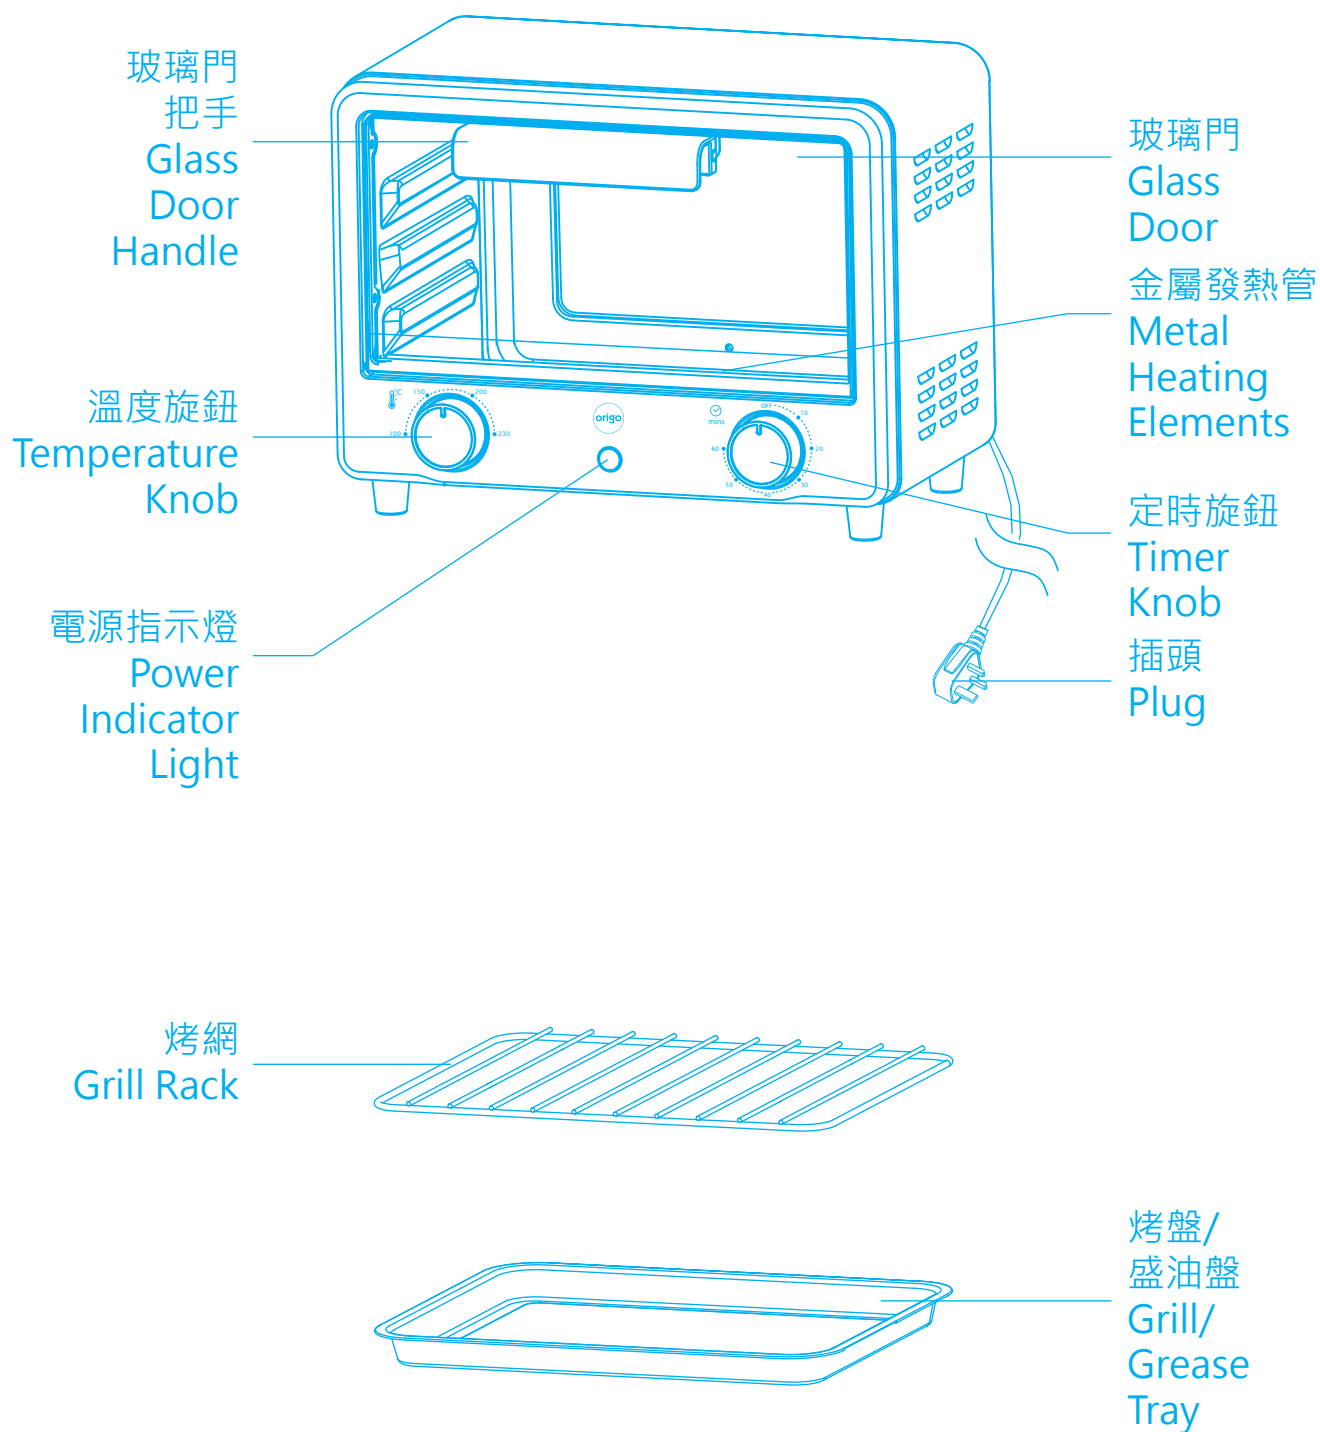


圖片只供參考，一切以實物為準
The picture is for reference only,
the actual product shall prevail.

使用前的準備 PREPARATION BEFORE USE:

- 取出所有包裝物料。
- Remove all packaging material.
- 用熱水加一些溫和清潔液及非研磨性海綿徹底清潔配件。
- Thoroughly clean the accessories with hot water, mild detergent and a non-abrasive sponge.
- 用濕布擦拭焗爐的內部和外部。
- Wipe the inside and outside of the Oven with a moist cloth.
- 將本機擺放於穩固的平面上。
- Place the Oven on a stable and flat surface.
- 連接電源前，請檢查定時旋鈕在OFF的位置。
- Before connecting to the power source, please check the timer knob is at OFF position.
- 將插頭插入獨立插座，將溫度旋鈕設定在230°C，定時旋鈕設定為10分鐘。空燒時可能會冒煙及氣味，此屬正常現象。
- Plug the power plug into an electrical outlet, set the temperature knob at 230°C, the timer knob at 10 minutes. When operating the appliance empty, smoke and smell may appear which is normal.
- 空燒後，必須待焗爐冷卻才可再次使用。
- After operating the Oven empty, please allow it to cool down before use.


注意 Notice:

 - 切勿將本機放在非耐熱表面上。
- Never place the Oven on non-heat-resistant surfaces.
- 切勿在本機中注油或任何其他液體。
- Never fill the Oven with oil or any other liquid.
- 烤盤中間凸起，此形狀並非不正常。此設計適合焗爐的運作。加熱後，烤盤可能會彎曲，屬正常現象。
- The grill tray curves up in the middle. This shape is not an abnormality. It has been designed this way to suit the Oven's functions. It is normal that the grill tray may bend when it is heated.
- 切勿在沒有配件的情況下使用本機。
- Never use the Oven without the accessories in it.
- 本機只可使用附設提供的配件進行煮食。
- Use only the supplied accessories with this Oven.
- 配件只適用於本機使用。
- The accessories are only suitable for this Oven.
- 使用焗爐時，必須控制烹調時間，時刻注意所需加熱食物，切勿遠離。過度加熱食物可能引起冒煙、著火。
- When using the Oven, cooking time must be controlled, and monitor the food at all times. Overheated food may lead to smoke or fire.

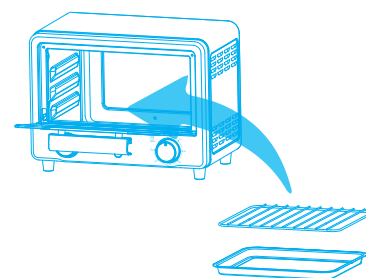

圖片只供參考，一切以實物為準
The picture is for reference only,
the actual product shall prevail.

 烹調/COOKING

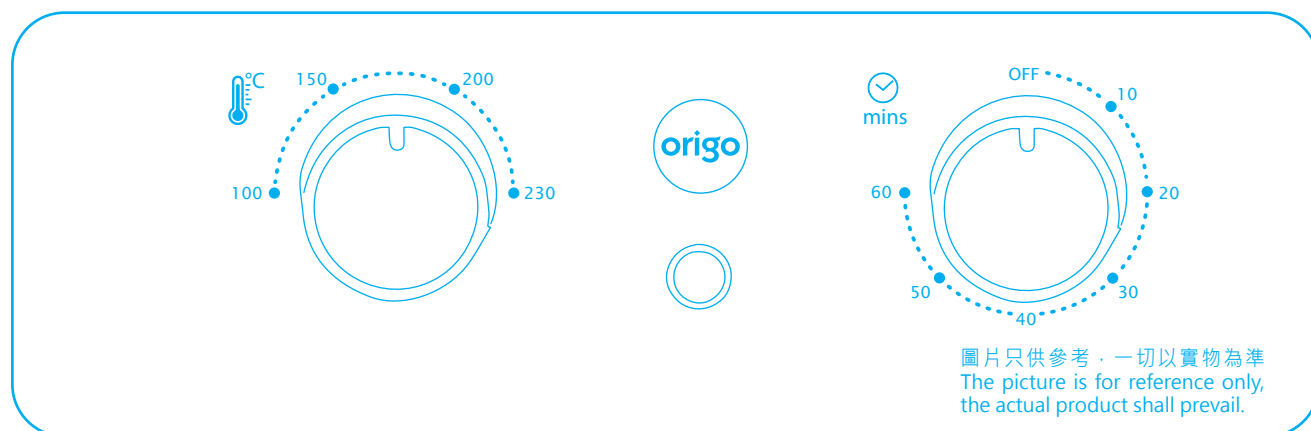

- 請確保定時旋鈕在OFF(關)的位置，並把電源插頭插入插座。
- Make sure the Timer knob is in the OFF position, then plug the Oven into the power outlet.
- 將食物平均地放置在烤網或烤盤上，再放入焗爐內。如烹調會釋出油脂或有醬汁的食物時，請先用錫紙包裹食物再放烤盤上。如使用烤網，請確保食物不會從烤網跌出。如食物比較細小，可放在烤盤上烤焗。請放好食物後才關上玻璃門。
- Put the food on the grill rack or bake tray evenly, then put into the Oven. If cooking food which is greasy or rich in sauce, please wrap the food with aluminum foil first and put on the grill tray. When using the grill rack, please make sure the food does not fall through the rack, or you may use grill tray for small food items. Close the glass door after settling the food.
- 旋轉溫度旋鈕至所需溫度: 100°C-230°C。
- Set the Temperature knob to the desired temperature setting from 100°C to 230°C.
- 旋轉定時旋鈕選擇合適的操作時間(包括5分鐘的預熱時間)，此時電源指示燈亮起。
- *注意: 發熱管會間斷地亮起以調整溫度，此乃正常現象。
- Set the Timer knob at required cooking time (including 5 minutes preheat time), the power indicator will light up.
- *Note: It is normal that the heating element will be off temporarily when the appliance reaches the preset temperature and on again when the temperature declines to adjust the temperature.
- 如食物在設定時間前已完成，可自行把定時旋鈕回轉至OFF。
- If cooking is completed before the end of the timer, please turn the Timer knob to position OFF manually.

- 注意: 如果烹調時間少於10分鐘，請將定時旋鈕設至10分鐘或以上，然後再轉回所需設定時間。
- Note: If the cooking time is less than 10 minutes, please set the Timer knob to 10 minutes or more and then turn it back to the required time.
- 烹調完成後，定時旋鈕會轉回OFF的位置，焗爐會發出鳴聲提示。
- *定時旋鈕轉回OFF的位置，仍有可能發出滴答聲，屬正常現象。
- When the cooking time is finished, the timer knob will return to the OFF position, a beep will sound.
- *You may hear the timer continue to tick even the timer knob is back to OFF position. This is not a malfunction.
- 完成後，打開玻璃門，將配件從焗爐中拉出並將其放在耐熱表面上，小心地將食物從配件中倒到碟上。
- After cooking is finished, open the glass door, pull the accessories out of the Oven and place it on a heat-resistant surface, carefully remove the food of the accessories onto plate.
- 使用後，請確保定時旋鈕處於OFF位置並拔除電源插頭。
- After use, please make sure that the Timer knob is at the OFF position and unplug the power plug.

注意/Notice：

- 連續烹調時，因焗爐內開始溫度較高，烹調時間會比初次使用時的時間短。請依照食物的實況進行調整。
- When cooking continuously, the initial temperature inside the Oven is higher, so the cooking time will be shorter than the first time you use it. Please adjust according to the actual condition of the food.
- 焗爐內加熱溫度過高時，內置溫控器會自動斷開，發熱管會處於不工作狀態，待冷卻後才能恢復工作，如果在中途將食物取出，會出現加熱不足的情況。
- If the Oven temperature gets too high, the built-in thermostat will automatically shut off, and the heating elements will be in a non-operating state. They will resume operation after cooling. If the food is removed midway, it may result in insufficient heating.
- 烘烤時間因食物的溫度、大小而不同，可適當調整。冷凍和大塊的食物需要烘烤時間更長。
- Baking time varies depending on the temperature and size of the food and may be adjusted accordingly. Frozen or large food items require longer baking times.
- 使用烤網時，將其放在層架上使用。
- When using the grill rack, place it on the rack supports.
- 烤形狀不規則的食物，如魚、雞肉等，為了讓其各部分均勻受熱，可將較厚實的部分放在烤網上。
- When grilling irregularly shaped foods, such as fish and chicken, to ensure even heating, place the thicker parts on the grill rack.

注意/CAUTION:

警告: 不使用焗爐時，經常保持拔除電源，及切勿將焗爐浸於水或其他液體中。在清潔本焗爐前，先將焗爐關掉及把電源線從插座拔出，然後讓焗爐完全冷卻。

*注意：打開玻璃門並卸下所有配件，使焗爐冷卻更快。

WARNING: ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE OVEN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET AND LET THE OVEN COOL DOWN COMPLETELY.

* Note: Open the Glass Door and remove all accessories to let the Oven cool down more quickly.

外殼: 清理時切勿將焗爐浸於水或其他液體中。使用濕潤軟布抹擦清潔，頑固污垢可用軟布沾上含肥皂的溫水抹擦。

Housing: Clean the outside and grille of the Oven with a soft cloth. To remove persistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

- 每次使用後都要清潔焗爐。
- Clean the Oven after each use.
- 切勿使用研磨性、腐蝕性或易燃性清潔劑(例如漂白劑或酒精)清潔焗爐的任何部位。
- Do NOT use abrasive, corrosive or flammable cleansers (such as bleach or alcohol) to clean any part of the Oven.
- 用濕布擦拭焗爐的外部。
- Wipe the outside of the Oven with a damp cloth.
- 用熱水，一些洗滌液和非研磨性海綿清潔所有配件。
- Clean all accessories with hot water, mild detergent and a non-abrasive sponge.
- 用熱水和非研磨性海綿清潔設備內部。
- Clean the inside of the appliance with hot water and a non-abrasive sponge.
- 用清潔刷清潔加熱元件，以清除食物殘留物。
- Clean the heating element with a soft brush to remove any food residues.
- 切勿將任何烹飪配件放入洗碗碟機清洗，以免損害塗層。
- Do not put any cooking accessories into the dishwasher to avoid damaging the coating.

提示: 如果污垢粘在盛油盤上，請在盛油盤中注入一些清洗液。讓盛油盤浸泡約10分鐘。


Tip: If dirt sticks to the grease tray, fill the grease tray with hot water and mild cleaner. Let the grease tray soak for approximately 10 minutes.

儲存: 連同使用說明書，把焗爐存放於清涼及乾爽的地方。

STORAGE: Store the Oven together with this instruction manual in the original box in a cool and dry place.

型號 Model Number	AF6010
電源 Power Supply	220-240V ~ 50/60Hz
額定功率 Rated Power	750瓦特/Watts
容量 Capacity	10公升(L) (約/Approx.)
淨重 Net Weight	2300克(gram) (約/Approx.)
產品尺寸 Product Dimension	33.5(W) x 23.6(H) x 23(D) cm (約/Approx.)

 源澤地圖 Origin Map

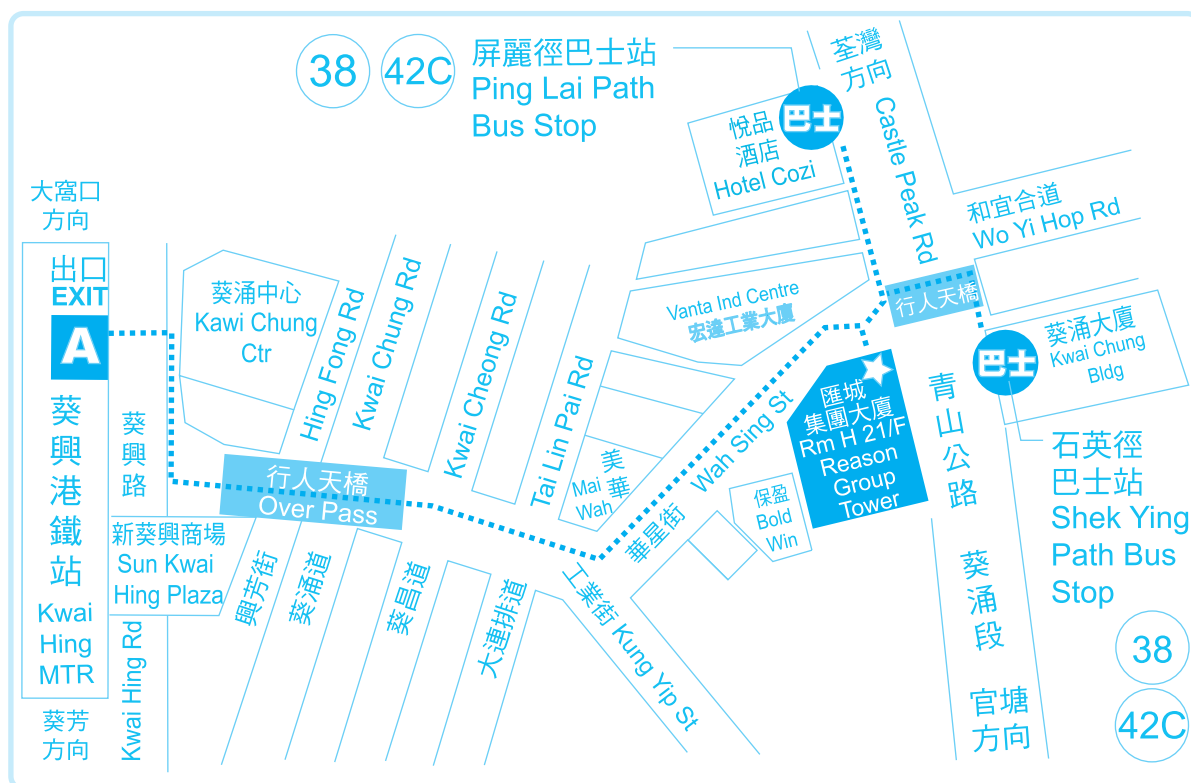

辦公時間

10:30am - 12:30pm (星期一至五)
02:30pm - 05:30pm (星期一至五)
10:30am - 12:30pm (星期六)
(星期日及公眾假期休息)

OFFICE HOURS

10:30am - 12:30pm (Mon to Fri)
02:30pm - 05:30pm (Mon to Fri)
10:30am - 12:30pm (Saturday)
(Closed on Sunday and Holiday)

保用

迷你焗爐
Mini Electric Oven



產品: 迷你焗爐

型號: AF6010

此產品由購買日期起計算，本公司將根據下列條款及細則，提供一年保養服務(商業用途則為3個月):

1. 於購買後一年內，經本公司技術員判斷為正常運作下損壞之產品，可獲免費維修和/或零件更換。
2. 以下情況不被包括在保養範圍內：
 - 若產品是因為濫用、錯誤使用、疏忽及/或意外而遭致損壞；
 - 未經本公司授權之自行處理、維修及/或改裝；
 - 任何機殼、頂蓋、烤網、烤盤/盛油盤、電源線及插頭，以及配件。
3. 需要檢查或維修時，請將產品送往本公司服務中心，並於修理妥當後自行取回。
4. 更換後之任何零件或配件，均屬本公司所有。
5. 本保養服務只適用於香港特別行政區。
6. 顧客必須同時出示零售商之正式發票，方可得到免費維修服務。(只需保留購買單據，無需登記。)

升級保用: (須於購買本產品後10天內完成以下步驟; 升級保用不適用於商業用途)

額外6個月保用: 到訪並“追蹤”本公司 (Origin Marketing Limited) 的Facebook，即可享有共18個月免費保用。(如果已追蹤，則自動享有此升級保用，毋須再進行上述步驟)。

服務中心

源澤市務有限公司

香港新界葵涌青山公路403號(近華星街12號)

匯城集團大廈21樓H室

www.origin.hk 電郵: info@origin.hk 電話: 2156 8238

www.origin.hk



Find us on



Instragram



Warranty

Item : Mini Electric Oven

Model : AF6010

This product is warranted for 1 year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
 - If the product was damaged by abuse, misuse, negligence or accidents;
 - Repair, alteration/modification by unauthorized technician;
 - The housing, top cover, grill rack, grill/grease tray, power cord & plug or accessories.
3. The customer is requested to bring the product to and from our Service Centre.
4. Any parts or accessories, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Original invoice should be presented in order to get free service. (Simply keep the purchase receipt; no registrations required.)

Extended Warranty: (Complete following procedure within 10 days from the date of purchase. Extended warranty does not apply to commercial use)

Extra 6 months warranty: follow "Origin Marketing Limited" on Facebook to enjoy a total of 18 months of warranty. (If you have already followed, no need to do it again.)

Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street),
403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

www.origin.hk Email: info@origin.hk Tel: 2156 8238

www.origin.hk



Find us on



Instragram

