


暖腳寶

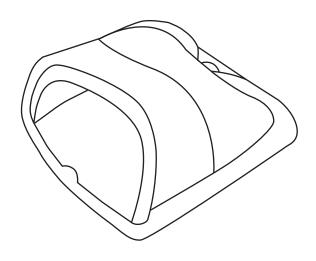

DF-668L 使用說明書

功能特點

- 暖腳寶內置高級金屬導熱板,形成遠紅外線加熱區, 溫暖足部。
- 刺激足部反射區穴位,改善血液循環,促進新陳代謝,舒緩壓力,消除疲勞及肌肉緊張。

使用須知

- 使用前必須閱讀此說明書。
- 本產品的設計不適合寵物使用。
- 此機衹供室內使用。
- 澼免水淋及受潮,以免捐害此機。
- 使用此機前,必須將鞋子脫掉。
- 使用此機前,請確定足部已乾透。
- 使用此機前,請確定絨毛套已乾透。
- 不要站立於暖腳板上。
- 本機不是為體質、感覺或智力有障礙人士或8歲以下小孩或缺乏經驗及知識者使用,除非他們曾經接受負責安全人士的監督或指示。
- 大人應指導小孩不可把玩電器。除非在負責安全人士的監督或指示,8歲以下小孩不可清潔及維護本機。
- 為避免漏電,請勿把電源線、插頭和整座暖腳寶放入水裏。
- 當不使用此機或清潔前,請先把插頭拔離插座。
- 拉開拉鏈把絨毛套取出,並放進洗衣機內清洗,嚴禁 將本機主體放入水或任何液體內。
- 嚴禁將本機擺放在固定電源插座下面。
- 當插頭、電源線或有其他部件損壞時,請即停止使用 此機,把此機送回本公司維修中心修理。

使用方法

- 將插頭插入適當電源插座。
- 將旋鈕開關調至"強(HIGH)"檔位置,預熱5分鐘。
- 低熱:將旋鈕開關調至"LOW"檔位置。 - 高熱:將旋鈕開關調至"HIGH"檔位置。 - 關機:將旋鈕開關調至"OFF"檔位置。

規格

機身尺寸:(長)35cmX(闊)36cmX(高)3.5cm

電壓 : 230V~, 50Hz

功率 : 60瓦

- ※ 使用本產品時,不可彎折電源線。
- ※本產品乃屬紡織品,可能引致使用者出現靜電感覺。可嘗試以 手掌觸碰石牆來釋放靜電。



´ 本產品含有可回收材料,不可把本產品作為未分類廢物。請聯繫 、當地就近指定回收點。

保用

本機可獲自領取日起1年免費保用(商業用享有3個月免費保用)。此保用只包含生產所導致的品質問題;並不包括 其附件、因誤用或不依說明書指示使用而導致的損壞。

***額外3個月保用:凡於購買產品後 0天內完成網上登記,即可免費延長保用期3個月,即15個月免費保用(商業用途除外)。

請即登入網站:www.origin.hk

注意:保用時,請帶同收據及先致電服務中心。

服務中心


原澤市務有限公司 香港新界葵涌青山公路403號 匯城集團大廈21樓H室 (近華星街12號)

雷話: 2156 8238

辦公時間


上午10:30 -下午12:30 (星期一至五) 下午02:30 -下午05:30 (星期一至五) 上午10:30 -下午12:30 (星期六) (星期日及公眾假期休息)

源澤地圖

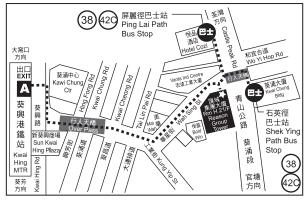



Foot Warmer

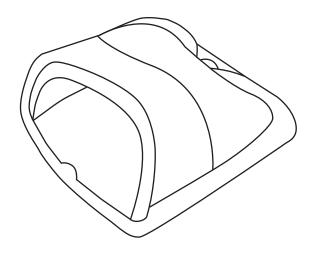

DF-668L Instruction Manual

MAIN FEATURES

- Built-in "Far Infrared Rays" heating element keep your foot warm and health.
- Improving blood circulation, strengthening the body metabolism, relieving pressure, fatigue and muscle tension.

SAFETY INSTRUCTIONS

- Read all instruction and warning carefully before use.
- This appliance is not designed as toy for use with animals.
- For indoor use only
- Do not use in wet, moist or humid locations.
- Must take off the shoes before use this appliance.
- Do not use if your feet are wet.
- Do not use if the fuzz cover is wet.
- Do not stand on the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Do not immerse cord, plug, or the foot warmer in water.
- Unplug from the outlet when not in use or before cleaning.
- Unzip the fuzz cover, to wash the cover in the washing machine. Do not immerse the main body in water to clean.
- Do not positing directly under a main socket.
- Do not use the appliance with a damaged cord or plug, or damaged on any manner. Return to services Centre for examination or repair.

OPERATION

- Insert the power plug into a suitable power outlet.
- For preheat: turn on-off switch to "HIGH" for 5 minutes.
- For low heat: turn on-off switch to "LOW"
- For high heat: turn on-off switch to "HIGH"
- To turn off: turn on-off switch to "OFF"

SPECIFICATIONS

Dimensions: (D)35cm x (W)36cm x (H)3.5cm

Voltage: 230V~, 50Hz Power: 60 watt



This product contains recyclable materials. Do not dispose this products as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

WARRANTY

This product is guaranteed for 1 year (commercial use for 3 months) from the date of receipt against manufacturing defect. The warranty does not cover the accessories, damage or defect caused by negligence or use not according to this instruction manual.

***Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website: www.origin.hk

Remark: For any repair service, please contact and bring with the invoice or receipt to the Service Centre.

SOLE AGENT

ORIGIN MARKETING LIMITED Unit H, 21/F., Reason Group Tower, (nearby 12 Wah Sing Street) 403 Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

OFFICE HOURS

10.30am - 12:30pm (Mon ~ Fri) 02:30pm - 05:30pm (Mon ~ Fri)

10.30am - 12:30pm (Sat)

(Closed on Sunday and Holiday)

Origin Map

