simply good living



GB **Electric Blanket** **LH-043S**
Instruction Manual
Please read before using!

D **Wärme Unterdecke** **LH-043S**
Gebrauchsanweisung
Vor Gebrauch des Gerätes bitte genau durchlesen!


English

Introduction

Thank you for choosing the electric blanket. The electric blanket is a product of high standard that will last for a very long time if properly used and handled. You use the blanket to warm your bed; it is not meant for medical purposes. There are four heat levels as 30ºC, 35ºC , 40ºC , 45ºC. Auto-Off count down setting is available from 10 to 1 hour. A sensor cable provides for double protection against overheating.
The product is tested according to European standard and therefore technically safe. Please read the safety instructions in your user manual.


Electric Blanket Components

Electric Blanket *(1)*
LCD screen *(2)*
Temperature display (2-1)
Temperature level display (2-2)
Auto-off time display (2-3)
Auto-off count down display (2-4)
Power On/Off switch (3)
Level setting of auto-off/Temperature (4,5)
Auto-off setting function (6)
Temperature setting function (7)
Connection clutch (8)

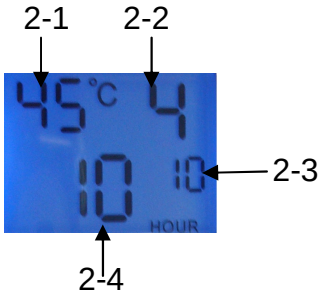





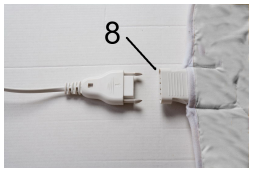

Use

The electric blanket is placed **on** the mattress and **under** the sheet. It is not designed for use with animals. Inappropriate use can damage the surface of the blanket and the fixing of the heating wires. If damaged, the blanket must not be used anymore. In this case please contact the seller's service hotline
After 30 minutes pre-heating the desired temperature is reached, and will be maintained for using unless the blanket gets switched off or the time of auto-off setting is up. The bed should be warm not hot. The heat is difficult to determine

when touching with your hands, other than the heat pillow. The hand is not as sensitive towards heat as other body parts. After usage, fold the blanket and put it back into the package.

Turn on heat

Put plug into power point, and turn on the power switch. The Electric Blanket is ready for use.

Temperature setting


Press the “Temperature Setting” button(7), and use “Level Setting” button(4, 5) to select temperature you like. The temperature has following four levels:

Level 1 30ºC
Level 2 35 ºC
Level 3 40 ºC
Level 4 45 ºC
(setting 1 is recommended for all night use)

Automatic switch off

Press the “Auto-Off” setting button(6), and use “Level Setting” button(4,5) to select the count down timer. The timers has 10 options from 1 to 10 hours for choosing. If the blanket should stay in use after Auto-Off time is up, you have to switch off the power then turn on the power again. Afterwards the blanket is ready for using.

CONTROLLER OPERATION:

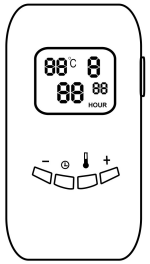

Function indicates:

How to start:

Be sure that the main power supplier for this under blanket is 220V - 240 V AC.
Turn on the switch which is located on the side rail of the controller.


The LCD screen shows the following with blue backlight for 5 second, then, the blue backlight is off and the LCD screen shows as drawing (b), which your under blanket will start to work for warming up and the time countdown starts to work.






HOW TO SET DESIRED TEMPERATURE:

Press the “temperature” key, the pre-set temperature value will be erased while the screen is lighted with blue backlight, press the “+” key to increase the value & level or press the key “-“ to decrease value & level in order to set your target warming temperature (from 30, 35, 40 or 45 C).
After reach your desired temperature level, press the “temperature” key to complete your setting temperature, the blue backlight will be off after 5 seconds, and your under blanket start to work and time countdown.




HOW TO SET DESIRED WARMING TIME :

Press the “TIME” key, the pre-set time countdown would be off with blue backlight, then, within next 5 seconds, press the “+” key to increase the value or press the key “-“ to decrease value in order to set your target warming time (from 1 to 10 hours).
After reach your desired warming time, press the “time” key to complete your setting time countdown, the blue backlight will be off after 5 seconds, and your under blanket start to work and time countdown.



All data will stay unchanged during the preset time and temperature frame except the temperature or time key were pressed to revise the setting. After the pre-set time countdown figure is completed, the screen will show ‘FF’ with blue backlight. Turn off switch or press either the key for temperature or time for another circle of warming up your under blanket.



The blue backlight on the screen will be automatically switched off, if no function instruction has been entered within 5 seconds.

- Wenn das Netzkabel beschädigt wird, muss es vom Hersteller oder von einer qualifizierten Person ersetzt werden, um eine Gefahr zu vermeiden
- Nicht im Bett einschlagen oder um die Matratze legen
- Die Wärme Unterdecke für den Fußbereich ist nicht für den Gebrauch in Krankenhäusern bestimmt

Lieferumfang

- Wärme Unterdecke
- Bedienungsanleitung

Technische Daten

Model:	LH-043S
Wechselstrom:	220-240V~ 50Hz
Gesamtleistung Gerät	ca. 200W
Maße:	150*130cm

Der Umwelt zuliebe bitten wir Sie, Verpackungsmaterial der Wiederverwertung (Sammelstelle) zuzuführen**.**

Entsorgung Altgeräte und Batterien



Ab dem Zeitpunkt der Umsetzung der EU Richtlinie 2002/96/EU in nationales Recht gilt folgendes:
Elektrische und elektronische Geräte dürfen nicht mit dem Hausmüll entsorgt werden. Der Verbraucher ist gesetzlich verpflichtet, elektrische und elektronische Geräte am Ende ihrer Lebensdauer an den dafür eingerichteten, öffentlichen Sammelstellen oder an die Verkaufsstelle zurückzugeben. Einzelheiten dazu regelt das jeweilige Landesrecht. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist auf diese Bestimmungen hin. Mit der Wiederverwertung, der stofflichen Verwertung oder anderer Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.
In Deutschland gelten oben genannte Entsorgungsregeln, laut Batterieverordnung, für Batterien und Akkus entsprechend.

WICHTIGE HINWEISE, Anleitung für den späteren Gebrauch aufbewahren





- Keine Nadeln oder andere spitze Gegenstände in die Wärme Unterdecke stechen
- Wärme Unterdecke–
  - nur zum Vorwärmen der Matratze verwenden
  - nicht im nassen oder feuchten Zustand benutzen
  - nur an die angegebene Netzspannung anschließen
  - nicht in geknicktem oder gefaltetem Zustand benutzen
  - Achtung ein automatisches Bett könnte beim elektrischen justieren die Decke knicken oder beschädigen
  - nicht unter sondern auf die Matratze legen
  - nicht als Betttuch verwenden
  - nicht für Wärme unempfindliche Personen, Kleinkinder, oder Tiere benutzen
  - nicht für Personen benutzen, die sich nicht selbständig bewegen können
  - nicht falten wenn Unterdecke noch warm ist
- Keine schweren oder kantigen Gegenstände auf die Wärmedecke legen, die Stromleitungen im inneren beschädigen oder knicken (z. Koffer o.ä.)
- Anschlusskabel und Schalter nicht mit Feuchtigkeit in Verbindung bringen.
- Der Schiebeschalter wird warm und darf deshalb nicht abgedeckt sein, so dass er sich überhitzt könnte.
- Personen, die Wärme nur bis zu einem bestimmten Grad empfinden, sollten die Wärme Unterdecke nur unter Aufsicht benutzen
- Falls die Wärme Unterdecke oder Teile davon beschädigt sind, darf diese nicht benutzt werden
- Nach Gebrauch Netzkabel aus der Steckdose ziehen
- Keine anderen Heizgeräte oder wärme erzeugenden Gegenstände auf das Unterdecke legen, wenn diese eingeschaltet ist.
- Benutzung durch Kinder nur unter Aufsicht

Maintenance

The electric blanket can be washed in the washing machine after removing the controller. Remove the main cable at the “Conntection Clutch” 8.








waschable cover | **do not bleach** | **do not tumble dry** | **do not iron** | **do not dry clean**

Symbol explanation



Read the manual carefully



Do not bend or fold the under blanket



Do not prick with needles into the blanket




Not suitable for children under 3 years!

Important Safety hints
RETAIN THE MANUAL FOR FURTHER USE




- Read the manual carefully
- Do not prick in with needles or other sharp object
- Electric blanket -
  - use only to pre-heat the mattress
  - do not use if wet or damp
  - only plug into adequate power point
  - do not use if bent or folded
  - could be damaged, while using an automatical lifting bed
  - do not place underneath the mattress always put on top
  - do not use as sheet
  - do not use on heat insensitive persons, children or pets
  - do not use on immobile persons
  - do not fold blanket if still warm
- do not place heavy or edged objects on the blanket, which may damage or bend the electrical wires inside the blanket (eg. Suit cases)
- Keep plug and connecting cable dry at all times.
- The switch will get warm and therefore should not be covered, because of danger of overheating.
- Persons who only experience heat to a certain level should only use the electric blanket under supervision
- If the electric blanket or parts of it are damaged the blanket should not be used
- After use pull plug out off mains plug
- Do not place other heaters or heat producing objects onto the switched on blanket.
- Always supervise if used for children
- Examine the appliance frequently. If there is any damage visible If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person, to avoid a hazard
- While using, do not fold the blanket or put it around the mattress
- The heating blanket is not meant for use in hospitals
- The underblanket must not be used by children without being instructed how to use the controller
- Blanket will not be damaged by the movement of the bed

„Temperature“ Knopf nochmals. Das blaue Licht leuchtet für ca. 5 Sekunden. Jetzt beginnt Ihre Wärmeunterdecke zu heizen und der Countdown startet.



Alle voreingestellten Daten bleiben gespeichert bis der „Temperature“ oder „Time“ Knopf gedrückt wird, um die Einstellung zu ändern. Nachdem das voreingestellte Programm beendet ist, wird auf dem Display „FF“ mit blauem Hintergrund angezeigt. Sie können das Produkt nun ausschalten oder wählen einen der oben beschriebenen Vorgänge, um das Unterbett noch mal zu benutzen.



Das blaue Licht geht nach fünf Sekunden automatisch aus, wenn keine neuen Einstellungen getroffen werden.

Pflege

Das Wärme Unterbett kann nicht in der Waschmaschine gewaschen werden. Flecken können jedoch mit einem feuchten Tuch entfernt werden.



Bezug waschbar	nicht bleichen	nicht im Trockner trocknen	nicht bugeln	nicht chemisch reinigen

Bildzeichen Erklärung



Hinweise aufmerksam durchlesen



Nicht gefaltet oder zusammen geschoben gebrauchen




keine Nadeln einstechen



Nicht fur Kinder unter 3 Jahren geeignet!

Bedienelement Benutzung:

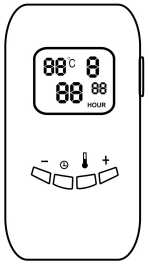


Funktionsweise:

Vor der Benutzung:

Gehen Sie sicher, dass der Hauptstromgeber eine Voltzahl zwischen 220 und 240V AC hat. Betätigen Sie den Schalter an der Seite des Gerätes.


Das LCD Display zeigt das unten abgebildete für ca. 5 Sekunden mit blauem Hintergrundlicht. Dann geht das blaue Licht aus und das Display sieht aus wie Zeichnung 2. Jetzt erwärmt sich die Unterdecke und der Countdown beginnt

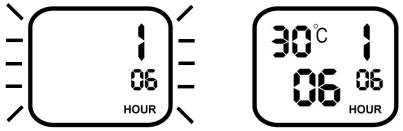

Gewünschte Temperatur einstellen:

Drücken Sie den Knopf "Temperature". Nun werden die voreingestellten Werte gelöscht, während das Display blau leuchtet. Um die Temperatur einzustellen drücken Sie die Knöpfe „+" um höher zu gehen oder „-„ um niedriger zu gehen. Sie können so eine Temperaturstufe wählen (30°, 35° , 40° oder 45℃).

Wenn Sie die gewünschten Einstellungen getroffen haben, dann drücken Sie den "Temperature" Knopf nochmals. Das blaue Licht geht nach ca. 5 Sekunden aus und das Unterbett beginnt zu wärmen und der Countdown startet.



Einstellung der Wärmezeit:

Drücken Sie den „TIME" Knopf. Die Voreinstellung wird gelöscht, während das Display ca. 5 Sekunden blau leuchtet. Nun können Sie mit den Knöpfen „+" und „-„ eine Wärmezeit zwischen 1 Stunde und 10 Stunden wählen. Wenn Sie die gewünschte Wärmezeit eingestellt haben, dann drücken Sie den

- If used with an automatic bed, make sure that the bed does not fold or bend the blanket
- If the mains cable is damaged it must be replaced by an authorized repair centre to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Delivery contents

- Electric blanket
- User manual

Technical data

Model:	LH-043S
Alternating current	220-240V~ 50Hz
Max. power	ca. 200W
Measurements	150*130cm

For the sake of the environment, we request that you take packaging material to be recycled (collection points).

Disposal of appliances and batteries

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies:
Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale . Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment.

Deutsch


Einleitung


Vielen Dank, dass Sie sich für die Wärme Unterdecke entschieden haben. Die Wärme Unterdecke ist ein hochwertiges Produkt, welches bei sachgemäßem Gebrauch eine hohe Lebensdauer aufweist. Sie wird zum Vorwärmen des Bettes verwendet und dient nicht zur medizinischen Behandlung. Die Wärme lässt sich in 3 Stufen schalten und nach 120 Minuten Betrieb schaltet die Wärme Unterdecke automatisch ab. Für doppelte Sicherheit gegen Überhitzung sorgt ein Sensor-Kabel.
Das Produkt ist nach den einschlägigen Europäischen Normen geprüft und ist somit technisch sicher. Die Sicherheitshinweise in dieser Bedienungsanleitung sind zu beachten

Komponenten der Wärme Unterdecke

Wärme Unterdecke (1)
LCD Display (2)
Temperatur Anzeige (2-1)
Auto-off/ Temperature level display (2-2)
Auto-off Zeit Anzeige (2-3)
Auto-off Countdown (2-4)
Power On/Off Schalter (3)
Eistellung für auto-off/Temperatur (4,5)
Auto-off Einstellung (6)
Temperatureinstellung (7)
Verbindungsstecker (8)



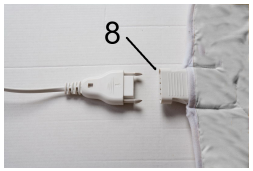

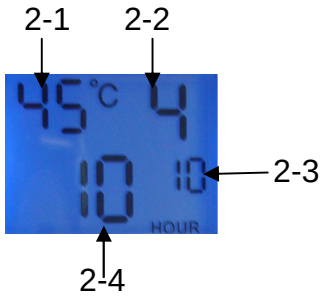



Anwendung

Die Wärme Unterdecke wird **auf** die Matratze **unter** das Betttuch gelegt. Sie ist keinesfalls für die Nutzung durch Tiere geeignet. Unsachgemäßer Gebrauch kann die Oberfläche der Heizdecke und die Fixierung der Heizdrähte beschädigen.
Die Heizdecke darf dann nicht mehr benutzt werden. Wenden Sie sich in diesem Fall bitte an unsere Service Hotline.
Nach 30 Minuten Vorwärmzeit ist die eingestellte Betriebstemperatur erreicht und wird, sofern nicht vorher ausgeschaltet wird, noch weitere 90 Minuten gehalten. Das Bett soll nur vorgewärmt nicht aufgeheizt werden. Die Wärme kann mit der Hand im Gegensatz zu Heizkissen, nur schwer beurteilt werden. Die menschliche Hand ist gegenüber Wärme viel unempfindlicher als andere Körperteile. Zur Aufbewahrung die Wärme Unterdecke falten und in die Verpackung zurücklegen.

Einstellen der Wärme

Den Netzstecker in die Steckdose stecken. Die Wärme Unterdecke ist elektrisch funktionsbereit. Der Schiebeschalter hat vier Einstellungen:

Stufe 0 30ºC
Stufe 1 35ºC,
Stufe 2 40ºC,
Stufe 3 45ºC
(für die Benutzung über Nacht wird die Einstellung 1 empfohlen)

Abschaltautomatik

120 Minuten nach Einschalten (Vorwärmzeit 30 Minuten + 90 Minuten Wärmen) schaltet sich die Wärme Unterdecke automatisch ab. Soll die Wärme Unterdecke erneut genutzt werden, muss der Schiebeschalter am Gerät auf „0“ abgeschaltet werden. Anschließend ist die Wärme Unterdecke erneut für 120 Minuten Anwendung bereit.