



LH-042S Electric Blanket



Instruction Manual
Please read before using!


Introduction

Thank you for choosing the electric blanket. The electric blanket is a product of high standard that will last for a very long time if properly used and handled. You use the blanket to warm your bed; it is not meant for medical purposes. There are four heat levels as 30℃, 35℃, 40℃, 45℃. Auto-Off count down setting is available from 10 to 1 hour. A sensor cable provides for double protection against overheating.

The product is tested according to European standard and therefore technically safe. Please read the safety instructions in your user manual.

Electric Blanket Components

- Electric Blanket (1)
- LCD screen (2)
- Temperature display (2-1)
- Temperature level display (2-2)
- Auto-off time display (2-3)
- Auto-off count down display (2-4)
- Power On/Off switch (3)
- Level setting of auto-off/Temperature (4,5)
- Auto-off setting function (6)
- Temperature setting function (7)
- Connection clutch (8)

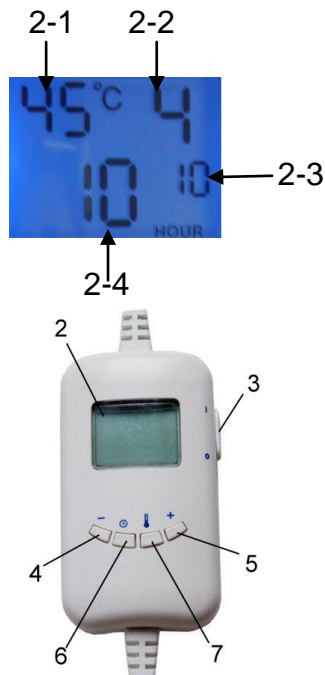

Use

The electric blanket is placed **on** the mattress and **under** the sheet. It is not designed for use with animals. Inappropriate use can damage the surface of the blanket and the fixing of the heating wires. If damaged, the blanket must not be used anymore. In this case please contact the seller's service hotline

After 30 minutes pre-heating the desired temperature is reached, and will be maintained for using unless the blanket gets switched off or the time of auto-off setting is up. The bed should be warm not hot. The heat is difficult to determine when touching with your hands, other than the heat pillow. The hand is not as sensitive towards heat as other body parts. After usage, fold the blanket and put it back into the package.

Turn on heat

Put plug into power point, and turn on the power switch. The Electric Blanket is ready for use.

Temperature setting

Press the "Temperature Setting" button(7), and use "Level Setting" button(4, 5) to select temperature you like. The temperature has following four levels:

Level 1 30°C

Level 2 35 °C

Level 3 40 °C


Level 4 45 °C

(setting 1 is recommended for all night use)

Automatic switch off

Press the "Auto-Off" setting button(6), and use "Level Setting" button(4,5) to select the count down timer. The timer has 10 options from 1 to 10 hours for choosing. If the blanket should stay in use after Auto-Off time is up, you have to switch off the power then turn on the power again. Afterwards the blanket is ready for using.

CONTROLLER OPERATION:

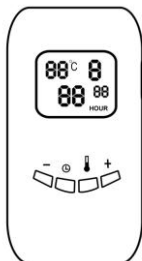

Function indicates:

How to start:

Be sure that the main power supplier for this under blanket is 220V - 240 V AC. Turn on the switch which is located on the side rail of the controller.

The LCD screen shows the following with blue backlight for 5 second, then, the blue backlight is off and the LCD screen shows as drawing (b), which your under blanket will start to work for warming up and the time countdown starts to work.



HOW TO SET DESIRED TEMPERATURE:

Press the "temperature" key, the pre-set temperature value will be erased while the screen is lighted with blue backlight, press the "+" key to increase the value & level or press the key "-" to decrease value & level in order to set your target warming temperature (from 30, 35, 40 or 45 C).


After reach your desired temperature level, press the "temperature" key to complete your setting temperature, the blue backlight will be off after 5 seconds, and your under blanket start to work and time countdown.



HOW TO SET DESIRED WARMING TIME :

Press the "TIME" key, the pre-set time countdown would be off with blue backlight, then, within next 5 seconds, press the "+" key to increase the value or press the key "-" to decrease value in order to set your target warming time (from 1 to 10 hours).

After reach your desired warming time, press the "time" key to complete your setting time countdown, the blue backlight will be off after 5 seconds, and your under blanket start to work and time countdown.

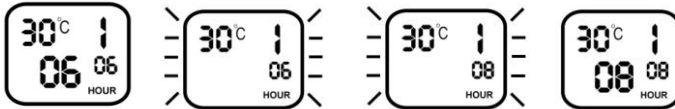

All data will stay unchanged during the preset time and temperature frame except the temperature or time key were pressed to revise the setting. After the pre-set time countdown figure is completed, the screen will show 'FF' with blue backlight. Turn off switch or press either the key for temperature or time for another circle of warming up your under blanket.



The blue backlight on the screen will be automatically switched off, if no function instruction has been entered within 5 seconds.

Maintenance

The electric blanket can be washed in the washing machine after removing the controller. Remove the main cable at the "Connnection Clutch" 8.



Symbol explanation



Read the manual carefully



Do not bend or fold the under blanket



Do not prick with needles into the blanket

Important Safety hints

RETAIN THE MANUAL FOR FURTHER USE



- Read the manual carefully
- Do not prick in with needles or other sharp object
- Electric blanket -
 - use only to pre-heat the mattress
 - do not use if wet or damp
 - only plug into adequate power point
 - do not use if bent or folded
 - could be damaged, while using an automatic lifting bed
 - do not place underneath the mattress always put on top
 - do not use as sheet
 - do not use on heat insensitive persons, children or pets
 - do not use on immobile persons
 - do not fold blanket if still warm
- do not place heavy or edged objects on the blanket, which may damage or bend the electrical wires inside the blanket (eg. Suit cases)
- Keep plug and connecting cable dry at all times.
- The switch will get warm and therefore should not be covered, because of danger of overheating.
- Persons who only experience heat to a certain level should only use the electric blanket under supervision
- If the electric blanket or parts of it are damaged the blanket should not be used
- After use pull plug out of mains plug
- Do not place other heaters or heat producing objects onto the switched on blanket.
- Always supervise if used for children
- Examine the appliance frequently. If there is any damage visible If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person, to avoid a hazard
- While using, do not fold the blanket or put it around the mattress
- The heating blanket is not meant for use in hospitals
- The underblanket must not be used by children without being instructed how to use the controller
- Blanket will not be damaged by the movement of the bed

- If used with an automatic bed, make sure that the bed does not fold or bend the blanket
- If the mains cable is damaged it must be replaced by an authorized repair centre to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Delivery contents

- Electric blanket
- User manual



Technical data

Model:	LH-042S
Alternating current	220-240V~ 50Hz
Max. power	ca. 200W
Measurements	150*130cm



For the sake of the environment, we request that you take packaging material to be recycled (collection points).

Disposal of appliances and batteries



After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies:
Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment.

